


E BRKT 23 Installation Procedure

Please read all of the **WARNINGS**, **CAUTIONS** and the **User's Manual** before attempting to install or service the UPS.

WARNING: This UPS contains potentially hazardous voltages. Risk of Electrical shock. The internal batteries energize hazardous live parts inside this UPS even when the AC input power is disconnected.

NOTE: Installing or Servicing of the UPS must be performed by **Qualified Service Personnel ONLY**. MINUTEMAN accepts no liabilities and is not limited to: injury to the Service Personnel, or damages to; the UPS, or the connected equipment caused by the incorrect installation or servicing of the UPS.

NOTE: These UPSs are shipped with the batteries disconnected. The batteries must be connected before putting these UPSs into service. See the UPS Quick Install or the User's Manual for connecting the batteries.

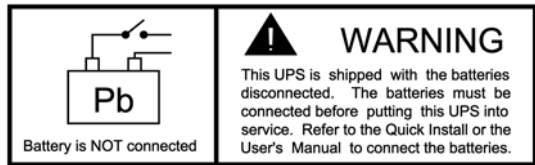

INSTALLATION

Be sure to read the installation placement and all the cautions before installing the UPS. Place the UPS in the final desired location and complete the rest of the installation procedure. These UPSs are shipped with the internal batteries disconnected. See the UPS Quick Install or the User's Manual for connecting the batteries. **USE CAUTION:** The UPS is heavy. Use the appropriate number of personnel when installing the UPS.

RACKMOUNT CONFIGURATION

The E BRKT 23 kit is for mounting the UPS into a 23" (59.2cm) standard rack. The screws for mounting the UPS to the rack are not included (screw size varies with rack size).

1. Locate the mounting bracket screw holes on the side panels of the UPS, at the front of the UPS. **NOTE:** The mounting brackets can also be mounted in the middle of the UPS.
2. Align the mounting bracket with the mounting bracket screw holes.
3. Attach the mounting bracket with the retaining screws.
4. Mount the UPS into the rack and secure with the retaining screws.
WARNING: Use two or more people when installing the UPS. Use **CAUTION**, the UPS is extremely heavy. Do not move the rack after the units have been installed. The rack may be unstable due to the weight distribution.
5. The Installation is complete. See the UPS Quick Install or the User's Manual for Connecting the Batteries, Connecting your Equipment and Connecting the UPS to an AC Source.

