

Envision Netcard

EV-NETCARD-1G EV-NETCARD-1GEXR

User's Manual





Copyright Information

Copyright © 2025, Para Systems, Inc. All rights reserved. Reproduction without permission is prohibited.

Technical Support and Contact Information

Para Systems, Inc. Tel: 972-446-7363

Toll-free: 800-238-7272

Web: <u>www.minutemanups.com</u>

E-mail: support@minutemanups.com

minutemanups.com | 800.238.7272

Table of Contents

CHAPTER 1: INTRODUCTION	4
1.1 Features	4
1.2 Applications	5
CHAPTER 2: EV-NETCARD CARD	5
2.1 EV-NETCARD LED Indicator	5
CHAPTER 3: SOFTWARE INSTALLATION	7
3.1 Envision Software Installation	7
CHAPTER 4: Envision Operations and Settings	7
4.1 EV-NETCARD Discovery	9
4.2 Login Procedure	11
4.3 Firmware Upgrade	14
4.4 EV-NETCARD Web Interface and Settings	16
4.4.1 Information	16
Information > UPS Status	16
Information > System Status	17
Information > Remote Control	20
Information > SMS Modem Status	21
Information > EV-PROBE-TH	21
4.4.2 Configuration	22
Configuration > UPS Configuration	22
Configuration > UPS On/Off Schedule	25
Configuration > Network	29
Configuration > Wireless LAN	36
Configuration > SNMP	38
Configuration > Email	43
Configuration > SMS	46
Configuration > Web/Telnet/FTP	49
Configuration > BACnet	55
Configuration > EV-PROBE-EH	56
Configuration > Modbus	57



Configuration > System	58
4.4.3 Log Information	61
Log Information > Event Log	61
Log Information > Data Log	62
4.4.4 Management	64
Management > Envision Web	64
Management > File Manager	65
Management > Serial Port Debug	66
Management > Help	67
Management > About	67
4.4.5 SNMPView Lite	69
SNMPView Lite > Status	69
SNMPView Lite > Configuration	70
SNMPView Lite > Event Log	71
SNMPView Lite > Data Log	72
NOTES:	74
Additional Notices	75



Chapter 1: INTRODUCTION

1.1 Features

The Envision EV-NETCARD-1G and EV-NETCARD-1GEXR, (EV-NETCARD), is a SNMP (Simple Network Management Protocol) card for monitoring and management of Minuteman UPS products. The EV-NETCARD provides remote control of UPS as well as monitoring of its current status. It can also support connections to a compatible modem for sending SMS notification. The EV-NETCARD is compatible with the EV-PROBE-TH and its sensors for monitoring ambient temperature, humidity and water status. The EV-NETCARD is simple to install. Follow the directions found in the Quick Install Guide, included with your purchase. It can also be download from the Minuteman website at: https://minutemanups.com/resource-library or use the QR Code below:



For the installation of multiple EV-NETCARD cards, Minuteman offers its Envision Utility software to configure IP addresses and set up configurations for central monitoring and multiple shutdowns on different operating system platforms. The Envision Utility can be downloaded from <u>https://minutemanups.com/resource-library</u>. Once installed, each card can be configured with advance options and settings via the Web browser interface.

Features:

- (1) Provides the SNMP MIB to monitor & control UPS using any standard Network Management System, (NMS)
- (2) Auto-sense 10M/100M/1000M Fast Ethernet or configure via Telnet, Web Browser or NMS
- (3) Support TCP/IP, UDP, SNMP, Telnet, SNTP, PPP, HTTP, HTTPS, SMTP, FTP, Modbus, BACnet Protocols
- (4) Support SSL/TLS, SSH Encryptions
- (5) Provides easy setup and upgrade tools
- (6) Send SNMP TRAP; E-mail and SMS for events notifications.
- (7) Auto email daily UPS history report
- (8) Perform graceful shutdown of networked devices with our Minuteman software
- **(9)** Add-on optional EV-PROBE-TH for temperature, humidity monitoring and alarms. Optional, water, smoke and contact sensors are also available
- (10) Can be used with an optional, third-party WiFi dongle add-on for wireless network access
- (11) SMS notification capability using optional, third-party GPRS modem add-on



1.2 Applications

EV-NETCARD allows UPS to be monitored over a network

When the EV-NETCARD is installed in a UPS, the IT/Network Manager can monitor each and every UPS condition via a networked computer using an industry-standard Web Browser or NMS.

Using a standard Web Browser, simply type the IP address of the EV-NETCARD card into the URL field to access the User Interface of the card. When integrated into an NMS, the EV-NETCARD will issue a trap alarm when an abnormal power abnormal condition occurs. Management Information Base, (MIB), and Object information Database, (OID), files used for integrating the EV-NETCARD card into a SNMP network can be found, and downloaded, from the Minuteman website at: https://minutemanups.com/resource-library

Envision Provides Shutdown Utilities

During an AC failure event, or when a UPS is in a Low-battery condition, the Envision software, when loaded on a networked computer that is connected to the EV-NETCARD card, can be configured to save and close all open files and applications before gracefully shutting down the operating system and powering off the computer. This feature can be critical in avoiding system corruption when a power anomaly occurs.

EV-NETCARD for Environmental Monitoring

The EV-NETCARD card, with its USB ports, can be connected to an optional environmental sensor/hub, the EV-PROBE-TH, to provide ambient temperature/humidity/smoke/fire alarms. These alarms can also be received on the Envision web page. When used with an NMS, and an abnormal condition happens, an alarm trap can be sent to the IT/Network Manager.

Chapter 2: EV-NETCARD CARD

2.1 EV-NETCARD LED Indicators

	Gr	Green			Yellow		
	On	Flashing		On	Flashing		
10010 - 1010	100	Sending/		10	Sending/		
	Mbps	Receiving		Mbps	Receiving		
└─ 1000M ─┘	wipps	Data		Mops	Data		

When Green and Yellow LED are both ON, the card is operating in 1000M mode







D5	D4	
Green	Blue	
-X-		
Power	Communication	
On Off	Flashing	
Normal No Power	Sending/Receiving Data	RoHS

NOTE : When the RED LED is flashing, the card is updating firmware. DO NOT remove power until the update is complete.



Chapter 3: Software Installation

3.1 Envision Software Installation

Free download

The Envision installation utility software is available, free of charge, from the minuteman.com Resource Library. Go to: <u>https://minutemanups.com/resource-library</u> and choose the **Network Accessories & Software** tab from the menu options. Select: **Envision Utility Software** and follow the download instructions

	ENG V 📜 💿 🔎 Q Order 📎	Deal Registration ≫
VER TECHNOLOGIES	CTS BATTERIES SUPPORT PROGRAMS HOW TO BUY COMPANY RESOURCE LIBRA	ARY
PSs REMOTE POWER MANAGERS SNMF	CARDS UPS & RPM MIBS SUPPORT	
Minuteman SNMP Accessory Software Utili NOTE: SentryPlus network communication	i ties requires opening of TCP and UDP ports 2710-2714	
Software Utilities for SNMP-NV6 Cards		
Software	Description	
EzSetting Discovery Utility (ZIP)	For SNMP-NV6 cards; Updated 8/18/14 (760 KB)	
SNMP MIB Files (ZIP)	For SNMP-NV6 cards; Updated 8/18/14 (13.7 KB)	
SNMP-NV6 Client (ZIP)	For SNMP-NV6 cards; Updated 6/11/13 (3.11 MB)	
SNMP-NV6 Manager (ZIP)	For SNMP-NV6 cards; Updated 8/18/14 (4.25 MB)	
Windows 32-bit Shutdown Agent (ZIP)	For SNMP-NV6 cards; Updated 1/22/16 (11 MB)	
Windows 64-bit Shutdown Agent (ZIP)	For SNMP-NV6 cards; Updated 1/22/16 (9 MB)	
Linux x86 Shutdown Agent (GZ TAR)	For SNMP-NV6 cards; Updated 1/22/16 (2.5 MB)	
Linux x64 Shutdown Agent (GZ TAR)	For SNMP-NV6 cards; Updated 1/22/16 (2.6 MB)	
EzSetting upgrade utility version 3.5i with Flash	For SNMP-NV6 cards: Indated 5/6/24 (3 MB)	

Chapter 4: ENVISION OPERATION AND SETTINGS

Introduction

Once the Envision utility is installed and running, it can be used to discover, access and provide firmware updates to all the EV-NETCARD cards on the connected network.



The Envision utility main page is divided into 2 sections:



1. Online EV-NETCARD List





4.1 Online EV-NETCARD Discovery

When the Envision utility software is opened, it automatically searches all the available online EV-NETCARD cards within the network, displaying the serial number, IP address, MAC address. Double click on the specific EV-NETCARD card with a valid IP address and it will open that card's webpage. (The list automatically refreshes every 2 minutes.)



Individual EV-NETCARD Info

Click on any specific EV-NETCARD card and the bottom section will show its hardware and firmware version as well as the MAC address. It also identifies the total number of EV-NETCARD cards found by Envision on the network and number of selected cards.





■ Launch Web User Interface

Select the specific EV-NETCARD card from the list and click on Launch Web User Interface to login to the EV-NETCARD card's webpage.



							ents] Internal diagnostic self-test passed.] Internal diagnostic self-test passed.	_
	Information	System Information	UPS Information	Network Sta	tus Connection	s Status	?	
UF	PS Status							
Sy	stem Status	System Information						
Re	mote Control	Hardware Version	EV-NET	CARD-1G	UPS Last Self Test			
SN	1S Modem Status	Firmware Version	3.12.BA	506.Para.4	UPS Next Self Tes	t		
EV	-PROBE-TH	Serial Number	HH5624	0900001				
*	Configuration	System Name	UPS Age	ent				
1	Log Information	System Contact	Adminis	strator				
	Management	Location	My Offi	ce				
\mathbf{U}	Management	System Time	2000/01	/01 00:51:22				
뫎	SNMPView Lite	Uptime	00:44:3	5				
		Warning will be initiated	10 minute(s) before Sch	eduled Shutdow	n Event			
		Send Email for Daily Repo	ort (No)					
								_

Network Settings

When connecting the EV-NETCARD card for the first time, ensure the IP-address and other network settings are entered correctly in order to login to the EV-NETCARD card's webpage via a web browser or HyperTerminal.

When choosing to obtain IP address by DHCP or BOOTP, the IP address and other network parameters will be assigned by the network

EV-NETCARD supports four network protocols - HTTP / HTTPS / TELNET / SSH for management and security preferences. If any changes are made to the port number, entering the full IP address with the new port number will be required in order to login.

- Example: HTTP port number is changed to 81
 The full address entered on the browser should be "http://192.168.1.100:81" (192.168.1.100 is the IP address of the EV-NETCARD)
- Example: The Telnet port number is changed to 24
 The full address entered on HyperTerminal should be "http:// 192.168.1.100 24" (192.168.1.100 is the IP address of the EV-NETCARD)

4.2 Envision Login Procedure

When using a password to access the EV-NETCARD is enabled, it is necessary to enter the correct password before making any configuration changes and firmware upgrades.









4.3 Firmware Upgrade

- To check for the latest available version of the EV-NETCARD firmware, go to <u>https://minutemanups.com/resource-library</u> and look under the **Network Accessories & Software** section. Verify the selected firmware is for the EV-NETCARD and is compatible with the hardware version of the card.
- Options for updating the firmware of the EV-NETCARD:
 - (1) Select the specific EV-NETCARD card from the Envision utility list.
 - (2) Press and hold the CTRL key then select multiple EV-NETCARD cards from the list. This option will allow the upgrading of multiple cards at the same time.
 - (3) Select the first EV-NETCARD card from the Envision utility list, then press and hold on SHIFT key before selecting the last of the EV-NETCARD cards from the list. This option will allow the upgrading of all the EV-NETCARD cards from the list.
- **WARNING:** Please make sure when selecting multiple EV-NETCARD cards, they are same model.
- ★ WARNING: If there are any failures during firmware upgrade process, restart the process from the beginning until the entire upgrade is successful.
- During the upgrade process, either the red and yellow LED will alternatingly flash, or red LED will only flash. DO NOT remove power or the network connection to the EV-NETCARD card until the firmware is successfully upgraded. When the upgrade is complete, the EV-NETCARD card will reboot automatically.



About

Shows the current Envision utility version





Refresh List

The list of EV-NETCARD cards found by the Envision utility will automatically refresh every two minutes. However, it is also possible to manually refresh the list by selecting the Refresh List icon.



4.4 EV-NETCARD Web Interface & Settings

4.4.1 Information

- UPS Status
 - **UPS Status** This page provides the current UPS connection status in graphic mode with Voltage, Frequency and other information.



		Envision <u>Latest Events</u> [00:07:19] Internal diagnostic self-test passed. [00:00:30] Internal diagnostic self-test passed.	
UP Sys Re SN	Information S Status stem Status mote Control IS Modem Status	UPS Status Alarm Status Voltage Rating: 120.0 Frequency Rating: 60.0	?
€V %	-PROBE-TH Configuration Log Information	→ WPS Manufa 5	
① 品	Management SNMPView Lite	UPS Firmwa 36-005496.0004 UPS Model: PARA1K	

• Alarm Status - The Alarm Status page offers a current status of the various active alarm monitoring.

	Envision		Latest Events [00:07:19] Internal diagnostic self-test passed. [00:00:30] Internal diagnostic self-test passed.
LINFormation	UPS Status Alarm Status		?
UPS Status			
System Status			
Remote Control	Alarm Temperature	Temperature OK	
SMS Modem Status	Alarm Input Bad	Input OK	
EV-PROBE-TH	Alarm Output Bad	Output OK	
Configuration	Alarm Overload	UPS not OverLoad	
Log Information	Alarm Bypass Bad	Bypass OK	
Management	Alarm Output Off	Output On	
	Alarm UPS Shutdown	UPS not Shutdown	
品 SNMPView Lite	Alarm Charger Failure	Charger OK	
•	Alarm System Off	System On	
•	Alarm Fan Failure	Fan OK	
	Alarm Fuse Failure	Fuse OK	
	Alarm General Fault	General System OK	
	Alarm Awaiting Power	No Awaiting Power	
	Alarm Shutdown Pending	No Shutdwon Pending	
	Alarm Shutdown Imminent	No Shutdown Imminent	
	Alarm ECO	ECO not Active	

System Status

• **System Information** - The System Information screen provides all the basic information for the EV-NETCARD such as hardware and firmware versions, Serial Number, UPS/card location, testing schedule, etc.



	Envision				Latest Events [00:07:19] Internal diagnostic self-test passed. [00:00:30] Internal diagnostic self-test passed.
	Information	System Information UPS Infor	mation Network Status Co	onnections	Status ?
UP Sys	S Status item Status	System Information			
Rei	mote Control	Hardware Version	EV-NETCARD-1G UPS Las	ist Self Test	
SM EV	S Modem Status	Firmware Version	3.12.BA506.Para.4 UPS Ne	ext Self Test	
*	Configuration	System Name	HH56240900001 UPS Agent		
1	Log Information	System Contact	Administrator		
	Management	Location	My Office		
		System Time	2000/01/01 00:53:53		
क्त	SNMPView Lite	Uptime	00:47:07		
		Warning will be initiated 10 minute(s)	pefore Scheduled Shutdown Event		
		Send Email for Daily Report (No)			

• **UPS Information** - The UPS Information page shows UPS and Battery Information. This data is obtained directly from the UPS or the settings from the UPS Configuration webpage

	WER TECHNOL	Envision		Latest Events [00:07:19] Internal diagnostic self-test passed. [00:00:30] Internal diagnostic self-test passed.
🛄 Inf	ormation	System Information UPS Information	Network Status Co	onnections Status
UPS Stat	tus			
System	Status	UPS Information		
Remote	Control	UPS Manufacturer	5	
SMS Mo	dem Status	UPS Firmware Version	36-005496.0004	
EV-PRO	BE-TH	UPS Model	PARA1K	
🛠 Со	nfiguration	Patton Information		
🗂 Log	g Information	Date of last battery replacement	01/17/2024	
(i) Ma	inagement	Rating Information		
몲 SN	MPView Lite	Nominal Input Voltage	120.0 V	
		Nominal Input Frequency	60.0 Hz	
	1	Nominal Output Voltage	120.0 V	
		Nominal Output Frequency	60.0 Hz	
		Nominal Volt-Amp Rating	1000 VA	
		Nominal Output Power	900 W	
		Nominal Low Battery Time	3 mins	
		Nominal Battery Life	0 days	
		Low Voltage Transfer Point	55 V	
		High Voltage Transfer Point	150 V	

• **Network Status** - The Network Status page provides the network address information of active EV-NETCARD card.

	POWER TECHNOLOGIANS Envision					
	Information	System Information	UPS Information	Network Stat	us Connections	Status
UP	S Status	Ethernet			General	
Sys Rei	mote Control	MAC Address	00:03:EA:14:7E:6D		Email Server	smtp gmail com
SM	IS Modem Status	Connection Type	1000Mbps Full-Duple	×	Time Server	pool.ntp.org
EV-	PROBE-TH				PPPoE IP	
*	Configuration				PPPoE IPv6	
1	Log Information					
$\widehat{1}$	Management	IPv4			IPv6	
		IP Address	192.168.168.8		IP Address	
ठठ	SNMPVIEW LITE	Subnet Mask	255.255.255.0		LinkLocal Address	fe80::203:eaff:fe14:7f6d/64
		Gateway	192.168.168.1		6to4 Address	
		Primary DNS Server	8.8.8.8		Gateway	
		Secondary DNS Server	8.8.4.4		Primary DNS Server	
					Secondary DNS Serve	r

• **Connection Status** - The Connection Status page a log connection events for the various communication protocols on the active EV-NETCARD card.

	Envision		Latest Events [00:07:19] Internal diagnostic self-test passed. [00:00:30] Internal diagnostic self-test passed.
Information	System Information UPS Information Network Status	Connections Status	?
UPS Status			
System Status	HTTP/HTTPS	TELNET/SSH	
Remote Control	[2000/01/01 01:00:02] ::ffff:192.168.168.180 login	There is no latest data.	
SMS Modem Status	[2000/01/01 00:59:51] ::ffff:192.168.168.180 logout		
EV-PROBE-TH	[2000/01/01 00:59:02] ::ffff:192.168.168.180 login		
St Conferentian	[2000/01/01 00:58:51] ::ffff:192.168.168.180 logout		
Configuration	[2000/01/01 00:58:02] ::ffff:192.168.168.180 login		
Log Information	[2000/01/01 00:57:52] ::ffff:192.168.168.180 logout		
	[2000/01/01 00:57:02] :::::::::::::::::::::::::::::::::::		
(i) Management	[2000/01/01/00.56.51]111.192.188.188.180 logout		
器 SNMPView Lite			
	FTP/FTPS	Modbus	
ł			
	SNMP		
			Î
	[1970/01/01 00:00:01] [192.168.168.8]:51361.6.1.4.1.935.1.1.1.5.2.1.0		•
	[1970/01/01 00:00:01] [192.168.168.8];51361 .6.1.2.1.1.4.0		
	[1970/01/01 00:00:01] [192.168.168.8]:51361 .6.1.4.1.935.1.1.1.3.2.1.0		
	[1970/01/01 00:00:01] [192.168.168.8]:51361 .6.1.2.1.1.4.0		
	[1970/01/01 00:00:01] [192.168.168.8]:51361 .6.1.4.1.935.1.1.1.3.2.1.0		
	[1970/01/01 00:00:01] [192.168.168.8]:51361 .6.1.4.1.935.1.1.1.5.2.1.0		*



• **Wireless Status** - The Wireless Status page will appear when a Wi-Fi dongle is attached to the EV-NETCARD card. It will provide the details of the network configuration information for the attached dongle.

Information System UPS Status Ethen System Status Ethen Remote Control MAC / SMS Modern Status EV-PROBE-TH SMS Configuration	ernet Address F0:09:0D:0D:91:2C	Connections Status Wireless Status
UPS Status System Status Remote Control MAC A SMS Modern Status EV-PROBE-TH Configuration IPv4	rnet Address F0:09:0D:0D:91:2C	General Primary DNS Server Secondary DNS Server
Remote Control MAC / SMS Modem Status EV-PROBE-TH X Configuration	Address F0:09:0D:0D:91:2C	Primary DNS Server Secondary DNS Server
SMS Modem Status EV-PROBE-TH Configuration		Secondary DNS Server
EV-PROBE-TH Configuration		
Configuration IPv4		IDv6
		IPVO
Log Information IP Add	Idress	IP Address
1 Management	net Mask	LinkLocal Address
SNMPView Lite	way	Gateway

Remote Control

The Remote Control page can be used to remotely perform a variety of tests to the UPS. Select the test to be performed and then click on the Apply icon to execute it.



	Envision
Information	Remote Control
UPS Status	
System Status	Miscellaneous
SMS Modem Status	Quick Battery Test
EV-PROBE-TH	O General Systems Test
Set Configuration	O Deep Battery Calibration
	O Cancel Test
Log Information	O Assign the Number of External Battery Pack
(i) Management	○ Economy Mode Disable ECO ✓
器 SNMPView Lite	O Immediately Turn on the Receptacle Bank
	O Turn on the Receptacle Bank 0 with delay 0 seconds
	O Cancel turn-on the Receptacle Bank 0
	O Immediately Turn off the Receptacle Bank O
l de la companya de l	O Turn off the Receptacle Bank o with delay o seconds
	O Cancel turn-off the Receptacle Bank 0
	O Turn off UPS when AC power Fails
	Put UPS in Sleep mode for 60 minute(s)
	O Wake up UPS
	O Reboot UPS
	O Audible Alarm Enabled
	○ Test until battery capacity below 10 %
	Apply Reset

SMS Modem Status

When the EV-NETCARD connected to an optional SMS modem, this status page will provide the details of the Modem and its connection status.

	Envision	Latest Events [00:07:19] Internal diagnostic self-test passed. [00:00:30] Internal diagnostic self-test passed.
Information	SMS Modem Status	0
UPS Status System Status	Modem Information	
Remote Control SMS Modem Status	Modem Manufacturer Modem Model	
EV-PROBE-TH	Modem Firmware Version	
Log Information	GSM Modem Current Status	
() Management	Central number of SMS service	
器 SNMPView Lite	Signal Strength SIM card PIN is correct or not	

■ EV-PROBE-TH

This page shows the environmental status of the location where the EV-PROBE-TH is installed. It will also include status information for any attached sensors that are connected EV-PROBE-TH and the EV-NETCARD.



		MAN LOGIES Prante Syntames, Late	Invis	ion		Latest Events [00:07:19] Internal diagnostic self-test passed. [00:00:30] Internal diagnostic self-test passed.
	Information	EV-PROBE-TH				3
Sys	tem Status	EV-PROBE-TH	Status			
Rer	note Control	Environmental	emperature	Unknown	Security1 Stat	us Unknown
SM	S Modem Status	Environmental H	lumidity	Unknown	Security2 Stat	us Unknown
EV-	PROBE-TH	Water Status		Unknown	Security3 Stat	us Unknown
*	Configuration	Gas Status		Unknown	Security4 Stat	us Unknown
Ť	Log Information	Smoke Status		Unknown	Security5 Stat	us Unknown
	Managament				Security6 Stat	us Unknown
U	Management				Security7 Stat	us Unknown
格	SNMPView Lite					
						Reset Alarm

4.4.2 Configuration

UPS Configuration

- UPS Properties (Please refer to your UPS specification) The default values listed on the Configuration>UPS page are reported from the connected UPS. WARNING: Any changes made to these values will affect the alarm reporting status of the Envision software.
 - <u>UPS Communication Type:</u> In order to establish the connection between EV-NETCARD and your Minuteman UPS model, confirm the UPS Communication Type is set to: Minuteman.

If the EV-NETCARD card does not recognize the attached UPS, contact Minuteman support at: support@minutemanups.com for assistance.

- <u>Date of Last Battery Replacement</u>: The default date should be the original date of manufacture for the UPS. When replacing batteries, enter the date the new batteries are installed, using the format: mm/dd/yyyy
- <u>Nominal Input Voltage (V)</u>: Displays the default alarm threshold for the nominal input utility voltage standard used by the UPS and its connected equipment. (120V, 208V, 220V, 230V or 240V). To change the alarm setting, enter a new value in the field and confirm by pressing "Apply"
- <u>Nominal Input Frequency (Hz)</u>: Displays the default alarm threshold for the nominal input utility frequency standard used by the UPS and its connected equipment. (50Hz or 60Hz). To change the alarm setting, enter a new value in the field and confirm by pressing "Apply"
- <u>Nominal Output Voltage (V)</u>: Displays the default alarm threshold for the nominal output voltage standard provided by the UPS, to its connected equipment. (120V, 208V, 220V, 230V or 240V). To change the alarm setting, enter a new value in the field and confirm by pressing "Apply"
- <u>Nominal Output Frequency (Hz)</u>: Displays the default alarm threshold for the nominal

output frequency standard provided by the UPS, to its connected equipment. (50Hz or 60Hz) To change the alarm setting, enter a new value in the field and confirm by pressing "Apply"

- <u>Nominal Volt-Amp Rating (VA)</u>: Displays the default alarm threshold for the maximum capacity of the connected UPS.
- To change the alarm setting, select the field, enter the new value then press "Apply" to confirm.
- <u>Nominal Output Power (W)</u>: Displays the default alarm threshold for the maximum connected load attached to the UPS. To change the alarm setting, enter a new value in the field and confirm by pressing "Apply"
- <u>Nominal Low Battery Time (mins)</u>: Displays the default estimated runtime of the UPS in battery mode during a blackout. To change the threshold for the alarm, enter a new value in the field and confirm by pressing "Apply"
- <u>Nominal Battery Life (days)</u>: Displays the threshold setting for age of batteries before an alarm is issued. To change the threshold for the alarm, enter a new value in the field and confirm by pressing "Apply"
- Low Voltage Transfer Point (V): Displays the lowest input utility voltage threshold alarm where the UPS will transfer to battery mode or return from battery mode. To change the threshold for the alarm, enter a new value in the field and confirm by pressing "Apply".
- <u>High Voltage Transfer Point (V)</u>: Displays the highest input utility voltage threshold alarm where the UPS will transfer to battery mode or return from battery mode. To change the threshold for the alarm, enter a new value in the field and confirm by pressing "Apply".
- <u>Shutdown Type</u>: This dropdown menu lists the default setting for the UPS when performing a shutdown action. The options are: Shutdown output only or shutdown the UPS.

	Envision		Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
L Information	UPS Properties Test Log Warning Three	shold Value	?
🛠 Configuration		I.	
UPS Configuration	UPS Communication Type	Minuteman	·
UPS On/Off Schedule	Date of Last Battery Replacement (MM/dd/yyyy)	01/17/2024] []
Wireless I AN	Nominal Input Voltage	120.0]v
SNMP	Nominal Input Frequency	60.0	Hz
+ Notification	Nominal Output Voltage	120.0)v []
Web/Telnet/FTP	Nominal Output Frequency	60.0	Hz
BACnet	Nominal Volt-Amp Rating	1000	VA
EV-PROBE-TH	Nominal Output Power	900]w []
Modbus	Nominal Low Battery Time	3	mins
system	Nominal Battery Life	0	days
Log Information	Low Voltage Transfer Point	55	v
(i) Management	High Voltage Transfer Point	150)v
品 SNMPView Lite	Shutdown Type	UPS Output Only 🗸	
			Apply Reset



• Test log

- <u>Test UPS Every</u>: Sets the options for the frequency of the testing of the UPS. (Week, 2 Weeks, Month, Quarter) are the available selections.
- <u>Test UPS on</u>: The options for this setting are based on the "Test UPS Every" selection.
- Week or 2 Weeks: Select the day for the weekly test
- Month: Select the day of the month (1-31)
- Quarter: Select the starting mos. then the date of the month.
- <u>Start Time of UPS Test (hh:mm)</u>: Enter the time of day to begin the test (using 24-hour clock)
- <u>UPS Test Type</u>: Select the type of test to perform. (Quick Battery, Deep Battery, General, Low Battery Warning)
- <u>UPS Data Log</u>: Enter the time, in minutes, for the recording interval of data from the UPS.

	Envision		Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
Information	UPS Properties Test Log Warning Three	shold Value	0
🛠 Con iguration	Test UPS		
UPS Configuration	Test UPS every	None 🗸	
Network	Start Time of UPS Test (HH:mm) (24-hour time		
Wireless LAN SNMP	UPS Test Type	Quick Battery Test	v
+ Notification	UPS Recorder		
BACnet	UPS Data Log	0	Minute(s) (-1 = Stop Recording)
EV-PROBE-TH Modbus			
System			Apply
Log Information			Apply Reset
() Management			
器 SNMPView Lite			

• Warning Threshold Value – This page is used to set the period of time after which the EV-NETCARD will send a disconnection warning message. This warning message will be sent after EV-NETCARD loses contact with the UPS for the time specified.

	Envision	Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
Information	UPS Properties Test Log Warning Three	eshold Value
VPS Configuration	Time out after loss of connection 30 seco	onds 🗸
Network		
Wireless LAN SNMP		Apply Reset
+ Notification		
Web/Telnet/FTP		
BACnet		
EV-PROBE-TH Modbus		
System		
Log Information		
(i) Management		
品 SNMPView Lite		

UPS On/Off Schedule

• **UPS Action** - This page is intended to set the parameters for UPS actions when a power or UPS event occurs. To complete the action, set the start/stop time parameters then choose the event, the UPS action and any delay, if desired. Press the "Add" icon to initiate. Multiple actions and events can be configured and implemented. To remove any action, check the right-hand box next to the action items, then select "[Delete]".

		Latest Events [03:33:13] Internal diagnostic self-test passed. [02:30:18] Warning] Smoke detected. [02:48:30] OptionS Alarm	MINUTE MAN Envision	Latest Events [03:33:13] Internal diagnostic self-test passed. [02:30:18] Warning Smoke detected. [02:48:30] OptionS Alarm
	UPS Action Remote Shutdown Weekly Schedule Date Schedule Wal During (0000 ①) - [23:59 ①) : If UPS Lead Overrun	RonLan Pontan Pontan	Version	
System U Log Information Management SNMPView Lite			System System System System S	shutdown Host8



	OMAN OLOGIE	En Envis	ion		vents 2] Te 6] No 6] Sys	st in progress Awaiting Power stem On	
Information	UPS Ac	tion Remote Shutdown V	Veekly Schedule	Date Schedule	Wake On Lan		?
Configuration							
PS Configuration PS On/Off Schedule	During	00:00 🕔 - 23:59 🕔 , if UP	S Load Overrun	~	occur, then turn o	ff UPS ∨after	1 minutes
etwork fireless LAN							neber
NMP	No.	During Time Interval(HH:mm)	Event		Device	Delay Time	[Delete]
otification		08:00 - 17:00	AC Power Failed		host1()	1	
eb/Telnet/FTP	2	08.00 - 17.00	AC Power Failed		host2()	1	
-PROBE-TH	3	08:00 - 14:00	UPS Battery Low		host3()	1	
odbus stem	4	08:00 - 17:00	UPS Battery Low		UPS	3	
Log Information							
Management							
SNMPView Lite							

• **Remote Shutdown** - The Remote Shutdown page is intended to program the EV-NETCARD card to issue a command for shutting down a network server, (or another network computer) without the use of installed shutdown software. Events need to first be added under "UPS Action" tab. Once set up, enter the IP address of the corresponding server identified on the "Remote Shutdown" tab to be shut down either by SSH or Telnet with a compatible shutdown command for the server system. (The Telnet Server must be enabled on the PC.)

For example: To shutdown Host 1 (Windows server) and Host 2 (Linux server) after 1 minute when AC power fails, start with the "UPS Action" tab. Select the "AC Power Failed" event then select "shutdown Host 1 " and press "Add". The action will be added to the event list. Repeat this process for Host 2.

	MAAN LOGIES Para Systems, Inc.	Envis	ion				Latest Events [03:33:13] Internal diagnostic self-test pass [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm	ied.
L Information	UPS Acti	on Remote Shutdo	own We	ekly Scheo	lule Date Sch	nedule Wake	On Lan	9
🛠 Con iguration								
UPS Configuration UPS On/Off Schedule		Domain Name / IP	Login Mode	Port	User Name	Password	Shutdown Commands	
Wireless LAN	Host1		SSH 🗸	22			halt	Test
SNMP	Host2		SSH 🗸	22			halt	Test
+ Notification	Host3		SSH 🗸	22			halt	Test
Web/Telnet/FTP	Host4		SSH 🗸	22			halt	Test
BACnet	Host5		SSH 🗸	22			halt	Test
Modbus	Host6		SSH 🗸	22			halt	Test
System	Host7		SSH 🗸	22			halt	Test
Log Information	Host8		SSH 🗸	22			halt	Test
(i) Management								
品 SNMPView Lite								
							Apply Res	set



With these two actions set, go to the "Remote Shutdown" tab and enter the domain IP addresses for Host 1 and Host 2. Select either Telnet or SSH for access, enter the user name/password for the server then enter the shutdown command for that operating system. For Windows, "shutdown /s" is the shutdown command. For Linux, "halt" is the command. For MAC OS, the shutdown command is "sudo shutdown".

Below is a list of shutdown commands for the most popular operating systems:

- Windows : shutdown/?
- Linux : shutdown -help
- MAC : sudo shutdown

• Weekly Schedule - This tab is responsible for setting a weekly schedule to turn on/off the UPS. In the example below, the UPS is shut down at 17:00 on Friday evening and restarted at 8:00 on Monday morning.

formation UPS Actio	n Rem	ote Shutdown	Weekly So	hedule	Date Schedule	Wake On Lan		
n iguration			UPS Off		UPS On	UPS On Perio	bd	Apply Reset
nfiguration		Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
/Off Schedule	00:00	sanasy		· accuaj				
¢	01:00							
AN	02:00							
	03:00							
n	04:00							
et/FTP	05:00							
	06:00							
	07:00							
<u></u>	08:00							
	09:00							
	10:00							
Information	11:00							
	12:00							
agement	13:00							
4D) / ieux l.ite	14:00							
MPVIEW LITE	15:00							
	16:00							
	17:00							
	18:00							
	19:00							
	20:00							
	21:00							
	22:00							
	23:00							

• **Date Schedule** - The Date Schedule menu option sets an individual date and time to power On/Off a UPS. If activated, the settings on this page will override the settings in Weekly Schedule. Select any date on the calendar and press the "add" icon. A window will appear with a time-of-day reference. Choose a time and select "UPS On" or "UPS Off" and press "OK". To add dates and times, repeat the process.



To initiate a warning message prior to the scheduled shutdown of the UPS, select an option from the dropdown menu at the bottom of the page. When set, the EV-NETCARD card will send the message at a pre-determined time before the shutdown action. When the programming is completed, press the "Apply" icon.

Information UPS Action Remote Shutdown Weekly Schedule Date Schedule Wake On Lan UPS On/Guration UPS On/Off Schedule UPS Off UPS Off UPS Off UPS On UPS On Period Vertices LAN Sun Mon Tue Wed Thu Fri Soft Notification Sun Mon Tue Wed Thu Fri Soft 26 27 28 29 30 31 Image: Schedule Action Vertress LAN Sun Mon Tue Wed Thu Fri Soft 26 27 28 29 30 31 Image: Schedule Action Vertress LAN Sum Mon Tue Wed Thu Fri Soft 26 27 28 29 30 31 Image: Schedule Action 9 10 11 12 13 14 15 Image: Schedule Action 16 17 18 19 20 21 22 22 27	POWER TECHNOL	OGIES ra Systems, Inc.	En	vis	sio	n				Lates [03:3] [02:5] [02:4]	t Events 3:13] Internal diagnostic 3:18] Warning! Smoke d 3:30] Option5 Alarm	self-test passe etected.
Configuration UPS Configuration UPS Configuration UPS Configuration UPS Configuration Vertraces LAN SIMP Notification Web/Telnet/FIP BCAcnet EVPROBE-TH Modbus System 1 0 Management 16 17 18 17 20 23 24 25 26 27 30 31 1 2 3 4 5 Mainagement	Information	UPS Action	Remo	ote Shut	down	Weekly	y Sched	ule Da	te Schedule	Wake On Lan		
UPS Configuration UPS Configuration UPS Configuration Wetwork Network SNMP Notification Web/Finet/FTP BACnet EVPROBE-TH Modbus System 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 1 20 31 1 20 21 22 23 24 25 26 27 28 29 30 31 20 21 22 23 24 25 </th <th>Con iguration</th> <th></th> <th></th> <th></th> <th></th> <th>UPS Off</th> <th></th> <th>UPS</th> <th>On</th> <th>UPS On Period</th> <th></th> <th></th>	Con iguration					UPS Off		UPS	On	UPS On Period		
UPS On/Off Schedule Network Network Network Network Network Sun Sun No. Sun No. Sun No. Sun No. Sun No. Sun No. No. Sun 26 27 28 29 30 31 16 17 18 19 10 11 12 33 24 25 26 27 28 29 10 11 12 30 31 11 22 33 4 25 26 27 28 29 30 31 </td <td>JPS Configuration</td> <td></td>	JPS Configuration											
Vervicess LAN NMP Vordess LAN NMP Vordification Veb/Telnet/FTP VACnet V-PROBE-TH Adobus ystem 1 Log Information Management 5 5 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 1 2 30 31 1 2 30 31 1 2 24 25 26 27 28 29 30 31 1 2 30 31 1 2 30 31 1 2 30 31 1 2 30 31 1 2 3 4 5 26 27 28 29 30 31 26 27 28 29 30 31 20 21 22 24 <td>JPS On/Off Schedule</td> <td><</td> <td></td> <td>200</td> <td>0 Janu</td> <td>ary</td> <td></td> <td>></td> <td></td> <td>Date Sch</td> <td>edule List</td> <td></td>	JPS On/Off Schedule	<		200	0 Janu	ary		>		Date Sch	edule List	
Sum Mon Tue Wed Thu Fri Soft SNMP South Andrew Soft Fri Soft Veb/Telnet/FTP SACnet 2 3 4 5 6 7 8 Veb/Telnet/FTP SACnet 2 3 4 5 6 7 8 Veb/Telnet/FTP SACnet 2 3 4 5 6 7 8 Veb/Telnet/FTP Soft 10 11 12 13 14 15 Log Information 1 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 1 2 3 4 5 Management 30 31 1 2 3 4 5 <	Network								No.	Events	Schedule	Action
NMP Jobification Veb/Teinet/FTP ACnet VPROBE-TH Joddus ystem 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 1 2 3 4 5 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 1 2 3 4 5 Interval between the UPS Off and the next UPS On must be less than 7 days, or the next UPS On might loss its effect.		Sun	Mon	Tue	Wed	Thu	Fri	Sat				
2 27 28 29 30 31 Image: constraint of the set of the se												
2 3 4 5 6 7 8 VPROBE-TH Aodbus 9 10 11 12 13 14 15 1 Log Information Management 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 1 2 3 4 5 Mode Apply Reset Add Apply Reset	Veb/Telnet/FTP	26	27	28	29	30	31	D				
V-PROBE-TH todbus vstem Log Information Management 16 17 18 19 20 21 22 30 31 1 2 3 4 5 30 31 1 2 3 4 5 Management 30 31 1 2 3 4 5 Management 30 31 1 2 3 4 5 Mode Apply Reset	ACnet											
100 bus ystem 1 Log Information Management 16 17 18 19 20 23 24 25 26 27 28 27 30 31 1 2 3 4 5 Mode Apply Reset	V-PROBE-TH	2	2		5	4	7					
ystem Log Information Management 16 17 18 19 20 21 22 23 24 25 26 27 28 27 30 31 1 2 3 4 5 Add Apply Reset	lodbus	2	3	4	5	•		•				
10 11 12 13 14 15 Management 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 1 2 3 4 5 Marking will be initiated (10 minutes x) before Scheduled Shutdown Event	ystem											
Management SNMPView Lite 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 1 2 3 4 5 Add Apply Reset The interval between the UPS Off and the next UPS On must be less than 7 days, or the next UPS On might lose its effect.	Log Information	9	10	11	12	13	14	15				
SNMPView Lite 23 24 25 26 27 28 29 30 31 1 2 3 4 5 Add Apply Reset) Management	16	17	18	19	20	21	22				
23 24 25 26 27 28 29 30 31 1 2 3 4 5 Add Apply Reset	5 SNMPView Lite											
30 31 1 2 3 4 5 Add Apply Reset The interval between the UPS Off and the next UPS On must be less than 7 days, or the next UPS On might lose its effect.		23	24	25	26	27	28	29				
Add Apply Reset The interval between the UPS Off and the next UPS On must be less than 7 days, or the next UPS On might lose its effect. Warning will be initiated 10 minutes will before Scheduled Shutdown Event		30	31	1	2	3	4	5				
The interval between the UPS Off and the next UPS On must be less than 7 days, or the next UPS On might lose its effect.											Add Apply	Reset
The interval between the UPS Off and the next UPS On must be less than 7 days, or the next UPS On might lose its effect.												
Warning will be initiated [10 minute velocity before Scheduled Shutdown Event			Th	e interval h	between the	• UPS Off #	ind the pe	xt UPS On r	ust be less than	7 days or the next LIPS	On might lose its effect	
Warning will be initiated 10 minutes whefere Scheduled Shutdown Event		L										
Warning will be initiated to initiates + before seried area shatdown Event					Warni	ing will be	e initiateo	d 10 minu	tes 🗸 before S	cheduled Shutdown	Event	

• Wake On Lan - This menu option programs the signal from the EV-NETCARD card to wake a networked computer when AC utility power is recovered, or, when the UPS battery capacity reaches its pre-configured percentage. (Make sure the computer supports a Wake On Lan function and is enabled in the BIOS.) Enter the IP address of the target computer and the parameters to program the Wake function. For multiple computes, repeat the process for each computer. When complete, press the "Apply" icon.

					POWER TECHNOLOGIES
MVV.	Envis	ion		Latest Events [03:33:13] internal diagnostic self-tes [02:50:18] Warning! Smoke detected.	t passed.
UPS Actic	on Remote Shutdo	own Weekly Schedule	Date Schedule Wake O	[02:48:30] Option5 Alarm	θ
General S	Settings				
	Host1	IP:	MAC:	Test	
	Host2	IP:	MAC:	Test	
	Host3	IP:	MAC:	Test	
	Host4	IP:	MAC:	Test	
	Host5	IP:	MAC:	Test	
	HOSI6		MAC:	Test	
	Host8	IF.	MAC.	Test	
🗌 Wake u 🗌 Wait	ip remote host after UP until battery capacity re	PS output restore eaches to 10 %.			
				Apply	Reset
				Latart Guarda	
	Envis	sion		[03:33:13] Internal diagnostic self-test [02:50:18] Warning! Smoke detected, [02:48:30] Option5 Alarm	passed.
UPS Act	ion Remote Shut	down Weekly Schedu	le Date Schedule Wak	e On Lan	0
General	Settings				
	Host1	IP:	MAC:	Test	
	Host2	IP:	MAC:	Test	
	Host3	IP:	MAC:	Test	

	POWER TECHNO	LOGIES Para Systems, Inc.	Invisio	[02:50:15] Internal diagno [02:50:18] Warning! Smok [02:48:30] Option5 Alarm	[02:50:13] Merning! Smoke detected. [02:48:30] Option5 Alarm		
	Information	UPS Action	Remote Shutdown	Weekly Schedule	Date Schedule	Vake On Lan	9
*	Con iguration	General Setti	ngs				
UP	5 Configuration	General Sett	Host1 IP:		MA	[Tost
UP	5 On/Off Schedule		Hosta ID:			c.	Test
Ne	work		HUSIZ IP.		IVIA	-	Test
Wir	eless LAN		Host3 IP:		MAG		Test
SN	MP		Host4 IP:		MA	c:	Test
+ No	ification		Host5 IP:		MA	C:	Test
We	b/Telnet/FTP		Host6 IP:		MA	C:	Test
BA	Inet		Host7 IP:		MA	c:	Test
EV-	PROBE-TH		Host8 IP:		MA	C:	Test
MO	dbus	Miscellaneou	IC.				
	Log Information	Wake up re	mote host after power re	store			
(\mathbf{i})	Management	🗌 Wait unti	battery capactiy reaches	to 10 %.			
뫎	SNMPView Lite	Wake up remote host after UPS output restore					
	Wait until battery capacity reaches to 10 %.						
							Apply Reset

Network

MINIIT

Information
 Information
 VPS Configuration
 UPS Configuration
 UPS On/Off Schedule
 Network
 Wireless LAN
 SNMP
 Notification
 Web/Telnet/FTP
 BACnet
 EV-PROBE-TH
 Modbus

Log InformationManagement器 SNMPView Lite

This page is responsible for the programming the network settings for the EV-NETCARD card.

• **IPv4** - The IP address and DNS Server IP can be programmed either manually or through DHCP or BOOTp using the dropdown menus. If the IP address and DNS have previously been configured on the information will automatically show here.



Latest Events Convert TECH NO LOGALLES Envision				
Information	IPv4 IPv6 Ethernet Dynamic DNS I	PPPoE	0	
X Configuration	IP Address			
UPS Configuration	IP Address	192.168.168.8		
UPS On/Off Schedule	Subnet Mask	255.255.255.0		
Wireless LAN	Gateway	192.168.168.1		
SNMP	Obtain an IP address *	Using DHCP 🗸		
+ Notification				
Web/Telnet/FTP	DNS Server IP			
BACnet	Primary DNS Server IP	8.8.8.8		
EV-PROBE-TH	Secondary DNS Server IP	8.8.4.4		
Modbus	Obtain DNS Server IP	Automatically 🛩		
System	t : Sustem wi	I report when these items have by	and Applied	
Log Information	System wi	in reboot when these items have be	een Apprieu.	
(i) Management			Apply Reset	
品 SNMPView Lite				

• IPv6

- <u>IP Address</u>: All EV-NETCARD cards support IPv6 addressing. Under the "IPv6" tab, the address can be obtained from the dropdown list of options: Automatic, Stateless, DHCPV6, DHCPV6, or Manual. If Manual is selected all the IP and gateway information must be entered into the respective fields. For all forms of address selection, the remaining fields must be completed: Router Discovery Autoresend, Maximum Number of IPv6 Prefix, and Multicast Address.
- <u>DNS Server IP</u>: Enter the addresses for the primary and/or secondary DNS Servers.
 NOTE: Once the addressing is completed, press the "Apply" icon and the EV-NETCARD card will reboot with the new configuration.

	Envision		Latest Events [03:33:13] Internal diagnostic self-test passed. [02:55:19] Warning! Smoke detected. [02:48:30] Option5 Alarm
LINFormation	IPv4 IPv6 Ethernet Dynamic DN	S PPPoE	0
🛠 Con iguration	IP Address		
UPS Configuration			
UPS On/Off Schedule	IPv6 Prefix	64	
Wireless LAN	Gateway		
SNMP	Obtain an address *	Automatic 🗸	
+ Notification	Router Discovery Autoresend	Yes 🕶	
Web/Telnet/FTP	Maximum Number of IPv6 Prefix	8 🗸	
BACnet	Multicast Address	[FF1E::1]	: 5000
EV-PROBE-TH			
Modbus	DNS Server IP		
System	Primary DNS Server		
Log Information	Secondary DNS Server		
(i) Management	* : Syste	em will reboot when these items have b	been Applied.
器 SNMPView Lite			
			Apply Reset



• Ethernet

- <u>Connection Type</u>: This menu option sets the communication speed between EV-NETCARD and connected network.
- NOTE: Once the network speed is selected, press the "Apply" icon and the EV-NETCARD card will reboot with the new configuration.
- <u>Stop UPS communication when Ethernet disconnected</u>: Use this menu option to continue or stop UPS communications when EV-NETCARD card disconnects from Ethernet.

		Envision Logits Envision	f-test passed. :ted.
	Information	IPv4 IPv6 Ethernet Dynamic DNS PPPoE	?
*	Con iguration		
UP	S Configuration	Connection Type Auto Sense 🗸	
UP Ne	S On/Off Schedule	Stop UPS communication when Ethernet	
Wi	reless LAN	disconnected	
SN	MP		alv Recet
+ Notification			Nesec
Web/Telnet/FTP			
EV-	PROBE-TH		
Mc	odbus		
Sys	stem		
1	Log Information		
$(\mathbf{\hat{i}})$	Management		
格	SNMPView Lite		

- **Dynamic DNS** Dynamic DNS is an open-source service which allows a user to attach a dynamic IP address to a static host name. To use this function, ensure an account and password has been registered with the DNS service provider.
 - <u>Service Provider</u>: Dynamic DNS providers can be selected from this dropdown list.
 - <u>Domain Name</u>: Enter the Domain Name created from the above selected DDNS provider.
 - <u>Login Name</u>: Enter the Login/Account Name created with the selected DDNS provider.
 - <u>Login Password</u>: Enter the Password assigned to registered DDNS Account.
 - <u>Use external STUN server to get Public IP to register</u>: Choose **Yes** to ensure the EV-NETCARD card uses the WAN/Public IP to update the selected DDNS server.





If using iCV99.net as the service provider, follow instructions shown below:

1. Ensure the EV-NETCARD card is able to connect to the internet. Select a service provide from the dropdown list. If the Domain Name, Login Name and serial number of the card do not automatically populate, enter the information manually. Enter the EV-NETCARD password, which is printed on the card label, then press the "Apply" icon.





2. If using a router, login to the router and insert the IP and port number under the Virtual Server for port forwarding. For specific details on programming, refer to router's user manual

Router Configuration		n				
VIRTUAL SERVER	VIR	VIRTUAL SERVER				
PORT FORWARDING	DING NULES The Virtual Server option allows you to define a single public port on your router for redirection to an internal LAN IP Address and Private LAN port if required. This feature is useful for hosting online services such as FTP or Web Servers. ER Save Settings					
APPLICATION RULES						
QOS ENGINE						
NETWORK FILTER						
ACCESS CONTROL	24	VIRTUAL SE	BVERS LIST			E
WEBSITE FILTER	21	VINTOAL SE				01
INBOUND FILTER				Port	Traffic Type	
FIREWALL SETTINGS	~	Name EV-NETCARD-1G	<< Application Name V	Public Port 80	Protocol TCP V	Schedule Always
ROUTING		IP Address	_	Private Port		Inbound Filter
ADVANCED WIRELESS		192.168.66.101	< Computer Name	80	6	Allow All

- 3. Wait at least 20 minutes and the EV-NETCARD card should be logged in under the DDNS Domain name.
- 4. To change the domain name or password, go to the service provider website.







Dynamic Domain Name Server	(DDNS)	Logout
Step1 : Registration	Step2 : Set Domain Name and Click Done	
Product Serial number Register IP Default Domain Name	HH54241013250.iCV99.net 127.0.0.1 HH54241013250	
Set New Domain Name	bty505 .iCV99.net	New Domain Name
Domain Password Re-enter Password	•••••	Enter new password
	Required, if a new domain name is assigned. Must be 4 to 10 characters (0-9, a-z, A-Z only).	
E-mail address	ttc@gmail.com × Required field. Used to retrieve Lost/Forget password.	Enter e-mail
	Press Done	Done

• **PPPoE** - Use this feature when connecting the EV-NETCARD to the Internet directly using a xDSL modem by PPPoE. Enter the Login name and password to enable the connection. Once set-up, the EV-NETCARD will connect directly to the Internet. Any abnormal connection issues could cause a failure requiring the card to re-dial in order to re-connect.




	Envision	Latest Events [08:08:21] Output Off [08:07:18] Output Off [08:07:18] UPS has switched to battery power.
Information Configuration UPS Configuration	IPv4 IPv6 Ethernet Dynamic DNS PPPoE When Connection should be made Connect always	Select: Connect Always
VPS On/Off Schedule Network Wireless LAN SNMP	Login Name	Enter Login name
+ Notification Web/Telnet/FTP BACnet FV-PROBF-TH	Enter passwo	Ord Apply Reset
Modbus System Cog Information		
Management SNMPView Lite		

Wireless LAN

The EV-NETCARD is compatible with most popular USB Wi-Fi dongles. Before installing or configuring a Wi-Fi dongle, the EV-NETCARD must be connected, and accessible, on the network using a wired Ethernet connection. Open the Envision software utility to discover and login to the EV-NETCARD card on the network or use a web browser to type in and go directly to the specific, wired IP-address of the card to be used with the Wi-Fi dongle.

- (1) Attach the UPS to the network using the instructions in the **Configuration > Network** menu
- (2) Using a web browser or the Envision software utility, go the address IP-address associated with the EV-NETCARD card
- (3) Install the Wi-Fi dongle into an open USB port on the card.
- (4) Select **Configuration > Wireless LAN** from the menu in the web browser interface
- (5) Under the **AP Setting** tab, select the SSID of the preferred Wi-Fi network to join. If required, enter the password of that wireless network.
- (6) Once the EV-NETCARD card is connected to the desired wireless network, return to the **Configuration > Network** page and use DHCP, (default), or manually configure the IP-address to use for the card on the wireless network.
- (7) The wired Ethernet connection can now be removed if preferred.
- (8) The Envision software utility is now able to find the card or the address can be typed in using a web browser.
- **NOTE:** The computer running the Envision software utility must be attached to the same Wireless LAN as the USB dongle.
- **NOTE:** If installing at a remote location, programming the IP-address will require the following: a separate laptop or desktop computer; a cross-over Ethernet cable; or two standard Ethernet cables with one switch.



If using the switch with the Ethernet cables, one cable must connect the computer/laptop to the switch with the second cable connecting the switch and the E-NETARD card. The wireless configuration must be programmed at the remote site to properly connect to the site's wireless network and save the connection information and the password associated with the SSID to the card's firmware.



← C ▲ Not secure 192.168.168.8				A* ☆) 🏚 🗃 🎭 🍕
MINUTEOMAN	Envision			Latest Events [15:08:24] Internal diagnostic self-test passed.
UPS Status	ng HotSpot IPv4 IPv6 P2P			3
System Status Remote Control SMS Modem Status				
EV-PROBE-TH SSID	MAC Addre	55	Network Security Auth(Enc)	Signal(%)
Configuration	med Network 16:18:d6:4f	6d:06	Secure Network WPA2-PSF	(IAFS)
Log Information				
1 Management				
器 SNMPView Lite , m	SSID	MAC Address	Network Secrity	Auth(Enc)
۰m	ASUS_RTAC53_2.4G	2c:fd:a1:0b:92:28	Secure Network	WPA2-PSK(AES)
• U • H	• Mi_Daniel	28:6c:07:5f:32:63	Secure Network	WPA-PSK/WPA2-PSK(AES)
. •••	► CableWiFi2.4G	08:02:8e:fe:4c:bc	Secure Network	WPA2-PSK(AES)
m • D	▶ Xiaomi_0679	28:6c:07:64:06:7a	Secure Network	WPA-PSK/WPA2-PSK(AES)
+ D	> Megatec_Mi	f0:b4:29:5b:18:12	Secure Network	WPA-PSK/WPA2-PSK(AES)
TI	» EclipseTaipei-AP02	10:6f:3f:f8:d3:6e	Secure Network	WPA-PSK(AES)
• Ri • U	Megatec_SMC	00:13:17:a4:44:5a	Secure Network	WPA-PSK/WPA2-PSK(AES)
► DI	+ DASAN_GONT	00:d0:cb:ef:06:22	Secure Network	WPA2-PSK(AES)
► R	→ king_ap	00:1c:f0:ad:37:b1	Secure Network	WPA2-PSK(AES)
+ RCgu + RCgu	When the FV-N	IETCARD co	onnects with a wireless	network, it will
+ Upp				
1 · Online	display an i	con next to	the SSID of the active	connection.



SNMP

Use of this menu option is to configure the SNMP settings of the EV-NETCARD for use with a NMS (Network Management System).

(EnvisionSNMP, it is available on the from the minuteman website at: <u>SNMP Resource</u> <u>Library - Minuteman UPS</u>)



• General

MIB System

- System Name: This section is dedicated to defining a custom name for the EV-NETCARD.
 Enter the preferred name, then press the "Apply" icon.
- System Contact: This section can be used to list a responsible individual or administrator.
 Enter the name, then press the "Apply" icon.
- System Location: This section can be used to describe the location of the EV-NETCARD.
 Enter the preferred description, the press the "Apply" icon.

SNMP UDP Port

- Envision SNMP Port: Defines the port which the EV-NETCARD card receives and sends SNMP commands. (The default setting is 161)
- Trap Receive Port: Defines the port to receive SNMP traps. (The default setting is 162)



SNMPv3 Engine ID

 SNMPv3 Engine ID Format Type: When using SNMPv3, the EV-NETCARD card is required to have an Engine ID for identification to generate authentication and encryption keys.

The format type can be selected from the dropdown list with option of: MAC Address, IPv4, IPv6 or Manual. When a format is selected, press the "Apply" icon and the car will automatically reboot.

 SNMPv3 Engine ID Text: Automatically provides the SNMPv3 Engine ID content unless the "SNMPv3 Engine ID Format Type" is set to "Manually". If set manually, enter the ID content, then press the "Apply" icon.

	Envision		Latest Events [08:08:21] Output Off [08:07:18] Output Off [08:07:18] UPS has switched to battery power.
Information	General Access Control Trap Notification	Device Connec	ted
🛠 Configuration	MIB System		
UPS Configuration	System Name	EV-NETCARD-1G	
Network	System Contact	Administrator	
Wireless LAN	System Location	My Office	
+ Notification	SNMP UDP Port	161	
Web/Telnet/FTP BACnet	Trap Receive Port	162	
EV-PROBE-TH	SNMPv3 Engine ID		
Modbus System	SNMPv3 Engine ID Format Type *	MAC Address 🗸	
Log Information	SNMPv3 Engine ID Text	MAC Address 3ea14	47f6d
(i) Management	* : System will re	IPv6	ns have been Applied.
器 SNMPView Lite		Manually	Apply Reset

Access Control

- <u>Manager IP Address</u>: Define an IP address, (up to 8), which the administrator can use to manage EV-NETCARD cards on the network. To allow management of the EV-NETCARD card from any IP address, enter *.*.* into the Manager IP address fields.
- <u>Version</u>: This field is used to select between: All, V1 & V2C or V3. When selecting All or V3, then a username, password, authentication and privacy setting are required.
- <u>Community</u>: This section is used to set a NMS Community name for the card. The Community name must be the same as the setting in NMS. (The default setting is public)
- <u>Permission</u>: Sets the rights and authorities of administrators. The options are: Read, Read/Write, and No Access.
- <u>Description</u>: This is an open field which provides a field to make notes for the administrator's reference.



	Envision	Latest Events [08:08:21] Output Off [08:07:18] Output Off [08:07:18] UPS has switched to battery power.
Information	General Access Control Trap Notification Device Connected	0
🛠 Configuration		
UPS Configuration UPS On/Off Schedule Network	Manager IP Version Community Address	Permission Description
Wireless LAN	*.*.* All • public	Read/Write 🗸
SNMP + Notification	*.*.*.* All V public	No Access 🗸
Web/Telnet/FTP		I.II.
BACnet EV-PROBE-TH Modbus System	User Name Auth. Protocol Auth. Password Auth. Password	Privacy Protocol
Log Information Management	All >> public **** All >> oublic Minimum 8	characters
器 SNMPView Lite		No Access V
	..* All • >> public	No Access 🗸
	..* Includes all IP addresses	No Access V
		Apply Reset

• Trap Notification

Trap Notification

- <u>Destination IP</u>: Program specific IP addresses for receiving traps sent by the EV-NETCARD card. Up to 8 addresses can be programmed.
- <u>Accept</u>: When sending traps to the Destination IP addresses, select the SNMP trap type and level from drop down list. The available options are: V1, V2 Inform or Trap, V3 Inform or Trap. When SNMPv3 Trap or SNMPv3 Inform is selected, a username and password authentication is required.

	Envision	Latest Events [08:68:21] Output Off [08:07:18] Output Off [08:07:18] UPS has switched to battery power.
Information	General Access Control Trap Notification Device Connected	9
Configuration	Tran Notification	
UPS Configuration	Destination IP Accept Community	Tran Type Severity Description Events
UPS On/Off Schedule	ADD 450 450 40 Child Tara and auchilia	
Network	192.168.168.42 SNMPV1 Irap V public	PPC ✓ Information ✓ Select Test
SNMR	192.168.168.172 SNMPv3 Trap V public	PPC V Information V Select Test
Notification	192.168.168.147 SNMPv2 Trap V pu F	PPC V Information V Select Test
Web/Telnet/FTP		
BACnet		PPC V Information V Select Test
EV-PROBE-TH	No V pu c	PPC V Information V Select Test
Modbus		PPC V Information V Select Test
System		
Log Information		PPC V Information V Select Test
Management		PPC V Information V Select Test
器 SNMPView Lite		
	Send Power Restore and Adapter Restor	_second(s) interval.
	SNMP Inform Request	
	Number of Retries 3	
	Timeout (sec) 5	
	User Name abc	
	Auth. Protocol MD5 🔻	Auth. Password
	Privacy Protocol DES V	Privacy Password ·······
	Manager Engine ID	

- <u>Community</u>: The trap receiver and the EV-NETCARD card must be same community. (The default is: Public)
- <u>Trap Type</u>: Select from PPC MIB or RFC1628 MIB (The default is: PPC)
 MIB file is available via download at: <u>SNMP Resource Library Minuteman UPS</u>
- Severity: This section set the Trap level for each receiver. There are three levels available:
 - Information: Receives all traps.
 - Warning: Receives only "warning" and "severe" traps.
 - Severe: Receives only "severe" traps.
 - (Please refer your NMS manual for Trap levels.)
- <u>Description</u>: This is an open field which provides a field to make notes for the administrator's reference.
- <u>Events</u>: Programs specific events for the EV-NETCARD card to send traps to the identified recipients. Press the "Select" icon to show the full list of events to choose from.
 - UPS Events: Under the UPS Events tab, check the box next to the specific events then press "Apply".
 - EV-PROBE-TH: A list of optional environmental trap alarms that can be selected if the EV-PROBE-TH is being used in conjunction with the EV-NETCARD card.

NOTE: Optional sensors must be used in order to set trap alarms for Security Alarm and Smoke Alarm.

When all the trap alarm selections are completed, use the "Test" icon to send a test trap to confirm the settings are correct.



		visio	n			Latest Events [03:33:13] Internal [02:50:18] Warning [02:48:30] Options	diagnostic self-test passed. g! Smoke detected. Alarm
Information	General Access Co	ontrol Trap N	lotification Device Connected				?
Con iguration UPS Configuration UPS Configuration UPS On/Off Schedule	Trap Notification Destination IP	Accept	Select Event	_		Descript	ion Events
Network Wireless LAN	192.168.168.169	SNMPv1 Trap	UPS Events EV-PROBE-TH			_ i=	Select Test
SNMP + Notification Web/Telnet/FTP		No	Schedule Shutdown Event	YES	NO O		Select Test
BACnet EV-PROBE-TH Modbus		No	UPS Failure UPS entering Test mode	•	0		Select Test
System System Image: Construction		No	UPS entering Boost mode UPS Load Overrun	•	0		Select Test Select Test
Management SNMPView Lite		No	UPS Communication Lost Turn Off UPS	•	0		Select Test
	Send Power Restore an	nd Adapter Resto	AC Power Failed UPS Battery Low	•	0		
	SNMP Inform Reque	est	UPS entering Bypass mode	۲	0		
	(#%#J			Selec	t All Clear All	Apply	
							Apply Reset

- <u>Send Power Restore and Adaptor Restore Traps</u>: This function sets the repeat number of "Power Restore" traps, and the intervals between transmissions, sent to the recipients when power is restored to the EV-NETCARD card. This function can be used to test the communications between trap receiver and the EV-NETCARD card after power returns.
- <u>SNMP Inform Request</u> Use this function to set the number of times the EV-NETCARD card can request a response from the sending Inform host with a preset value. (The default is 3 times with an interval of 5 seconds)
- **Device Connected** This section is to set the usage power and connection status of other devices which connects to the same UPS as EV-NETCARD uses*. (*Must be a supported feature of the UPS)

	MAN [®] Envision	Latest Events [03:33:13] Intern [02:50:18] Warni [02:48:30] Option	al diagnostic self-test passed. ng! Smoke detected. 15 Alarm
Information	General Access Control Trap Notif	ication Device Connected	?
UPS Configuration	Device	Rating (%)	Connected
VPS ON/Off Schedule Network	1	0	
SNMP + Notification	3		
Web/Telnet/FTP BACnet	4	0	V VI
EV-PROBE-TH Modbus			Apply Reset
System System System			
(i) Management			
器 SNMPView Lite			

Email

The menu option sets the parameters for sending email notifications when events occur or to send data log information. The EV-NETCARD supports SSL, TLS, and STARTTLS

• Email Setting

- <u>Email Server</u>: Enter the address of email server to be used.
- <u>Email Port</u>: Identify the Port used for sending email.
- <u>Enable SSL on Email Transmission</u>: Select the SSL type to use for email transmission: SLS/TLS, STARTTLS or NONE
- <u>Sender's Email Address</u>: Enter the senders email address
- <u>Email Server Requires Authentication</u>: Select "Yes" if the email server requires authentication or "No" if it does not.
- <u>Account name</u>: If authentication is required, enter the account name in this field.
- <u>Password</u>: If authentication is required, enter the password in this field.
- <u>Sending Test Mail</u>: When all the selections are completed, enter an email address to verify all configuration items are correct. Press the "Test Mail" icon. If an e-mail is received, complete the process by pressing the "Apply" icon.



	MAN [®] Envisio	on	Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
Information	Email Setting Email for Event L	og Email for Daily Rep	oort ?
Configuration			
JPS Configuration	Email Server	smtp.gmail.com	
JPS On/Off Schedule	Email Port	587	
IEtwork Vireless I AN	Enable SSL on Email Transmission	STARTTLS V	
SNMP	Sender's Email Address	mmpara1@gmail.com	
lotification	Email Server Requires Authentication	YES V	
Email 🔀	Account Name	mmpara1@gmail.com	
SMS SMS	Password		
WeChat 🍋	Sending test mail		Test Mail
LINE 🤎			
Veb/Telnet/ETP			
BACnet			Apply Reset
V-PROBE-TH			
Nodbus			
System			
Log Information			
0 9 8	● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ●		
UPS Agent(192.16	68.66.106):This is a test ema	ail 😐 🗤 👘	ē
▲ ttc@gmail.com <tt 寄給我。</tt 	c@gmail.com>	le of Test Email	received
If you received this to	est mail,it means that your mail set	tings are correct.	

- Email for Event Log (To received email notification Use this option to define up to 8 email addresses to receive warnings sent by EV-NETCARD card when selected events occur. Enter each email address then press the "Select" icon. From the pop-up window, check the specific events to send alarms to that specific email address.
 - UPS Events: Under the UPS Events tab, check the box next to the specific events then press "Apply".
 - EV-PROBE-TH: A list of optional environmental trap alarms that can be selected if the EV-PROBE-TH is being used in conjunction with the EV-NETCARD card.

NOTE: Optional sensors must be used in order to set trap alarms for Security Alarm and Smoke Alarm. When all the email addresses are configured, press the "Apply" icon.

MINU		:00	MAN
POWER T	EC	HNC	by Para Systems, Inc.

	Envis	ion		Latest Events [03:33:13] Interna [02:50:18] Warnin [02:48:30] Option	l diagnostic self-test passed. gl Smoke detected. 5 Alarm
Information	Email Setting Email for Eve	ent Log Emai	for Daily Report		?
🛠 Configuration		0			
UPS Configuration					
UPS On/Off Schedule	Send Email When Event Occurs	YES 🗸			
Network	Account1		tvancil@minutemanups.com	Select	
Wireless LAN	Account2			Select	
SNMP	Account3			Select	
- Notification	Account			Select	
• Email 🖂	Accounty			Select	
• SMS 5MS	Accounts			Select	
• WeChat	Account6		/	Select	
• LINE	Account7			Select	
- Slavoo	Account8			Select	
Skype 5					
Web/Teinet/FTP		//			
BACNET					Apply Reset
EV-PROBE-TH					лрру незее
Modbus	Select Event		Select Event		
System					
Log Information	UPS Events EV-PROBE-TH		UPS Events EV-PROBE-T	н	
Management	UPS Events		EV-PROBE-TH		
Management	YE	S NO		YES NO	
器 SNMPView Lite	Schedule Shutdown Event	0	Smoke Alarm	• •	
	UPS Failure @	0	Water Alarm	• •	
	UPS entering Test mode	0	Gas Alarm	• •	
	UPS entering Sleeping mode	0	Security Alarm	• •	
	UPS entering Boost mode	0	Environmental Temper	ature Overrun 🖲 🔿	
	UPS Load Overrun	0	Environmental Temper	ature Underrun 🖲 🛛 🔿	
	UPS Communication Lost	0	Environmental Humidit	y Overrun 💿 🔿	
	Turn Off UPS		Environmental Humidit	y Underrun 🔘 🔿	
	AC Power Failed		~		
	Selec	t All Clear All Ap	ply	Select All Clear All	Apply

• Email for Daily Report (To receive daily report) - The EV-NETCARD can provide a daily report of events and data recordings. These reports can be sent to individual email recipients, (up to 4). Enter the address in the available field then select "Yes" to send the daily report or "No" to suspend the action. If sending daily reports, set a time of day for the report to be sent dropdown menu.



		Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
Information	Email Setting Email for Event Log Email for Daily Report	3
🛠 Configuration		
UPS Configuration UPS On/Off Schedule Network	Account1	
Wireless LAN SNMP	Account3	
Email SMS	Send Email for Daily Report (HH:mm) (24-hour time format)	
WeChat		Apply Reset
Web/Telnet/FTP BACnet EV-PROBE-TH	Set time: hh:mm (24-hour form	at)
Modbus System		
Log Information Management		
器 SNMPView Lite		

■ Configuration > SMS

The EV-NETCARD supports alarm notification through Short Message Signals ("SMS") sent and received using a GSM/GPRS/CDMA Modem. A diagram of the operation is provided below.





• SMS Modem Setting

<u>SMS Modem Settings</u>: Configure the card and modem settings for sending alarms through SMS communications.

- Modem Communications Port: Select the port to use with the desired modem.
- SMS Communication: Select the signal type for using with the desired modem.
- SIM Card PIN: Enter the SIM card number for the modem.
- Confirm SIM Card PIN: Confirm the entry from above. When all the information has been entered, press the "Apply" icon.

Send Message:

- Cellular Phone Number: Enter the number of the recipient cell phone
- SMS Content: Create the text of the SMS message to send to the cell phone and define the format, (Unicode or Characters).

			Latest Events	
POWER TECHNO		h	[03:33:13] Internal diagnost [02:50:18] Warning! Smoke [02:48:30] Option5 Alarm	tic self-test passed. detected.
LINFormation	SMS Modem Settings SMS Setting	Mobile for Event Log		0
🛠 Configuration	SMS Modern Settings	,,,,,,,,,_		
UPS Configuration	Modem Communication Port	None 🗸		
UPS On/Off Schedule	SMS Communication	GPRS ¥		
Network	SIM Card PIN			
SNMP	Confirm SIM Card PIN			
- Notification				
• Email 🔀				Apply Reset
• SMS				
• WeChat 🛛 😤	Send Message			
LINE	Cellular Phone number			_
Skype 🚺	SMS content (Max. 70 characters)		Unicode	Character
Web/Telnet/FTP				Send Reset
BACnet				Schu Reset
EV-PROBE-TH Modbus				
System				
Log Information				
(i) Management				
器 SNMPView Lite				

• SMS Setting

- <u>Send SMS When Event Occurs</u>: Select options from dropdown menu: Disable, Use Local Modem or Use Remote Service
 - Disable: No SMS Service
 - Use Local Modem: Select when a GSM modem is directly connected to EV-NETCARD card (Refer to the SMS Modem section for its installation)
 - Use Remote Service: Select when a GSM modem is connected to a networked PC with SMS Server software installed (Refer to the SMS Server section software installation)
- <u>SMS Server</u>: If using the Remote Service to send SMS messages, enter the IP address
 of the computer with the installed SMS Server here.



- <u>SMS Port</u>: If using the Remote Service to send SMS messages, enter the port number of the SMS Server used for sending messages. (The default is Port 80)
- <u>Account Name</u>: If using the Remote Service to send SMS messages, enter the account name of the SMS Server, if required.
- <u>Password</u>: If using the Remote Service to send SMS messages, enter password for the SMS Server, if required.
- <u>Sending test SMS</u>: When the configuration is completed, enter a mobile number to receive a test. SMS. If a successful test message is sent, press the "Apply" icon to save settings.

	Envision		Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
LINFormation	SMS Modem Settings SMS Setting	Mobile for Event Log	3
🛠 Configuration			
UPS Configuration	Send SMS When Event Occurs	Use Remote Service 🗸	
UPS On/Off Schedule	SMS Server		
Wireless LAN	SMS Port	80	
SNMP	Account Name		
- Notification	Password		
• Email	Sending test SMS		Test SMS
- SMS		-	
LINE			
Skype S			Apply Reset
Web/Telnet/FTP			
BACnet			
EV-PROBE-TH			
System			
Log Information			
(i) Management			
器 SNMPView Lite			

- **Mobile for Event Log** Use this option to define up to 8 cell phone numbers to receive warnings sent by EV-NETCARD card when selected events occur. Enter each phone number then press the "Select" icon. From the pop-up window, check the specific events to send alarms to that specific phone number.
 - UPS Events: Under the UPS Events tab, check the box next to the specific events then press "Apply".
 - EV-PROBE-TH: A list of optional environmental trap alarms that can be selected if the EV-PROBE-TH is being used in conjunction with the EV-NETCARD card.
 NOTE: Optional sensors must be used in order to set trap alarms for Security Alarm and Smoke Alarm. When all the phone numbers settings are completed, press the "Apply" icon.

MINU	TECMAN
POWER T	ECHNOLOGIES by Para Systems, Inc.

	CHARNE E	invisio	DN	<mark>st Events</mark> 3:13] Internal diagno: 0:18] Warning! Smoki 8:30] Option5 Alarm	stic self-test passed. e detected.
	SMS Modem S Cellular Phone nu Cellular Phone nu Cellular Phone nu Cellular Phone nu	settings SMS Set umber1 umber2 umber3 umber4 umber5	Mobile for Event I	Select Select Select Select Select Select	0
SMS WeChat SMS UINE Skype Web/Telnet/FTP BACnet EV-PROBE-TH	Cellular Phone nu Cellular Phone nu Cellular Phone nu UPS tweats Schedule Shutdown Event UPS railure UPS retering Test mode UPS retering Stepping mode	mber6 imber7 YES NO * O * O * O * O	UPS Events EX-PROBETH EX-PROBETH Smoke Alarm Gas Alarm Security Alarm	Select Select YES NO • • • • • • • • • • • • • • • • • • • • • • • • • • • • •	Apply Reset
	UPS entering Boost mode UPS Load Overrun UPS Communication Lost Turn Off UPS A.C Power Failed UPS Battery Low UPS Temperature Overrun UPS entering Bypass mode		Environmental Temperature Over Environmental Temperature Und Environmental Humidity Overrun Environmental Humidity Underru	rrun ® O errun ® O n ® O	
_		Select All Clear All Apply		Select All Clear All Apply	

Web/Telnet/FTP

This menu option sets the permissions for each user account for Web, Telnet and FTP access, (for up to 8 users). Restrictions to enable/disable specific ports for HTTP/HTTPS, Telnet/SSH and FTP can be programmed from this screen.

• HTTP/HTTPS

Management Protocol:

- Enable HTTP Function: Check to enable then enter the specific port number to access.
- Enable HTTP proxy Function: Check to enable then enter the specific port number to access.
- Enable HTTPS Function: Check to enable then enter the specific port number to access.
- Enable HTTPS proxy Function: Check to enable then enter the specific port number to access.
- RESTful API Token: (Need additional definition)
 - Token should be created to allow remote Rest API connections over HTTPS

HTTP/HTTPS Account:

- User Name: Set up a User Name for use when using the EV-NETCARD web browser access, (up to 8 are allowed) in the provided field(s).
- Password: Create and use a password for each User Name to protect against unauthorized EV-NETCARD card web access.



- Permission: Sets the level of user rights when accessing the EV-NETCARD via the web browser. The options are: No Access / Read / Read&Write
 - Permission Rule : At least one user account must have Read/Write permission
 - Permission Rule : Read and Write permissions must have a User Name and cannot be blank
- IP Filter: Restrict access to the card to only specific IP addresses: (using "*.*.*." allows access from any IP address)

Auto Logoff after Idle for X minute (s): Set the amount of time before the EV-NETCARD webpage automatically logs the user out when there is no activity on the screen. (0 is disabled)

	Envision			Latest Events [033313] Internal diagnostic self-tee [02:5619] Warningt Smoke detected [02:48:30] OptionS Alarm	t passed.
Information	HTTP/HTTPS TELNET/SSH FTP/FTP-SSL SSL Information	RADIUS Server LDAP Server			?
🛠 Configuration	Management Protocol				
UPS Configuration	Enable HTTP Function *	2			
UPS On/Off Schedule	HTTP port *	80			
Network	Enable HTTP proxy Function *				
SNMP	HTTP proxy port *	81			
+ Notification	Enable HTTPS Function *				
Web/Teinet/FTP	HTTPS port *	443			
BACnet	Enable HTTPS proxy Function *				
EV-PROBE-TH	HTTPS proxy port *	444			
Modbus					
System	RESTful API Token	Settings			
Log Information					
(i) Management	HTTP/HTTPS Account	Bacquord	Parmiccion	ID Filter	
器 SNMPView Lite	admin	Password	Read/Write	****	
			No Access M	****	
			No Access	***	
			No Access ¥	****	
			No Access	****	
			No Access 👻	1000	
			No Access ¥	****	
			No Access V	****	
	Auto LogOff after idle for 0 minute(s) (0: Disable)				
		* : System will reboot w	hen these items have been Applied.		
				Apply	Reset
					-

• **Telnet/SSH** - Enable and enter specific port information to access or disable Telnet/SSH Telnet/SSH communications.

Management Protocol

- Enable TELNET Function: To enable TELNET, select the checkbox then enter the preferred TELNET Port number.
- Enable SSH Function: To enable SSH, select the checkbox then enter the preferred SSH Port number.

<u>TELNET/SSH Account:</u>

- Same as HTTP account/password settings: Checking this box will automatically duplicate the settings used for setting up the HTTP/HTTPS communications.
- User Name: If not duplicating the HTTP settings, create or enter a User Name, (up to 8 are allowed) in the provided field(s).
- Password: Create and use a password for each User Name to protect against unauthorized EV-NETCARD card web access.
- Permission: Sets the level of user rights when accessing the EV-NETCARD via the web browser. The options are: No Access / Read / Read&Write
 - Permission Rule : At least one user account must have Read/Write permission
 - Permission Rule : Read and Write permissions must have a User Name and cannot be blank

 IP Filter: Restrict access to the card to only specific IP addresses: (using "*.*.*" allows access from any IP address)

	Envis	ion		Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
Information	HTTP/HTTPS TELNET/SSH	FTP/FTP-SSL SSL Informa	ion RADIUS Server	LDAP Server 3
🛠 Configuration	Manager Protocol			
UPS Configuration	Frable TELNET Function			
UPS On/Off Schedule	TELNET port *	22		
Network	Fachle CCU Sugation #	23		
Wireless LAN	Enable SSH Function *			
SNMP	SSH port *	22		
+ Notification	TELNET/SSH Account			
BACnet	Same as HTTP account/p	assword settings		
EV-PROBE-TH	Liser Name	Password	Permission	ID Eilter
Modbus	Oser Marine	Password	No Accord M	****
System			No Access +	
Log Information			No Access 🗸	
			No Access 🗸	
Management			No Access 🗸	
器 SNMPView Lite			No Access 🗸	
			No Access 👻	*.*.*
			No Access 🗸	*.*.*
			No Access 💙	*.*.*.*
		* : System will reboot	when these items have be	een Applied.
				Apply Reset

- **FTP/FTP-SSL** The menu will provide options to configure and set up the FTP/FTP-SSL access. <u>Management Protocol</u>
 - Enable FTP Function: Check the box to enable the FTP function.
 - Enable FTP-SSL Function: Check the box to enable FTP-SSL protection
 - Implicit FTP-SSL: Check the box to define a specific port for the client (990) to be used for secure connections
 - FTP(S) Server Port: Select the port for server FTP(S) communications
 - Implicit FTP-SSL option forces the FTP client to connect securely from the start
 - Enable SFTP Function: Check the box to enable SFTP function
 - SFTP Server Port: Select the port for SFTP server communications.

FTP/FTP-SSL Account

- Same as HTTP account/password settings: Checking this box will automatically duplicate the settings used for setting up the HTTP/HTTPS communications.
- <u>User Name</u>: If not duplicating the HTTP settings, create or enter a User Name, (up to 8 are allowed) in the provided field for FTP access to the EV-NETCARD card.
- <u>Password</u>: Create and use a password for each User Name to protect against unauthorized FTP access.
- <u>Permission</u>: Sets the level of user rights when accessing the EV-NETCARD via the web browser. The options are: No Access / Read / Read&Write
 - Permission Rule : At least one user account must have Read/Write permission
 - Permission Rule : Read and Write permissions must have a User Name and cannot be blank

When all the configuration settings are completed, press the "Apply" icon and the card will reboot for all configurations to take effect.



		MAN Envisi	ion			Late: [03:3 [02:5 [02:4	t Events 3:13] Internal diagnostic self-test passed 0:18] Warning! Smoke detected. 8:30] Option5 Alarm	d.
	Information	HTTP/HTTPS TELNET/SSH	FTP/FTP-SSL	SSL Information	RADIUS Server	LDAP Server		?
*	Configuration	Management Protocol						
UP	S Configuration	Enable ETP Eunction						
UP	S On/Off Schedule	Enable ETP-SSI Function						
Ne	twork	Implicit FTP-SSI						
Wir	reless LAN	ETP(S) Server Port		21				
SN No	MP	FIF(5) Server Forc		21				
We	b/Telnet/ETP	Enable SETP Function						
BA	Cnet	SETP Server Port		22				
EV-	PROBE-TH	Simperierroit						
Мо	dbus	FTP/FTP-SSL Account						
Sys	tem	Same as HTTP account/pa	issword settings					
	Log Information	User Name		Pa	ssword		Permission	
$(\mathbf{\hat{I}})$	Management						No Access 🖌	
묢	SNMPView Lite						No Access 🐱	
88							No Access 🐱	
							No Access 🐱	
							No Access 🐱	
							No Access 🐱	
							No Access 🐱	
							No Access 🐱	
							Apply Re	set

• **SSL Information** - The EV-NETCARD card supports HTTPS protocol and varies SSL encryptions version for network connection. User may upload its Public Key and Certification for authentication.

HTTPS Protocols - Select the encryption version to be used from the list provided:

- SSL v2
- SSL v3
- TLS v1.0
- TLS v1.1
- TLS v1.2
- TLS v1.3

Once the selection is made, press the "Apply" icon. The card will then reboot with the updated SSL version.

<u>SSL Information</u> - Use the steps in this section to upload the SSL certificate. When both public key and certificate are uploaded to EV-NETCARD web server, the SSL communication encryption will be activated.

- Select Public Key: Search and find the Public Key file to upload to the web server. When found, press the "Upload and Replace" icon.
- Public Key Length: Lists the length of the Public Key loaded into the web server.
- SSL Certificate: Search and find the SSL certificate file to upload to the web server. When found, press the "Upload and Replace" icon.
- Issued To / By: Lists the issuer and recipient of the SSL Key
- Valid From / Until: Lists the term of validity for the certificate.



(To communicate via HTTPS, make sure to enable HTTPS port 443.) To have the EV-NETCARD create its own public key and certificate, please refer to OpenSSL software on the OpenSSL website at: *https://openssl-library.org/source/*

		Envis	sion	Latest Events [03:33:13] Internal diagnosti [02:50:18] Warning! Smoke o [02:48:30] Option5 Alarm	c self-test passed. detected.
	Information	HTTP/HTTPS TELNET/SS	H FTP/FTP-SSL SSL Information R	ADIUS Server LDAP Server	3
*	Configuration	HTTPS Protocol			Î
UPS	On/Off Schedule	SSL v2 SSL v3			
Wire	eless LAN				
+ Noti	fication	TLS v1.2			
BAC	net	TLS v1.3			Apply * Reset
EV-P Mod	PROBE-TH		* : System will reboot when 'Ap	pply' has been pressed.	
Syst	em Log Information	SSL Information			
<u> </u>	Management	SSL Public Key Public Key Length	Choose File No file chos 2048 bits	Upload and Replac	e
格	SNMPView Lite	SSL Certificate	Choose File No file chos	Upload and Replac	e
		Issued By	NetAgent NetAgent		
		Valid From Valid Until	2022-01-01 2025-01-01		

NOTE: When connecting the EV-NETCARD using HTTPS, with its own generated public key and certificate, the web browser may show an error, please ignore and continue.

• **RADIUS Server** - RADIUS server authentication is supported on the EV-NETCARD card. It can be configured and activated via the menu options.





- Enable RADIUS in Web/Telnet Login: Select "Yes" or "No" from the dropdown menu
- RADIUS Server Address: If using RADIUS, enter the IP address of the RADIUS Server
- Authentication Port: Enter RADIUS port number (The default is 812)
- Shared Key: Enter the Shared Key between RADIUS Server and client
- Connection Timeout: Sets the number of seconds to suspend the login time after the RADIUS server is rejected
- Connection Retry: Sets the number of connections to the RADIUS server after connection failures.

When all the configuration settings are completed, press the "Apply" icon.

Envision		Latest Event [03:33:13] In [02:50:18] W [02:48:30] O	ts Iternal diagnostic sel Jarning! Smoke dete Iption5 Alarm	f-test passed. cted.
HTTP/HTTPS TELNET/SSH FTP/FTP-SSL	SSL Information	ADIUS Server	LDAP Server	?
Enable RADIUS in Web/Telnet login RADIUS Server Address	NO V]		
Authentication Port Shared Key	1812			
Connection TimeOut Connection Retry	3	second(s)		
			l	Apply Reset
	Envision HTTP/HTTPS TELNET/SSH FTP/FTP-SSL Enable RADIUS in Web/Telnet login RADIUS Server Address Authentication Port Shared Key Connection TimeOut Connection Retry	Image: Second	Interference Interference <th< th=""><th>Latest Events Latest Events Display: Taylow and the store of the sto</th></th<>	Latest Events Latest Events Display: Taylow and the store of the sto

• **LDAP Server** - LDAP is a vendor-neutral software protocol used to lookup information or devices within a network. For setup information, please see your server settings.

	Envision		Latest Even [03:33:13] Ir [02:50:18] V [02:48:30] 0	ts hternal diagnostic so Varning! Smoke deto option5 Alarm	elf-test passed. ected.
Information	HTTP/HTTPS TELNET/SSH FTP/FTP-SSL	SSL Information	RADIUS Server	LDAP Server	?
🛠 Configuration					
UPS Configuration UPS On/Off Schedule	Enable LDAP in Web/Telnet login	NO V			
Network	LDAP Server Address				
Wireless LAN	Security Connection				
SNMP + Notification	Server Port	389			
Web/Telnet/FTP	Distinguished Name				
BACnet EV-PROBE-TH	User Attribute	uid			
Modbus	Permission Attribute				
System Log Information	Permission Read/Write Permission Read Only				
(i) Management					
器 SNMPView Lite					Apply Reset

BACnet

The EV-NETCARD card supports <u>BACnet</u>/IP (Building Automation and Control/Internet Protocol)

- <u>BACNet Device</u>: Use this menu option to configure the device ID and access port number for the EV-NETCARD card when using BACnet for communications.
 - BACNet Device ID: Enter the assigned ID number to use for the card. (-1 is Out of Service)
 - BACNet Port (0-65535): Enter a BACNet port number for the card.
- Notification: Configure the recipients for notifications from the card.
 - Destination IP: Enter the IP address, (up to 4), for receiving notifications form the EV-NETCARD card.
 - Accept: Set to receive notifications or not
 - Port (0-65535): Enter the BACNet Port number for the recipient.
 - Severity: List the type of notifications to send to the recipient: (Alarm or Event)
 - Description: This is an open field which provides a field to make notes for the administrator's reference.

When all the configuration settings are completed, press the "Apply" icon and the card will reboot for all configurations to take effect.



		ision		Latest Events [03:33:13] Internal d [02:50:18] Warning! [02:48:30] Option5 /	i iagnostic self-test passed. Smoke detected. Narm
L Information	BACnet				?
X Configuration	BACNet Device				
UPS Configuration	BACNet Device ID *		1016	(-1 = Out of service)	
Network	BACNet Port (0-65535)		47808		
Wireless LAN	Notification				
SNMP + Notification	Destination IP	Accept	Port (0-65535)	Severity	Description
Web/Telnet/FTP BACnet				Alarm 🗸	
EV-PROBE-TH Modbus		No V		Alarm 🗸	
Log Information		* : System wil	I reboot when these items	have been Applied.	
Management器 SNMPView Lite					Apply Reset

■ EV-PROBE-TH

The EV-PROBE-TH is an optional external environmental sensor and hub device. Its primary purpose is to detect temperature, humidity and water conditions and trigger alarms when conditions warrant. The EV-PROBE-TH also contains a built-in RF receiver for use with other external sensors such as smoke and contact sensors.

• EV-PROBE-TH

- <u>EV-PROBE-TH</u>: The EV-PROBE-TH, when configured, will sound an audible alarm and trigger a trap or warning message when it detects temperature and humidity values or standing water below and above the programmed settings.
 - EV-PROBE-TH: Enable or disable the probe function
 - Humidity (%): Program the minimum and maximum thresholds for humidity alarms.
 - Temperature (°C): Set the minimum and maximum thresholds for temperature alarms.
- <u>Security Label</u>: Connect up to 7 additional contact sensors that communicate with the EV-PROBE-TH via RF. Use this section to set a descriptive location or name for each installed contact sensor.

	Envision		Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
Information	EV-PROBE-TH Calibrate		?
🛠 Configuration	EV-PROBE-TH		
UPS Configuration UPS On/Off Schedule	EV-PROBE-TH	Active 🗸	
Network Wireless LAN SNMP	Humidity (%)	Critical UnderRun 5 6	Critical OverRun 90
+ Notification	Temperature (C)	5.0	30.0
Web/Telnet/FTP	Security Label		
BACnet	Label 1	Security1 Status	
Modbus	Label 2	Security2 Status	
System	Label 3	Security3 Status	
	Label 4	Security4 Status	
Log mormation	Label 5	contact	
(i) Management	Label 6	Security6 Status	
器 SNMPView Lite	Label 7	Security7 Status	
			Apply Reset

• **Calibrate** – Use this tab to verify and calibrate the EV-PROBE-TH temperature and humidity settings. Use an external sensor to verify conditions and enter in the respective fields.

When all the configuration settings are completed, press the "Apply" icon.

	Envision		Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
L Information	EV-PROBE-TH Calibrate		?
🛠 Configuration			
UPS Configuration	Temperature (°C)	0.0	
UPS On/Off Schedule Network	Humidity (%)	0	
Wireless LAN			
SNMP			
+ Notification			Apply Reset
Web/Telnet/FTP			
EV-PROBE-TH			
Modbus			
System			
Log Information			
(i) Management			
器 SNMPView Lite			

MODbus

Use this menu option to set the MODbus settings on the EV-NETCARD card.

 <u>MODbus on TCP/IP</u>: To deactivate use of the MODbus function over TCP/IP, use the default (-1) setting. If activating, then select a port from 1-255.



<u>MODbus on RS485</u>: Program the settings for use of the MODbus function over a RS485 connection.

	Envisio	DN Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
L Information	Modbus	9
Configuration	Modbus on TCP	
UPS Configuration UPS On/Off Schedule	Modbus on TCP Device ID *	1 (-1 = Out of service)
Network	Modbur on DC485	
Wireless LAN	Modbus on R5485	Disabled a
SNMP + Notification	Device ID	
Web/Telnet/FTP	Mode	Full Duplex 🗸
BACnet	Baud Rate	9600 🗸
EV-PROBE-TH	Data bits	8 🗸
Modbus	Parity	None 🗸
System	Stop bits	1 🗸
Log Information Management	*::	iystem will reboot when these items have been Applied.
器 SNMPView Lite		Apply Reset

When all the configuration settings are completed, press the "Apply" icon.

System

Use this menu option to set the EV-NETCARD card system time, language and SYSLOG configuration.

- **Date/Time** Synchronize the EV-NETCARD card with an external source or internal Time Server for correct date and time settings.
 - <u>System Time</u>:
 - System Time (yyyy/mm/dd hh:mmm:ss): Set the initial date and time to manually display on the EV-NETCARD card.
 - Time Between Automatic Updates: Sets an interval for time synchronizations.
 - Time Server: The use of an internet-based time server can be selected from the drop down list or add other time server manually.
 - Time Zone(Relative to GMT): Choose the time zone for the installation site by selecting an option from the dropdown menu, (relative to the GMT time zone).
 - Using Daylight Saving Time: Select "Yes" or "No" for using the automatic daylight savings adjustment feature.
 - <u>Restart</u>:
 - Auto Restart System for Every (0 is disabled): Set the EV-NETCARD to restart automatically at preset hour or minute or select "0" to disable. Press "Apply" to complete the programming.
 - Manual Restart System After 30 seconds: Press the "Apply" icon to perform a restart of the EV-NETCARD card. (The restart has a 30-second delay after pressing "Apply".



When all the configuration settings are completed, press the "Apply" icon.

- Language Program the preferred language interface settings for the EV-NETCARD card.
 - <u>Interface Language</u>: Select the preferred language to use for the web browser interface of the EV-NETCARD card. When first logging in to the EV-NETCARD webpage, it will auto detect the default OS language of the PC and show the same language until changed and active using this option.

● 簡體中文

● 日本語

Türkçe

• ไทย

Languages supported by the EV-NETCARD card:

- English
- Deutsch
- Português
- Español
- Français
- 한글Русский

● 繁體中文

- Polska
 - Italiano
- **NOTE**: Cookies must be enabled on the web browser before using this function.
- <u>Email Preference</u>: Select the language preference when sending email and SMS alarm messages.



	Envision	Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
L Information	Date/Time Language SysLog Setting	Save/Restore
🛠 Configuration		
UPS Configuration	Interrace Language	
UPS On/Off Schedule		
Network	Português	
+ Notification		О Русский
Web/Telnet/FTP		0 Ing
BACnet	O Türkce	O Polska
EV-PROBE-TH	(Note: Setting preferences will not work if you have	disabled cookies in your browser.)
Modbus		
System	Email Preferences	
Log Information	Use below interface language in Email SMS and We	chat English V
(i) Management	notification	
器 SNMPView Lite		
		Apply Reset

- **SYSLOG Setting** Use this menu option to set the SYSLOG configuration.
 - Enable Syslog Server: Select No or Yes for activation of the Syslog function.
 - Syslog Protocol: Choose either UDP or TCP for the Syslog protocol
 - TCP Octet Counting: Check if using TCP Octal counting
 - Syslog Server Address: Program the network address of the Syslog server.
 - Syslog Port: Choose the port to use for communication with the Syslog server

When all the configuration settings are completed, press the "Apply" icon.

	Envision		Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
Information Configuration	Date/Time Language SysLog Setting	Save/Restore	?
UPS Configuration UPS On/Off Schedule	Enable SysLog Server SysLog Protocol		
Network Wireless LAN SNMP	TCP Octet Counting SysLog Server Address		
+ Notification Web/Telnet/FTP BACnet	SysLog Port	514	
EV-PROBE-TH Modbus System			Apply Reset
Log Information			
器 SNMPView Lite			



- Save/Restore
 - Save Current Configuration: Choose "Encrypted" or "Unencrypted" from the drop down menu to save the current EV-NETCARD configuration to the PC. If uploading to another computer, select "Unencrypted". The default name of the text file will be: YYYY_MMDD_####.cfg.

NOTE: Administrator permission required to save the file.

- Restore previous configuration: Use this menu option to restore a previously saved configuration. Select "Browse" and to locate the file and press the "Restore." icon.
- Reset to factory default: Selecting this option will reset all features of the card to its default values.

Envision Envision Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] OptionS Alarm									
L Information	Date/Time Language SysLog Setting Save/Restore	3							
🛠 Configuration									
UPS Configuration	Save current configuration Unencrypted(for upload on other of	levice) V							
Network	Restore previous configuration Choose File No file chosen	Restore							
Wireless LAN	Reset to factory default	Reset							
+ Notification									
Web/Telnet/FTP									
BACnet									
Modbus									
System									
Log Information									
(i) Management									
器 SNMPView Lite									
	L								

4.4.3 Log Information

Event Log

A calendar of events that occur to the UPS.

- Event List: The Event Log displays a record of all events that occur to the UPS, stamping the event by Date and Time. It also provides a detailed description of the event. Select any month or year on the calendar and the events from that month will be displayed. Events can also be filtered by Type: Severe, Warning or Notification. Press the "Refresh" icon and the calendar will update events from the previous refresh. Press the "Today" icon for a list of events for the current day. Press the "Save" icon to download the current list of events to a PDF document.
- <u>Event Census</u>: Present the recorded events, within the defined time frame in a statistical manner.



	COLOR Systems, Inc.	Invi	sio	n					Lafest Events [08:03:21] Output Off [08:07:18] Output Off [08:07:18] UPS has switched to b	attery power.
Configuration Log Information Event Log Data Log	 ✓ 2024 	• 10 、	All Eve	ents v	Refresh	Today S	iave		October 2024	
User Log	Sun	Mon	Тие	Wed	Thu	Fri	Sat		Events List Events census	
① Management 몹 SNMPView Lite	29	30	1 💿	2 G	3 🗿	4 🕐	5 💿	[10-18 08:08:21]: [10-18 08:07:18]: [10-18 08:07:18]: [10-17 11:15:26]: [10-09 16:29:40]:	Octob	er 2024
2	6 💿	7 💿	8 🛛	9 2 9 2	100	110	120	[10-09 16:29:00]; [10-09 16:27:26]; [10-09 16:13:35]; [10-09 16:13:13];	Events List	Events census
	130	140	150	160	17 0	18 9 18	190	[10-09 16:12:39] [10-09 16:10:38] [10-09 16:10:38] [10-09 16:10:33]	19.23%	☐ 11.54%
	200	210	220	230	240	250	260	[10-09 16:06:13]: [10-09 16:06:13]: [10-09 16:06:13]: [10-09 16:05:02]:	3.85% 19.23%	7.69% 19.23%
	270	280	290	300	310	1	2	[10-09 16:05:02]: [10-09 16:05:02]: [10-09 16:04:26]: [10-09 16:02:51]:		
					-				UPS has switched to battery power.	😑 Internal diagnostic self-test passed
									 Utility power has been restored. 	Output Off
									 Shutdown Imminent No Availing Power 	NetFeeler Communication Lost System On
									Awaiting Power	

Data Log

• **Data Chart** - Records a real-time set of data points concerning the UPS: Input Volt.(V); Output Volt.(V); Freq.(Hz); Temperature(°C), Battery Volt.(V); Capacity(%) and Load(%). Logs can be saved in CSV format by clicking on "Save". The bar on top can be adjusted to check the log status at specific time of the day.





• **Data Log** - This menu option records UPS statistics in a list format and are date and time stamped as they occur. This list includes:

/)
/)

NOTE: When the EV-PROBE-TH is installed, data from connected sensors will also be available.

			👯 Env	ision					Latest Ev [08:08:21 [08:07:18 [08:07:18	ents] Output Off] Output Off] UPS has switche	d to battery power.
	Information	Da	ata Chart Data Log	Data Statistics							?
*	Configuration	No.	Date/Time	Input Volt.(V)	Output Volt.(V)	Freq. (Hz)	Load(%)	Capacity(%)	Battery Volt.(V)	Cell Volt.(V)	Temp.(°C °F)
1	Log Information	1	2024-10-22 08:18:58 2024-10-22 08:18:36	120.4 120.3	0.0	60.0 60.0	0	100	83.0 83.0	83.00 83.00	0.0/32.0
Ev	ent Log	<u>3</u> 4	2024-10-22 08:18:13 2024-10-22 08:17:50	120.4 120.3	0.0	60.0 60.0	0	100	83.0 83.0	83.00 83.00	0.0/32.0 0.0/32.0
Da	ta Log er Log	5	2024-10-22 08:17:28 2024-10-22 08:17:05	120.6 120.5	0.0	60.0 60.0	0	100 100	83.0 83.0	83.00 83.00	0.0/32.0 0.0/32.0
\bigcirc	Management	7	2024-10-22 08:16:42 2024-10-22 08:16:20	120.7 120.3	0.0	60.0 60.0	0	100 100	83.0 83.0	83.00 83.00	0.0/32.0
묢	SNMPView Lite	9 10	2024-10-22 08:15:57 2024-10-22 08:15:34	120.6 120.4	0.0	60.0 60.0	0	100 100	83.0 83.0	83.00 83.00	0.0/32.0
	ł	12 13 14 15 16 17	2024-10-22 08:14:49 2024-10-22 08:14:26 2024-10-22 08:14:04 2024-10-22 08:13:41 2024-10-22 08:13:14 2024-10-22 08:13:18 2024-10-22 08:12:56 2024 10 2 08:12:26	120.5 120.4 120.5 120.7 120.5 120.5 120.5	0.0 0.0 0.0 0.0 0.0 0.0 0.0	60.0 60.0 60.0 60.0 60.0 60.0 60.0	0 0 0 0 0 0	100 100 100 100 100 100 100	83.0 83.0 83.0 83.0 83.0 83.0 83.0 83.0	83.00 83.00 83.00 83.00 83.00 83.00 83.00	0.0/32.0 0.0/32.0 0.0/32.0 0.0/32.0 0.0/32.0 0.0/32.0 0.0/32.0 0.0/32.0
		19 20 21 22 23 24 25 26	2024-10-22 08:12:33 2024-10-22 08:12:10 2024-10-22 08:11:47 2024-10-22 08:11:25 2024-10-22 08:11:02 2024-10-22 08:10:39 2024-10-22 08:00:54 2024-10-22 08:09:54 2024-10-22 08:09:31	120.4 120.4 120.4 120.5 120.5 120.6 120.6 120.5	0.0 0.0 0.0 0.0 0.0 0.0 0.0 0.0	60.0 60.0 60.0 60.0 60.0 60.0 60.0 60.0 60.0 60.0		100 100 100 100 100 100 100 100 100	83.0 83.0 83.0 83.0 83.0 83.0 83.0 83.0	83.00 83.00 83.00 83.00 83.00 83.00 83.00 83.00 83.00 83.00	0.0/32.0 0.0/32.0 0.0/32.0 0.0/32.0 0.0/32.0 0.0/32.0 0.0/32.0 0.0/32.0 0.0/32.0 0.0/32.0
		27 28	2024-10-22 08:09:09 2024-10-22 08:08:46 Date of Datalog: 2024/10	120.6 120.4	0.0 0.0	60.0 60.0 1 2 ·	0 0 27	100 100 Go 1	83.0 83.0	83.00 83.00	0.0/32.0 0.0/32.0 Refresh Save

• **Data Statistics** - Provide details and directions for the current day Data Statistics of the connected UPS.

		Envi:	sion			Latest [08:08: [08:07: [08:07:	Events 21] Output Off 18] Output Off 18] UPS has switch	ned to battery power.
Information	Data	Chart Data Log	Data Statistics					9
🛠 Configuration	No.	Name	Number Of Data	Maximum Value	Minimum Value	Average Value	Variance	Standard deviation
Log Information	1	Input Volt.(V)	1324	122.3 00:45:36	119.3 07:24:56	121.0 2024-10-22	0.3 2024-10-22	0.5 2024-10-22
Event Log	2	Output Volt.(V)	1324	0.0 08:20:06	0.0 08:20:06	0.0 2024-10-22	0.0 2024-10-22	0.0 2024-10-22
User Log	3	Freq.(Hz)	1324	60.0 08:20:06	60.0 08:20:06	60.0 2024-10-22	0.0 2024-10-22	0.0 2024-10-22
(i) Management	4 Temperature(°C °F) 5 Battery Volt.(V)	Temperature(°C °F)	1324	0.0/32.0 08:20:06	0.0/32.0 08:20:06	0.0/32.0 2024-10-22	0.0/0.0 2024-10-22	0.0/0.0 2024-10-22
문 SNMPView Lite		Battery Volt.(V)	1324	83.0 08:20:06	\$3.0 08:20:06	83.0 2024-10-22	0.0 2024-10-22	0.0 2024-10-22
	6	Cell Volt.(V)	1324	83.00 08:20:06	83.00 08:20:06	83.00 2024-10-22	0.00 2024-10-22	0.00 2024-10-22
	7	Load(%)	1324	0.0 08:20:06	0.0 08:20:06	0.0 2024-10-22	0.0 2024-10-22	0.0 2024-10-22
	8	Capacity(%)	1324	100.0 08:20:06	100.0 08:20:06	100.0 2024-10-22	0.0 2024-10-22	0.0 2024-10-22
	Dat	te of Datalog: 2024/10/22						Refresh



• User Log - Provides a running log actions performed through the EV-NETCARD card.

	En	vision	Latest Events [08:08:21] Output Off [08:07:18] Output Off [08:07:18] UPS has switched to battery power.
Information	User Log		9
🛠 Configuration			
Log Information	Date/Time	User Name	Log Content
Event Log	2024/10/18 13:55:59		UPS Action(No.1) be added by user
Data Log	2024/10/18 13:44:17		Cancel Test be sent by user
User Log	2024/10/09 14:02:45		Timer Server Settings be modified by user
(i) Management	2024/10/09 19:02:24		Timer Server Settings be modified by user
器 SNMPView Lite	2024/09/26 18:59:04		User logout NetAgent from Telnet/S5H(192.168.168.169)
	2024/09/26 18:57:17		User login NetAgent through Telnet(192.168.168.169)
	2024/09/26 18:57:02		User logout NetAgent from Telnet/SSH(192.168.168.169)
	2024/09/26 18:55:23		User login NetAgent through Telnet(192.168.168.169)
	2024/09/26 17:37:32		Test Mail(mis@minutemanups.com) be sent by user
	2024/09/26 17:36:43		Test Mail(mis@minutemanups.com) be sent by user
	2024/09/26 17:36:30		Test Mail() be sent by user
	2024/09/26 17:36:24		Email Settings be modified by user
	2024/09/26 17:35:51		Test Mail() be sent by user
	2024/09/26 17:35:48		Email Settings be modified by user
	2024/09/26 17:35:06		Test Mail() be sent by user
	_		 4 1 ▶ Go 1
	Show Log Type A	~	Refresh Save All

4.4.4 Management

Envision Web

- **Netcard Web** This menu option will display all of the Envision Netcards installed within the network. Each card listing will include: its serial number; Mac Address; Hardware/Firmware version and IP-address. Highlight and select a card to bring up available configuration options.
 - <u>Settings</u>: Updates and changes can be made to the network accessibility of the Envision Netcard. If the fields on this window are left blank, the EV-NETCARD will not be accessible.
 ★ WARNING: Any changes made can have a direct affect on the accessibility of the card on the network.
 - IPV4 Address: Enter a new IP address using, DHCP, Bootp or manually entering a static IP address. If entering a static, enter the preferred IP address, Subnet Mask and Gateway address in the provided fields, then press "OK".
 - IPV6 Address: Create an IPV6-based address for the card using: Automatic, Stateless DHCPV6, DHCPV6 or automatic options. If using "Manual" enter the preferred IP address, IPV6 Prefix and the Gateway address in the provided fields, then press "OK".
 - Advanced: Set the preferred available protocol functions used by the card. The card can
 accept one or more of the following: HTTP, HTTPS, TELNET, and SSH. When selecting an
 option, input the port number to use for that option. When completed, press the "OK"
 icon.



- Password: Set or change a password for access to the card. If a password is previously in use, enter the old password in the field provided, then enter the new password and confirm it before pressing the "OK" icon.
- <u>Upgrade</u>: When selected, follow the instructions to download the new configuration file created for the card.
- <u>Browse</u>: Selecting "Browse" will directly redirect the web browser to the webpage of the card.

If the EV-NETCARD is accessible by WAN IP, the Envision Web utility will also be able to list out all the other available EV-NETCARD cards under same LAN. (HTTP port 81 must be enabled on the EV-NETCARD with WAN IP and domain to be as http://xxx.xxx.xx:81 where (xxx.xxx.xx) is the WAN IP or domain name.

	Latest Events Latest Events POWER TECHNOLOGIES Envision									
	Information	NETCARD Web				•				
*	Configuration	NetAgent								
Ú	Log Information	Device	MAC Address	Hardware	Firmware	IP Address				
$(\mathbf{\hat{i}})$	Management	▼ 3927220890	00:03:EA:14:A2:9A	HCY504	3.8.CY504	192.168.168.18				
Envision Web File Manager Serial Port Debug Help		Hardware Vers Firmware Vers MAC Address: IPV4 Addr:192 LocalLink Addr IPv6 Addr:	Hardware VersliEV-NETCARD-1G Firmware Version:3.8.CY504 MAC Address:00:03:EA:14:A2:9A IPV4 Addr:192.168.168.18 LocalLink Addr:[fe80::203:eaff:fe14:a29a] IPV6 Addr:		@ <u>51</u>	ettings ± <u>Upgrade</u> ∂ <u>Browse</u>				
윪	SNMPView Lite									
						Refresh				

File Manager

Use this menu option to manage Datalog files generated by the EV-NETCARD card as well as configuration files used for the batch programming multiple cards over a network. Once the datalog files have been reviewed, they can be saved or deleted. If a "dat. File" is deleted, the log record will also be erased on the Log display of the card, under the Log Information menu tab.

	POWER TECHNOLOGIES Envision									
	Information	File Manager						3		
*	Configuration	a root	6	s 🔥 👔	3 🤌 🔕 📥 4					
1	Log Information	- 🔁 u-disk	C	urrent Locat	ion:log	~		0		
$\widehat{1}$	Management			Туре	Name	Size	Modified Time	Access Time		
En	vision Web				datalog		2000/01/01 00:00:19	2024/09/26 07:56:20		
File	e Manager				eventlog		2000/01/01 00:00:31	2024/09/26 07:56:20		
Sei	rial Port Debug	i i i i i i i i i i i i i i i i i i i			batterylog		2024/09/26 07:56:20	2024/09/26 07:56:20		
He	lp [1	< □		smslog		2024/09/26 07:56:20	2024/09/26 07:56:20		
Ab	out				userlog		2024/09/26 17:35:07	2024/09/26 07:56:20		
몲	SNMPView Lite				snmpview		2000/01/01 20:32:42	2024/09/26 07:56:36		
							total 0 f	iles,6 directories.		



Serial Port Debug

Logs the communication status between the EV-NETCARD card and the UPS, listed through Sent and Received sections.

- **Debug Information** Commands can be sent automatically by the EV-NETCARD card to the UPS. Commands can also be manually sent by entering the command to the UPS in the "Sent Content" field. Select either ASCII or Hexadecimal format when sending commands.
 - <u>Sent Information</u>: This section shows the real time sent commands in chronological order to the UPS.
 - <u>Received Information</u>: This section displays the responses of the UPS to the EV-NETCARD card.

		Envision	Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
	Information	Debug Information Port Information	9
*	Configuration		
1	Log Information	ASCII O Hexadecimal	
$(\mathbf{\hat{i}})$	Management	Send Content	Send
En Fil	vision Web e Manager	Sent Information	Clear
See He Ab B	rial Port Debug 4p iout SNMPView Lite	2024/11/15 06:47:54 AP003MOD 2024/11/15 06:47:52 AP003ST4 2024/11/15 06:47:52 AP003ST4 2024/11/15 06:47:64 P003ST3 2024/11/15 06:47:46 P003ST1 2024/11/15 06:47:46 P003ST2 2024/11/15 06:47:47:46 P003ST2 2024/11/15 06:47:47:46 P003ST5 2024/11/15 06:47:47:46 P003ST5 2024/11/15 06:47:47:46 P003ST5 2024/11/15 06:47:47:40 P003ST6 2024/11/15 06:47:36 P003ST8 2024/11/15 06:47:36 P003ST4 Received information P003ST4 2024/11/15 06:47:54 V00trolic Power 2024/11/15 06:47:52 P002Top00,00000 2024/11/15 06:47:52 P002Top00,19100276,900,118,000,00000 2024/11/15 06:47:44 P002Top00,00000 2024/11/15 06:47:45 P0015 2024/11/15 06:47:45 P002Top00,00000 2024/11/15 06:47:44 P00270,599,118,06,000,0000 2024/11/15 06:47:44 P00290,0,0,0,0,0,0,0,0 2024/11/15 06:47:44 P00290,0,0,0,0,0,0,0,0 2024/11/15 06:47:44	Clear

• **Port Information** - Configures the communication parameters between the EV-NETCARD card and the UPS. The available parameters are: Debug Mode, Port, Speed (Baud), Data Bits, Parity and Stop Bits. The two encoding formats are: ASCII or Hexadecimal.

	Envision		Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
	Debug Information Port Information		?
Log Information	Debug Mode	Auto 🗸	
Management	Port Speed(baud)	UPS ~ 9600 ~	
File Manager	Data Bits	8 •	
Help About	Stop Bits	None♥ 1 Bit ♥	
器 SNMPView Lite			
			Apply

Help

The EV-NETCARD card offers an online Help resource library that provides answers to questions and description on the function if individual pages of the web browser interface.

P	ANUTEO	Envision
UPS St System Remote	Information atus Status Control	System Information UPS Information Network Status Connections Status Wireless Status
SMS M NetSwi EV-PRC	odem Status tch Status DBE-TH	This tab is to show EV-NETCARD-1G system information. Values in Hardware Version/Firmware Version/Serial Number/System Time, are provided by EV-NETCARD-1G itself. Other values are user settings from the Configuration pages.
*	Configuration	
Û	Management	

About

• **About** - Displays the hardware and firmware revisions as well as the serial number for the card.



Information About Firmware Update Image: Serial Port Debug Firmware Version Help Para Systems. Inc. About Tel: +1-972-446-7363 TOLL-FREE 800-238-72 About Serial Number		Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
Image: Configuration Firmware Version 3.12.BA506.Para.4 Image: Configuration Hardware Version Serial Number Image: Configuration Firmware Version Event CARD-1G Serial Port Debug Serial Number HH56240900001 Help Para Systems, Inc. About Tel: +1-972-446-7363 TOLL-FREE 800-238-72	mation About Firmware Update	
Image: Serial Port Debug Firmware Version 3.12.BA506.Para.4 Help Hardware Version EV-NETCARD-1G Serial Port Debug Firmware Version Serial Number Help Para Systems, Inc. About Tel: ±1-972-446-7363 TOLL-FREE 800-238-72	guration	
Management Hardware Version EV-NETCARD-1G Envision Web Serial Number HH56240900001 File Manager Para Systems. Inc. Help Para Systems. Inc. About Tel: +1-972-446-7363 TOLL-FREE 800-238-72 e-mail: service@minutemanups.com Service@minutemanups.com	nformation Firmware Version 3.12.BA50	5.Para.4
Envision Web Serial Number HH56240900001 File Manager Serial Port Debug Help Para Systems. Inc. About Tel: +1-972-446-7363 TOLL-FREE 800-238-72 e-mail: service@minutemanups.com	Agement Hardware Version EV-NETCA	ND-1G
File Manager Serial Port Debug Help About Para Systems. Inc. Tel: +1-972-446-7363 TOLL-FREE 800-238-72 e-mail: service@minutemanups.com	eb Serial Number HH562409	00001
Serial Port Debug Para Systems, Inc. Para Systems, Inc. Tel: +1-972-446-7363 TOLL-FREE 800-238-72 Para Para Para Para Para Para Para Para	er	
Help Fail a systems, inter- about Fail a systems, inter- Tel: +1-972-446-7363 TOLL-FREE 800-238-72 About Tel: +1-972-446-7363 TOLL-FREE 800-238-72 e-mail: gen/ice@minutemanups.com	Debug	Dara Systems, Inc.
e-mail: <u>service@minutemanups.com</u>		Tel: +1-972-446-7363 TOLL-FREE 800-238-7272
SNMPView Lite Webpage: http://www.minutemanups.com	PView Lite	e-mail: <u>service@minutemanups.com</u> Webpage: <u>http://www.minutemanups.com</u>

- **Firmware Update** This menu option is used for updating the firmware of the EV-NETCARD card.
 - <u>Update by FTP/SFTP</u>:
 - Protocol Type: Set the protocol between FTP and SFTP using the dropdown menu
 - FTP/SFTP Server: Enter the FTP server location on the network for the firmware update
 - User: Customer's user credentials
 - Password: Enter the password for the user.

When the information has been entered, select "Apply" to save the settings. The firmware will commence according to the programmed settings. Press the "Update Now" to manually perform the firmware update.

- Check for New Firmware: Select an interval date from the dropdown menu.
- Auto Update: Select an interval and time to perform the firmware upgrades using the dropdown menu and open field.

When the information has been entered, select "Apply". The firmware will update according to the programmed settings.

- <u>Update by Web:</u>
 - Current Firmware Version: Displays the current firmware used by the EV-NETCARD card
 - Firmware update: Choose a specific folder and file to use for updating the firmware of the card, then press the "Update Now>>" icon to begin the update process.



		Envisio	n	Latest Events [0333:13] Internal diagnostic self-test pass [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm	sed.
	Information	About Firmware Update			
*	Configuration	Lindate by ETR/SETR			
1	Log Information	Protocol Type	FTP V		
$(\mathbf{\hat{l}})$	Management	FTP/SFTP Server			
En	vision Web	User			
File	e Manager	Password			
Ser	rial Port Debug			Update Now >> A	Apply
He	lp	Check for New Firmware	Every 1 Day		
AD Q		Auto Update	Every NO At (Hour	r : Minute)	
66					Apply
	•	Update by Web			
		Current Firmware Version	3.12.BA506.Para.4		
		Firmware Update	Choose File No file chosen	Update No	w >>
				Para Systems, Inc.	
				Tel: +1-972-446-7363 TOLL-FREE 800-238 e-mail: <u>service@minutemanups.com</u> Webpage: <u>http://www.minutemanups.con</u>	3-7272 <u>n</u>

4.5 SNMPView Lite

SNMPView Lite provides a single platform for real-time monitoring and programming of up to 9 active EV-NETCARD cards over a network connection.

- UPS Status
 - **UPS Status** The UPS Status page can provide a real-time display of up to 9 EV-NETCARD cards over a network connection. The monitoring screen will show the current UPS connection status in graphic mode with Voltage, Frequency, IP-address and other information. Any of the 9 active cards displayed can be removed and/or replaced with other cards on the network using the Configuration menu.

	Envision	Latest Events 109:22:28] ECO not Active 109:21:40] ECO Active 109:20:50] Output On
Information Configuration	UPS Status	
Log Information Management	192.168.168.8 IB	192.168.168.42 8
BNMPView Lite UPS Status Configuration		
Event Log Data Log	192.168.168.66 8 192.168.168.78 8	192.168.168.80 8
	192.168.168.92 ⁸	•
	L	



Configuration

- **UPS Configuration** The Configuration page provides a real-time list of up to 9 EV-NETCARD cards over a network connection. The cards listed on this page will be the same as the cards listed on the UPS Status page. Selecting any one card among the list will expand the detailed information on that card.
 - <u>Settings</u>: Review or Update and change the IP-address information for the card. The security level of the card, (SNMPv1, SNMPv2c, SNMPv3), can also be updated using this screen.
 - <u>Browser</u>: Selecting Browser will redirect the browser screen directly to the selected card.
 - <u>Delete</u>: Selecting Delete will remove the card from the list of monitored cards and from the UPS Status screen

		MAR [®] LOGIES Para Systems, Inc	En۱	vision			Latest Events [09:22:28] ECO not Active [09:21:40] ECO Active [09:20:50] Output On		
	Information	UPS Config	uration	System Configuration	on				
*	Configuration								
1	Log Information							<u>i</u> 2 +	
()	Management	NO.	Controlle	d UPS UPS	Status	System Name	System Location	Uptime	
뫎	SNMPView Lite	• 1	192.168.1	68.18:161 On	line	UPS Agent	My Office	119 days, 1:34:15.73	
UP Co Eve Da	S Status nfiguration ent Log ta Log	Input Freq.(Capac AC/Ba One/T	Volt.(V) Hz) ity(%) t Status hree Phase	125.0 60.0 100 AC Normal/Battery Normal 1-Phase	Output Volt.(V) Load(%) Battery Volt.(V) Temp.(°C/°F) Online Status	121.0 0 41.4 26.9/80.4 Online		⊗ <u>Settings</u> & <u>Browser</u> ☐ <u>Delete</u>	
		▶2	192.168.1	68.8:161 On	line			4 days, 5:20:29.17	

- **System Configuration** Provides an option to change the system settings for the cards included on the UPS Status and Configuration pages. The changes on this page will only affect the cards that are actively being monitored.
 - <u>SNMP</u>: View the current port settings and community settings for the active cards on the UPS Status page or make any changes desired. The SNMP polling interval for the cards also can be altered. Use the "Period of No Response" field to change the number of times the selected cards are pinged without response before an alarm is issued.
 - Log: The Log fields allow for activating or deactivating the Event and Data logging functions.
 The interval for the reporting of data and events can also be adjusted as well as the creation of a backup log, if desired.



		Envision		Latest Events [09:22:28] ECO not Active [09:21:40] ECO Active [09:20:50] Output On
	Information	UPS Configuration System Configurat	tion	
*	Configuration	SNMP		
1	Log Information	SNMP Broadcast Port (1-65534):	161	
(\mathbf{i})	Management	SNMP Broadcast Community:	public	
몲	SNMPView Lite	Local Receive Trap Port (1-65534):	162	
	S Status	SNMP Polling Every (1-60):	10	Secs
Cor	nfiguration	Period of No Respond (2-10):	3 🗸	
Eve	ent Log			
Dat	ta Log	Log		
		Save Event Log:	Yes 🗸	
		Save Data Log:	Yes 🗸	
		Save Data Log Every (10-600):	10	Secs (Not Less Than SNMP Polling Time)
		Backup Log:	Yes 🗸	
				Apply Reset

Event Log

- **Event Log** Provides a monthly summary of events that occurred to the selected cards on the UPS Status or Configuration pages. The default calendar of events is set to Monthly but can be changed to view the current daily events. Use the drop down menus, then select "Refresh", to look at previous months events. The drop down menus can also be used to select specific cards and the type of events to list: All, Severe, Warning and Information.
 - <u>Events List</u>: Features a filtered list of all the events noted on the calendar by the settings used.
 - <u>Events Census</u>: Displays the filtered list of events in a graphical pie chart.

		nvisi	ion					Latest Events 109:22:28 J ECO not Active 109:21:40 J ECO Active 109:20:50 J Output On
LIII Information	Event Log							3
🛠 Configuration								
Log Information		4 10 <>>	All Events	 All UPS 	✓ Refr	esh Today	Save	
() Management			0	- h - u 20	24 15			October 2024
器 SNMPView Lite			Uci	toper 20	024			Events List Events census
UPS Status	Sun.	Mon.	Tue.	Wed.	Thu.	Fri.	Sat.	[192.168.168.18 10-18 08:08:32]: UPS communication has been established.
Configuration	29	30	1 💿	2 💿	3 💿	4 💿	5 💿	[192.108.108.18 10-18 08:08:32]: VPS communication has been established. [192.168.168.8 10-18 08:08:32]: UPS communication has been established.
Event Log								[192.168.168.8 10-18 08:08:32]: Network communication has been established. [192.168.168.8 10-18 08:07:19]: UPS has switched to battery power.
	6 💿	7 💿	8 💿	9 6	10😶	11 🖸	120	[192.168.168.18 10-17 11:15:20]: UPS communication has been established. [192.168.168.18 10-17 11:15:20]: Network communication has been established. [192.168.168.8 10-17 11:15:20]: UPS communication has been established. [192.168.168.8 10-17 11:15:20]: Network communication has been established.
ĺ	130	14💿	15💿	16	17 4		190	[192.168.168.8 10-09 15-22 [192.168.168.8 10-09 15-22 [192.168.168.8 10-09 15-22 [192.168.168.8 10-09 15-22 [192.168.168.18 10-09 15-22
	201	210	220	230	24	250	260	[192.168.168.18 10-09 15-22 [192.168.168.18 10-09 15-22
	27	280	290	30💿	310	1	2	42,895 ~ 7,14%
								7,18%
								 UVS has switched to bottery power.
								UPS communication has been established.
								 Usitry power has been restored. Network communication has been established.


Data Log

• **Data Chart** – The data chart provides a running stream of input, output and load factors for a specific EV-NETCARD card based on data points from the time intervals set in the System Configuration page of SNMPView Lite. Select the individual card to monitor from the drop down menu at the bottom of the page. Scroll the mouse over any of the data points to see the specific values for that particular date and time. The beginning and ending intervals can be adjusted by moving the vertical start and finish dates



• **Data Log** – Provides the same information as the Data chart page but in a list of data points. The default information on the screen represents the latest data points. Press the refresh icon to update the information. To view earlier data points, select a date from the drop down menu at the bottom of the page.

To save the information, press the Save icon and the information will be compiled into a csv file which can be saved or viewed using a compatible viewer like Microsoft Excel.



		HAN En	visior	า						Latest Event [09:22:28] E0 [09:21:40] E0 [09:20:50] O	s 10 not Active 10 Active utput On	
	Information	Data Chart Data	Log Data Statis	tics								
*	Configuration											
1	Log Information	No. Controlled UPS	Date/Time	Input Volt.(V)	Output Volt.(V) Freq. (Hz)	Load(%)	Capacity(%)	Battery Volt.(V)	Temp.(°C °F)	System Name	System Location
\bigcirc	Management	1 192.168.168.18 2 2 192.168.168.18 2 2 192.168.168.18 2	024-10-22 14:40:24 024-10-22 14:40:14 024-10-22 14:40:04	124.1	120.3	60.0	0.0	100	41.4	26.9/80.4	UPS Agent	My Office My Office
格	SNMPView Lite	4 192.168.168.18 2	024-10-22 14:39:54 024-10-22 14:39:45	125.0	120.3	60.0	0.0	100	41.4	26.9/80.4	UPS Agent UPS Agent	My Office My Office
UPS	5 Status	6 192.168.168.18 2 7 192.168.168.18 2	024-10-22 14:39:35 024-10-22 14:39:24	125.0	120.3	60.0 60.0	0.0	100	41.4 41.4	26.9/80.4 26.9/80.4	UPS Agent UPS Agent	My Office My Office
Eve	nt Log	8 192.168.168.18 2 9 192.168.168.18 2	024-10-22 14:39:14 024-10-22 14:39:04	125.0 125.0	121.0 121.0	60.0 60.0	0.0	100 100	41.4 41.4	26.9/80.4 26.9/80.4	UPS Agent UPS Agent	My Office My Office
Dat	a Log	10 192.168.168.18 2 11 192.168.168.18 2	024-10-22 14:38:55 024-10-22 14:38:45	124.1	120.3 120.3	60.0 60.0	0.0	100	41.4	26.9/80.4 26.9/80.4	UPS Agent UPS Agent	My Office My Office
		12 192.168.168.18 2 13 192.168.168.18 2 14 192.168.168.18 2	024-10-22 14:38:35 024-10-22 14:38:24	125.0	120.3	60.0	0.0	100	41.4	26.9/80.4	UPS Agent UPS Agent	My Office
	1	14 192.168.168.18 2 15 192.168.168.18 2 16 192.168.168.18 2	024-10-22 14:38:04	125.0	120.3	60.0	0.0	100	41.4	26.9/80.4	UPS Agent	My Office My Office
		17 192.168.168.18 2 17 192.168.168.18 2 18 192.168.168.18 2	024-10-22 14:37:45	124.1	121.0	60.0	0.0	100	41.4	26.9/80.4	UPS Agent	My Office My Office
		19 192.168.168.18 2 20 192.168.168.18 2	024-10-22 14:37:24 024-10-22 14:37:14	124.1	120.3	60.0	0.0	100	41.4	26.9/80.4	UPS Agent UPS Agent	My Office My Office
		21 192.168.168.18 2 22 192.168.168.18 2	024-10-22 14:37:04 024-10-22 14:36:55	124.1 124.1	120.3	60.0 60.0	0.0	100	41.4	26.9/80.4 26.9/80.4	UPS Agent UPS Agent	My Office My Office
		23 192.168.168.18 2 24 192.168.168.18 2	024-10-22 14:36:45 024-10-22 14:36:34	125.0 125.0	121.0	60.0 60.0	0.0	100	41.4 41.4	26.9/80.4 26.9/80.4	UPS Agent UPS Agent	My Office My Office
		25 192.168.168.18 2 26 192.168.168.18 2	024-10-22 14:36:24	125.0 125.0	120.3 120.3	60.0 60.0	0.0	100	41.4 41.4	26.9/80.4	UPS Agent	My Office My Office
		Log Date: 2024/10/22		1 2	106 🕨 🚺	Go 1		UPS IF	192.168.168	.18 🛩		Refresh Save

• **Data Statistics** – The Data Statistics page provides a snapshot of minimum and maximum values for the input and output of a specific UPS with an installed EV-NETCARD card. The information is limited to a specific date which can be selected from the field at the bottom of the page. The information provided shows input and output voltage, frequency, UPS temperature, connected load information and battery voltage.

	LOG Para System	En En	visior			Latest Ev [09:22:28 [09:21:40 [09:20:50	<u>vents</u> 8] ECO not Active 9] ECO Active 9] Output On	
Information	Dat	a Chart Data	Log Data Statisti	ics				
🛠 Configuration	No.	Name	Number Of Data	Maximum Value	Minimum Value	Average Value	Variance	Standard deviation
Log Information	1	Input Volt.(V)	5292	127.7 00:11:11	123.3 08:27:01	125.4 2024-10-22	1.1 2024-10-22	1.1 2024-10-22
(i) Management	2	Output Volt.(V)	5292	121.0 00:01:11	120.3 00:00:01	120.6 2024-10-22	0.1 2024-10-22	0.3 2024-10-22
몲 SNMPView Lite	3	Load(%)	5292	0.0 00:00:01	0.0 00:00:01	0.0 2024-10-22	0.0 2024-10-22	0.0 2024-10-22
UPS Status	4	Freq.(Hz)	5292	60.0 00:00:01	60.0 00:00:01	60.0 2024-10-22	0.0 2024-10-22	0.0 2024-10-22
Configuration	5	Temp.(*C/*F)	5292	28.0/82.4 00:58:32	25.7/78.3 00:09:41	27.0/80.6 2024-10-22	0.4/1.3 2024-10-22	0.6/1.1 2024-10-22
Data Log	6	Battery Volt.(V)	5292	41.4 00:00:01	41.4 00:00:01	41.4 2024-10-22	0.0 2024-10-22	0.0 2024-10-22
	7	Capacity(%)	5292	100.0 00:00:01	100.0 00:00:01	100.0 2024-10-22	0.0 2024-10-22	0.0 2024-10-22
		Log Date: 2024/1	0/22	UPS	IP: 192.168.168.18	~		Refresh



Notes:



Additional Notices:

NOTICE: This product complies with the rules for Class B device, pursuant to Part 15 of the FCC rules for radio noise emissions from a digital apparatus.

These limits are designed to provide reasonable protection against such interference in a residential installation.

This equipment generates and uses radio frequency and if not installed and used properly, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. If this device does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna.
- Relocate the computer with respect to the receiver.
- Move the computer away from the receiver.
- Plug the computer into a different outlet so that the computer and receiver are on different branch circuits.
- Shielded communications interface cables must be used with this product.

Life Support Policy

Para Systems does not support the use of any of its products in life support applications where the failure or malfunction of the product can be reasonably expected to cause failure to life support devices or to significantly affect their safety or effectiveness. Furthermore, Para Systems does not recommend the use of any of its products in direct patient care.



Para Systems, Inc. 2850 Lake Vista Drive, Suite #110 Lewisville, TX 75067 800.238.7272

www.minutemanups.com

© 2025 PARA SYSTEMS, INC.

Minuteman Power Technologies and Envision are owned by Para Systems, Inc. All other trademarks are property of their irrespective owners.



Carte réseau Envision

Carte réseau EV-NETCARD-1G

Carte réseau EV-NETCARD-1GEXR

Manuel d'utilisation



Pour obtenir les renseignements les plus à jour, veuillez consulter la traduction originale en anglais. Si vous avez des questions sur l'exactitude des spécifications traduites, des informations de garantie, des caractéristiques du produit, etc., veuillez contacter notre équipe de service à la clientèle.



Informations sur le droit d'auteur Copyright © 2025, Para Systems, Inc. Tous droits réservés. La reproduction sans autorisation est interdite.

Assistance technique et coordonnées

Para Systèmes, Inc.

Tél. +1-972-446-7363 Numéro sans frais : 1-800-238-7272

Site Web :<u>www.minutemanups.com</u>

Courriel : <u>support@minutemanups.com</u>

minutemanups.com | 800.238.7272

Table des matières

CHAPITRE 1 : INTRODUCTION	4
1.1 Caractéristiques	4
1.2 Applications	5
CHAPITRE 2 : CARTE EV-NETCARD	5
2.1 Indicateur DEL EV-NETCARD	5
CHAPITRE 3 : INSTALLATION DU LOGICIEL	7
3.1 Installation du logiciel Envision	7
CHAPITRE 4 : Opérations et paramètres Envision	7
4.1 Découverte de la carte EV-NETCARD	9
4.2 Procédure de connexion	11
4.3 Mise à jour du micrologiciel	14
4.4 Interface Web et paramètres EV-NETCARD	16
4.4.1 Renseignements	16
Informations > Informations sur l'état de	16
l'onduleur > Renseignements sur l'état du	17
système > Informations sur la commande à	20
distance > Informations sur l'état du modem	21
SMS > EV-PROBE-TH	21
4.4.2 Configuration	22
Configuration > Configuration de l'onduleur	22
Configuration > Configuration du programme	25
marche/arrêt de l'onduleur > Réseau	29
Configuration > Configuration du	36
réseau local sans fil > SNMP	38
Configuration > Courriel	43
Configuration > SMS	46
Configuration > Configuration	49
Web/Telnet/FTP > BACnet	55
Configuration > Configuration	56
EV-SONDE-EH > Modbus	57



Configuration > Système	58		
4.4.3 Informations du journal	61		
Informations du journal > Journal des événements	61		
Informations du journal > Journal des données	62		
4.4.4 Gestion	64		
Gestion > Gestion Web Envision >	64		
Gestion du gestionnaire de	65		
fichiers > Gestion du débogage du	66		
port série > Aide	67		
Direction > À propos	67		
4.4.5 SNMPView Lite	69		
SNMPView Lite > État SNMPView Lite >	69		
Configuration SNMPView Lite > Journal	70		
des événements SNMPView Lite >	71		
Journal des données	72		
NOTES :	74		
Avis supplémentaires			



Chapitre 1 : INTRODUCTION

1.1 Caractéristiques

La carte Envision EV-NETCARD-1G et EV-NETCARD-1GEXR (EV-NETCARD) est une carte SNMP (Simple Network Management Protocol) pour la surveillance et la gestion des produits Minuteman UPS. L'EV-NETCARD permet le contrôle à distance de l'onduleur ainsi que la surveillance de son état actuel. Il peut également prendre en charge les connexions à un modem compatible pour l'envoi de notifications par SMS. L'EV-NETCARD est compatible avec l'EV-PROBE-TH et ses capteurs pour surveiller la température ambiante, l'humidité et l'état de l'eau. L'EV-NETCARD est facile à installer. Suivez les instructions figurant dans le guide d'installation rapide, inclus avec votre achat. Il peut également être téléchargé à partir du site Web de Minuteman à l'adresse suivante :<u>https://minutemanups.com/resource-library</u> ou utilisez le code QR ci-dessous :



Pour l'installation de plusieurs cartes EV-NETCARD, Minuteman offre son logiciel Envision Utility pour configurer les adresses IP et mettre en place des configurations pour la surveillance centralisée et les arrêts multiples sur différentes plateformes de systèmes d'exploitation. L'utilitaire Envision peut être téléchargé à partir de <u>https://</u> <u>minutemanups.com/resource-library</u>. Une fois installée, chaque carte peut être configurée avec des options et des paramètres avancés via l'interface du navigateur Web.

Fonctionnalités:

- (1)Fournit le MIB SNMP pour surveiller et contrôler l'onduleur à l'aide de n'importe quel système de gestion de réseau standard (NMS)
- (2) Détection automatique de Fast Ethernet 10M/100M/1000M ou configuration via Telnet, navigateur Web ou NMS
- (3)Prise en charge des protocoles TCP/IP, UDP, SNMP, Telnet, SNTP, PPP, HTTP, HTTPS, SMTP, FTP, Modbus, BACnet

(4) Prise en charge des cryptages SSL/TLS et SSH

(5)Fournit des outils de configuration et de mise à niveau faciles

(6) Envoyer un TRAP SNMP ; Courriel et textos pour les notifications d'événements.

(7) Rapport d'historique quotidien UPS par courriel automatique

- (8) Exécutez l'arrêt progressif des appareils en réseau avec notre logiciel Minuteman
- (9)Module complémentaire optionnel EV-PROBE-TH pour la surveillance de la température, de l'humidité et des alarmes. En option, des capteurs d'eau, de fumée et de contact sont aussi disponibles
- (10)Peut être utilisé avec un module complémentaire de clé WiFi tiers en option pour l'accès au réseau sans fil
- (11) Fonctionnalité de notification par SMS à l'aide d'un module complémentaire de modem GPRS tiers en option



1.2 Applications

- EV-NETCARD permet de surveiller l'onduleur au moyen d'un réseau

Lorsque la carte EV-NETCARD est installée dans un onduleur, le responsable informatique/réseau peut surveiller chaque état de l'onduleur via un ordinateur en réseau à l'aide d'un navigateur Web standard ou d'un NMS.

À l'aide d'un navigateur Web standard, entrez simplement l'adresse IP de la carte EV-NETCARD dans le champ URL pour accéder à l'interface utilisateur de la carte. Lorsqu'il est intégré dans un NMS, l'EV-NETCARD émet une alarme de piège lorsqu'une condition d'alimentation anormale se produit. Les fichiers de base d'informations de gestion (MIB) et de base de données d'informations sur les objets (OID), utilisés pour intégrer la carte EV-NETCARD dans un réseau SNMP, peuvent être trouvés et téléchargés sur le site Web de Minuteman à l'adresse suivante :<u>https:// minutemanups.com/resource-library</u>

- Envision fournit des utilitaires d'arrêt

En cas de panne de courant alternatif ou lorsqu'un onduleur est dans un état de batterie faible, l'Envision le logiciel, lorsqu'il est chargé sur un ordinateur en réseau connecté à la carte EV-NETCARD, peut être configuré pour enregistrer et fermer tous les fichiers et applications ouverts avant d'arrêter correctement le système d'exploitation et d'éteindre l'ordinateur. Cette fonctionnalité peut s'avérer essentielle pour éviter la corruption du système lorsqu'une anomalie d'alimentation se produit.

- EV-NETCARD pour la surveillance environnementale

La carte EV-NETCARD, avec ses ports USB, peut être connectée à un capteur/hub environnemental en option, l'EV-PROBE-TH, pour fournir des alarmes de température ambiante/humidité/fumée/incendie. Ces alarmes peuvent également être reçues sur la page Web Envision. Lorsqu'il est utilisé avec un NMS et qu'une condition anormale se produit, un signal d'alarme peut être envoyé au gestionnaire informatique/réseau.

Chapitre 2 : CARTE EV-NETCARD

2.1 Indicateurs DEL EV-NETCARD

	Ve	ert	Ja	une
	Sur	Clignotant	Sur	Clignotant
100M 몸몸 10M └ 1000M ┘	100 Mbit/s	Envoi Réception Donnée	10 Mbit/s	Envoi Réception Donnée

Lorsque les DEL vertes et jaunes sont toutes les deux allumées, la carte fonctionne en mode 1000M







D5		D4		
Vert		Bleu		
*				
Pouv	/oir	Communication		
Sur	À l'arrêt	Clignotant		
Normal	Non Pouvoir	Envoi/réception Donnée	RoHS	

REMARQUE :Lorsque la DEL ROUGE clignote, la carte met à jour le firmware. NE PAS éteindre l'alimentation tant que la mise à jour n'est pas terminée.



Chapitre 3 : Installation du logiciel

3.1 Installation du logiciel Envision

Téléchargement gratuit

Le logiciel utilitaire d'installation Envision est disponible gratuitement dans la bibliothèque de ressources minuteman.com. Aller à :<u>https://minutemanups.com/resource-library</u> et choisissez le**Accessoires et logiciels de réseau**onglet dans les options du menu. Sélectionner:**Logiciel utilitaire Envision**et suivez les instructions de téléchargement

	ENG V 📜 Order » Deal Registration ?				
VER TECHNOLOGIES	CTS BATTERIES SUPPORT PROGRAMS HOW TO BUY COMPANY RESOURCE LIBRARY				
PSs REMOTE POWER MANAGERS SNMP	CARDS UPS & RPM MIBS SUPPORT				
Minuteman SNMP Accessory Software Utilities NOTE: SentryPlus network communication requires opening of TCP and UDP ports 2710-2714					
Software Utilities for SNMP-NV6 Cards					
Software	Description				
EzSetting Discovery Utility (ZIP)	For SNMP-NV6 cards; Updated 8/18/14 (760 KB)				
SNMP MIB Files (ZIP)	For SNMP-NV6 cards; Updated 8/18/14 (13.7 KB)				
SNMP-NV6 Client (ZIP)	For SNMP-NV6 cards; Updated 6/11/13 (3.11 MB)				
SNMP-NV6 Manager (ZIP)	For SNMP-NV6 cards; Updated 8/18/14 (4.25 MB)				
Windows 32-bit Shutdown Agent (ZIP)	For SNMP-NV6 cards; Updated 1/22/16 (11 MB)				
Windows 64-bit Shutdown Agent (ZIP)	For SNMP-NV6 cards; Updated 1/22/16 (9 MB)				
Linux x86 Shutdown Agent (GZ TAR)	For SNMP-NV6 cards; Updated 1/22/16 (2.5 MB)				
Linux x64 Shutdown Agent (GZ TAR)	For SNMP-NV6 cards; Updated 1/22/16 (2.6 MB)				
EzSetting upgrade utility version 3.5i with Flash	For SNMP-NV6 cards: Updated 5/6/24 (3 MB)				

Chapitre 4 : FONCTIONNEMENT ET PARAMÈTRES D'ENVISION

-Présentation

Une fois l'utilitaire Envision installé et exécuté, il peut être utilisé pour découvrir, accéder et fournir des mises à jour du micrologiciel à toutes les cartes EV-NETCARD sur le réseau connecté.



La page principale de l'utilitaire Envision est divisée en 2 sections :



1.Liste en ligne des cartes EV-NETCARD

2. Sélection de la fonction



4.1 Découverte en ligne de cartes EV-NETCARD

Lorsque le logiciel utilitaire Envision est ouvert, il recherche automatiquement toutes les cartes EV-NETCARD disponibles en ligne sur le réseau, affichant le numéro de série, l'adresse IP et l'adresse MAC. Double-cliquez sur la carte EV-NETCARD spécifique avec une adresse IP valide et la page Web de cette carte ouvrira. (La liste s'actualise automatiquement toutes les 2 minutes.)



-Informations individuelles sur la carte EV-NETCARD

Cliquez sur n'importe quelle carte EV-NETCARD spécifique et la section inférieure affichera sa version matérielle et logicielle ainsi que l'adresse MAC. Il identifie également le nombre total de cartes EV-NETCARD trouvées par Envision sur le réseau et le nombre de cartes sélectionnées.





-Lancer l'interface utilisateur Web

Sélectionnez la carte EV-NETCARD spécifique dans la liste et cliquez sur Lancer l'interface utilisateur Web pour vous connecter à la page Web de la carte EV-NETCARD.



	POWER TECHNOLOGIES Envision						
	Information	System Information	UPS Information	Network Sta	atus Connections	Status	
UP	S Status						
Sys	tem Status	System Information					
Rer	mote Control	Hardware Version	EV-NET(CARD-1G	UPS Last Self Test		
SM	S Modem Status	Firmware Version	3.12.BA	506.Para.4	UPS Next Self Test		
EV-	PROBE-TH	Serial Number	HH5624	0900001			
*	Configuration	System Name	UPS Age	ent			
1	Log Information	System Contact	Adminis	strator			
	Management	Location	My Offic	te			
\mathbb{U}	Management	System Time	2000/01	/01 00:51:22			
몲	SNMPView Lite	Uptime	00:44:3	5			
		Warning will be initiated 10 minute(s) before Scheduled Shutdown Event					
		Send Email for Daily Repo	ort (No)				

-Paramètres réseau

Lors de la première connexion de la carte EV-NETCARD, assurez-vous que l'adresse IP et les autres paramètres réseau sont correctement saisis afin de vous connecter à la page Web de la carte EV-NETCARD via un navigateur Web ou HyperTerminal.

Lorsque vous choisissez d'obtenir une adresse IP via DHCP ou BOOTP, l'adresse IP et les autres paramètres réseau seront attribués par le réseau

EV-NETCARD prend en charge quatre protocoles réseau - HTTP / HTTPS / TELNET / SSH pour les préférences de gestion et de sécurité. Si des modifications sont apportées au numéro de port, la saisie de l'adresse IP complète avec le nouveau numéro de port sera nécessaire pour se connecter.

- Exemple : le numéro de port HTTP est modifié à 81
 L'adresse complète saisie dans le navigateur doit être « http://192.168.1.100:81 » (192.168.1.100 est l'adresse IP de l'EV-NETCARD)
- Exemple : le numéro de port Telnet est modifié à 24
 L'adresse complète saisie sur HyperTerminal doit être « http:// 192.168.1.100 24 » (192.168.1.100 est l'adresse IP de l'EV-NETCARD)

4.2 Procédure de connexion à Envision

Lorsque l'utilisation d'un mot de passe pour accéder à la carte EV-NETCARD est activée, il est nécessaire de saisir le mot de passe correct avant d'effectuer des modifications de configuration et des mises à niveau du micrologiciel.









4.3 Mise à jour du micrologiciel

- -Pour vérifier la dernière version disponible du micrologiciel EV-NETCARD, rendez-vous à <u>https://minutemanups.com/resource-library</u> et regarde sous le**Accessoires et logiciels de réseau** section.
 Vérifiez que le micrologiciel sélectionné est pour la carte EV-NETCARD et qu'il est compatible avec la version matérielle de la carte.
- -Options de mise à jour du micrologiciel de l'EV-NETCARD :
 - (1)Sélectionnez la carte EV-NETCARD spécifique dans la liste des utilitaires Envision.
 - (2)Appuyez et maintenez la touche CTRL enfoncée, puis sélectionnez plusieurs cartes EV-NETCARD dans la liste. Cette option permettra la mise à niveau de plusieurs cartes en même temps.
 - (3)Sélectionnez la première carte EV-NETCARD dans la liste des utilitaires Envision, puis appuyez et maintenez la touche MAJ avant de sélectionner la dernière des cartes EV-NETCARD dans la liste. Cette option permettra la mise à niveau de toutes les cartes EV-NETCARD de la liste.
- -AVERTISSEMENT: Veuillez vous assurer que lors de la sélection de plusieurs cartes EV-NETCARD, elles sont du même modèle.
- -AVERTISSEMENT: Si le processus de mise à niveau du micrologiciel échoue, redémarrez le processus du début jusqu'à ce que la mise à niveau soit réussie.
- Pendant le processus de mise à niveau, soit les DEL rouge et jaune clignoteront en alternance, soit la DEL rouge clignotera uniquement. NE PAS retirer l'alimentation ou la connexion réseau de la carte EV-NETCARD tant que le micrologiciel n'a pas été correctement mis à niveau. Une fois la mise à niveau terminée, la carte EV-NETCARD redémarrera automatiquement.



- À propos de

Affiche la version actuelle de l'utilitaire Envision





Rafraîchir la liste

La liste des cartes EV-NETCARD trouvées par l'utilitaire Envision s'actualisera automatiquement toutes les deux minutes. Cependant, il est aussi possible d'actualiser manuellement la liste en sélectionnant l'icône Rafraîchir la liste.



4.4 Interface Web et paramètres EV-NETCARD

4.4.1 Renseignements

- Statut UPS
 - **Statut UPS**-Cette page fournit l'état actuel de la connexion de l'onduleur en mode graphique avec la tension, la fréquence et d'autres informations.



		Latest Events [00:07:19] Internal diagnostic self-test passed. [00:00:30] Internal diagnostic self-test passed.				
UF Sy: Re	Information IS Status stem Status mote Control	UPS Status Alarm Status	ing: 120.0	Freque	?	
51W EV **	-PROBE-TH Configuration Log Information		UPS Manufa 5			
 (i) 品 	Management SNMPView Lite		UPS Firmwa 36-0 UPS Model: PAR/	25496.0004		

• État de l'alarme-La page État des alarmes offre un état actuel des différentes surveillances d'alarmes actives.

by Pare Systems, Inc.	
Information UPS Status Alarm Status	9
UPS Status	
System Status	
Remote Control Alarm Temperature	Temperature OK
SMS Modem Status Alarm Input Bad	Input OK
EV-PROBE-TH Alarm Output Bad	Output OK
Configuration Alarm Overload	UPS not OverLoad
Log Information Alarm Bypass Bad	Bypass OK
Alarm Output Off	Output On
Alarm UPS Shutdown	UPS not Shutdown
Alarm Charger Failure	Charger OK
Alarm System Off	System On
Alarm Fan Failure	Fan OK
Alarm Fuse Failure	Fuse OK
Alarm General Fault	General System OK
Alarm Awaiting Power	No Awaiting Power
Alarm Shutdown Pending	No Shutdwon Pending
Alarm Shutdown Imminent	No Shutdown Imminent
Alarm ECO	ECO not Active

-État du système

• Informations système-L'écran Informations système fournit toutes les informations de base sur l'EV-NETCARD telles que les versions du matériel et du micrologiciel, le numéro de série, l'emplacement de l'onduleur/de la carte, le calendrier des tests, etc.



		Latest E [00:07:1] [00:00:3	vents 9] Internal diagnostic self-test passed. 0] Internal diagnostic self-test passed.		
	Information	System Information	IPS Information Network Sta	atus Connections Status	?
UP. Sys	5 Status tem Status	System Information	·		
Rer	note Control	Hardware Version	EV-NETCARD-1G	UPS Last Self Test	
SM	S Modem Status	Firmware Version	3.12.BA506.Para.4	UPS Next Self Test	
EV-	PROBE-TH	Serial Number	HH56240900001		
*	Configuration	System Name	UPS Agent		
1	Log Information	System Contact	Administrator		
\bigcirc	Managament	Location	My Office		
\mathbf{U}	Management	System Time	2000/01/01 00:53:53		
格	SNMPView Lite	Uptime	00:47:07		
		Warning will be initiated 10	minute(s) before Scheduled Shutdov	wn Event	
		Send Email for Daily Report	(No)		

• Informations UPS-La page Informations sur l'onduleur affiche les renseignements sur l'onduleur et la batterie. Ces données sont obtenues directement à partir de l'onduleur ou des paramètres de la page Web de configuration de l'onduleur

		Envision		Latest Events [00:07:19] Internal diagnostic self-test passed. [00:00:30] Internal diagnostic self-test passed.
	Information	System Information UPS Information	Network Status	Connections Status
UP	'S Status	, ,		
Sy	stem Status	UPS Information		
Re	mote Control	UPS Manufacturer	5	
SN	IS Modem Status	UPS Firmware Version	36-005496.0004	
EV	-PROBE-TH	UPS Model	PARA1K	
×	Configuration	Battery Information		
1	Log Information	Date of last battery replacement	01/17/2024	
$(\mathbf{\hat{i}})$	Management	Rating Information		
뫎	SNMPView Lite	Nominal Input Voltage	120.0 V	
		Nominal Input Frequency	60.0 Hz	
	4	Nominal Output Voltage	120.0 V	
		Nominal Output Frequency	60.0 Hz	
		Nominal Volt-Amp Rating	1000 VA	
		Nominal Output Power	900 W	
		Nominal Low Battery Time	3 mins	
		Nominal Battery Life	0 days	
		Low Voltage Transfer Point	55 V	
		High Voltage Transfer Point	150 V	
		-		

• État du réseau-La page État du réseau fournit les informations d'adresse réseau de la carte EV-NETCARD active.

			Env	vision			Latest Events [00:07:19] Internal diagnostic self-test passed. [00:00:30] Internal diagnostic self-test passed.
	Information		System Information	UPS Information Netw	ork Sta	tus Connections	Status
UP	S Status		Eth annat			Cananal	
Sys	item Status		Ethernet	00:02:54:14:25:50		General	anto antali com
SM	S Modem Status		MAC Address	1000Mbps Full Duploy		Time Server	smip.gmail.com
EV-	PROBE-TH		connection type	Tooombps Full-Duplex			poor.nrp.org
*	Configuration					PPPOE IP	
1	Log Information						
$\widehat{1}$	Management		IPv4			IPv6	
		•	IP Address	192.168.168.8		IP Address	
ठठ	SNMPView Lite		Subnet Mask	255.255.255.0		LinkLocal Address	fe80::203:eaff:fe14:7f6d/64
			Gateway	192.168.168.1		6to4 Address	
			Primary DNS Server	8.8.8.8		Gateway	
			Secondary DNS Server	8.8.4.4		Primary DNS Server	
						Secondary DNS Serv	er

• État de la connexion-La page État de connexion enregistre les événements de connexion pour les différents protocoles de communication sur la carte EV-NETCARD active.

	Envision		Latest Events [00:07:19] Internal diagnostic self-test passed. [00:00:30] Internal diagnostic self-test passed.
Information	System Information UPS Information Network Status	Connections Status	?
UPS Status			
System Status	HTTP/HTTPS	TELNET/SSH	
Remote Control	[2000/01/01 01:00:02] ::ffff:192.168.168.180 login	There is no latest data.	
SMS Modem Status	[2000/01/01 00:59:51] ::ffff:192.168.168.180 logout		
EV-PROBE-TH	[2000/01/01 00:59:02] ::ffff:192.168.168.180 login		
St C C I	[2000/01/01 00:58:51] ::ffff:192.168.168.180 logout		
Configuration	[2000/01/01 00:58:02] ::ffff:192.168.168.180 login		
Log Information	[2000/01/01 00:57:52] ::ffff:192.168.168.180 logout		
Log michinghon	[2000/01/01 00:57:02] ::ffff:192.168.168.180 login		
(i) Management	[2000/01/01 00:56:51] ::ffff:192.168.168.180 logout		
品 SNMPView Lite			
	FTP/FTPS	Modbus	
	SNMP [1970/01/01 00:00:01] [192:168.168.8];51361 .6.1.2.1.1.4.0		•
	[1970/01/01 00:00:01] [192.168.168.8]:51361 .6.1.4.1.935.1.1.1.3.2.1.0		
	[1970/01/01 00:00:01] [192.168.168.8]:51361 .6.1.4.1.935.1.1.1.5.2.1.0		
	[1970/01/01 00:00:01] [192.168.168.8]:51361 .6.1.2.1.1.4.0		
	[1970/01/01 00:00:01] [192.168.168.8]:51361 .6.1.4.1.935.1.1.1.3.2.1.0		
	[1970/01/01 00:00:01] [192.168.168.8]:51361 .6.1.2.1.1.4.0		
	[1970/01/01 00:00:01] [192.168.168.8]:51361 .6.1.4.1.935.1.1.1.3.2.1.0		
	[1970/01/01 00:00:01] [192.168.168.8]:51361 .6.1.4.1.935.1.1.1.5.2.1.0		



• Sans fil-La page d'état sans fil s'affiche lorsqu'une clé Wi-Fi est connectée à la carte EV-NETCARD. Il fournira les détails des informations de configuration réseau pour le dongle connecté.

		Envision	tic self-test passed.
	Information	System Information UPS Information Network Status Connections Status Wireless Status	?
U	PS Status		
Sy	stem Status	Ethernet General	
Re	emote Control	MAC Address F0:09:0D:0D:91:2C Primary DNS Server	
E/		Secondary DNS Server	
*	Configuration	IPv4 IPv6	
1	Log Information	IP Address IP Address	
$(\hat{0})$	Management	Subnet Mask LinkLocal Address	
몲	SNMPView Lite	Gateway Gateway	

- Télécommande

La page Contrôle à distance peut être utilisée pour effectuer à distance une variété de tests sur l'onduleur. Sélectionnez le test à faire, puis cliquez sur l'icône Appliquer pour l'exécuter.



	Envision
Information	Remote Control
UPS Status	
System Status	Miscellaneous
SMS Modem Status	Quick Battery Test
EV-PROBE-TH	O General Systems Test
St Configuration	O Deep Battery Calibration
	O Cancel Test
Log Information	O Assign the Number of External Battery Pack 0
(i) Management	○ Economy Mode Disable ECO ✓
品 SNMPView Lite	O Immediately Turn on the Receptacle Bank 0
	O Turn on the Receptacle Bank o with delay o seconds
	O Cancel turn-on the Receptacle Bank 0
<	O Immediately Turn off the Receptacle Bank 0
•	O Turn off the Receptacle Bank 0
	O Reboot UPS
	O Audible Alarm Enabled
	O Test until battery capacity below 10 %
	Apply Reset

- État du modem SMS

Lorsque l'EV-NETCARD est connecté à un modem SMS optionnel, cette page d'état fournira les détails du modem et son état de connexion.

	Envision	Latest Events [00:07:19] Internal diagnostic self-test passed. [00:00:30] Internal diagnostic self-test passed.			
Information	SMS Modem Status	0			
UPS Status System Status	Modem Information				
Remote Control SMS Modem Status	Modem Manufacturer				
EV-PROBE-TH	Modem Firmware Version				
Configuration	GSM Modem Current Status				
Log Information	Service Provider				
SNMPView Lite	Signal Strength				
	SIM card PIN is correct or not				

- SONDE EV-TH

Cette page montre l'état environnemental de l'endroit où l'EV-PROBE-TH est installé. Il comprendra également des renseignements sur l'état de tous les capteurs connectés à l'EV-PROBE-TH et à l'EV-NETCARD.



		MAN Envis	<u>Latest E</u> [00:07:1 [00:00:3	Latest Events [00:07:19] Internal diagnostic self-test passed. [00:00:30] Internal diagnostic self-test passed.		
	Information	EV-PROBE-TH			9	
UP	S Status	EV_PPOBE_TH Status				
Sys Re	mote Control	Environmental Temperature	Unknown	Security1 Status	Unknown	
SM	IS Modem Status	Environmental Humidity	Unknown	Security2 Status	Unknown	
EV	-PROBE-TH	Water Status	Unknown	Security3 Status	Unknown	
*	Configuration	Gas Status	Unknown	Security4 Status	Unknown	
1	Log Information	Smoke Status	Unknown	Security5 Status	Unknown	
	Management			Security6 Status	Unknown	
	Management			Security7 Status	Unknown	
格	SNMPView Lite					
					Reset Alarm	

4.4.2 Configuration

- Configuration de l'onduleur
 - Propriétés de l'onduleur (veuillez vous référer aux spécifications de votre onduleur)-Les valeurs par défaut répertoriées sur la page Configuration>UPS sont signalées à partir de l'UPS connecté.**AVERTISSEMENT:**Tout changement apporté à ces valeurs affectera l'état du rapport d'alarme du logiciel Envision.
 - <u>Type de communication UPS :</u> Afin d'établir la connexion entre EV-NETCARD et votre modèle d'onduleur Minuteman, vérifiez que le type de communication de l'onduleur est défini sur : Minuteman.

Si la carte EV-NETCARD ne reconnaît pas l'onduleur connecté, contactez le soutien Minuteman à :[courriel protégé] pour obtenir de l'aide.

- <u>Date du dernier remplacement de la batterie :</u> La date par défaut doit être la date de fabrication d'origine de l'onduleur. Lors du remplacement des piles, entrez la date d'installation des nouvelles piles, en utilisant le format : mm/jj/aaaa
- <u>Tension d'entrée nominale (V)</u>: Affiche le seuil d'alarme par défaut pour la norme de tension d'entrée nominale utilisée par l'onduleur et son équipement connecté. (120 V, 208 V, 220 V, 230 V ou 240 V). Pour modifier le réglage de l'alarme, entrez une nouvelle valeur dans le champ et confirmez en appuyant sur « Appliquer »
- <u>Fréquence d'entrée nominale (Hz)</u>: Affiche le seuil d'alarme par défaut pour la norme de fréquence nominale d'entrée du réseau électrique utilisée par l'onduleur et son équipement connecté. (50 Hz ou 60 Hz).
 Pour modifier le réglage de l'alarme, entrez une nouvelle valeur dans le champ et confirmez en appuyant sur « Appliquer »
- <u>Tension de sortie nominale (V)</u>: Affiche le seuil d'alarme par défaut pour la tension de sortie nominale standard fournie par l'onduleur à son équipement connecté. (120 V, 208 V, 220 V, 230 V ou 240 V). Pour modifier le réglage de l'alarme, entrez une nouvelle valeur dans le champ et confirmez en appuyant sur « Appliquer »
- <u>Fréquence de sortie nominale (Hz)</u> : Affiche le seuil d'alarme par défaut pour la valeur nominale



norme de fréquence de sortie fournie par l'onduleur à ses appareils connectés. (50 Hz ou 60 Hz) Pour modifier le réglage de l'alarme, entrez une nouvelle valeur dans le champ et confirmez en appuyant sur « Appliquer »

- <u>Puissance nominale en volt-ampère (VA)</u>: Affiche le seuil d'alarme par défaut pour la capacité maximale de l'onduleur connecté.
- Pour modifier le paramètre de l'alarme, sélectionnez le champ, entrez la nouvelle valeur, puis appuyez sur « Appliquer » pour confirmer.
- Puissance de sortie nominale (W) :Affiche le seuil d'alarme par défaut pour la charge maximale connectée à l'onduleur. Pour modifier le réglage de l'alarme, entrez une nouvelle valeur dans le champ et confirmez en appuyant sur « Appliquer »
- <u>Faible durée nominale de la batterie (min)</u> :Affiche l'autonomie estimée par défaut de l'onduleur en mode batterie pendant une panne de courant. Pour modifier le seuil d'alarme, entrez une nouvelle valeur dans le champ et confirmez en appuyant sur « Appliquer »
- <u>Durée de vie nominale de la batterie (jours)</u>: Affiche le seuil de réglage de l'âge des batteries avant qu'une alarme ne soit émise. Pour modifier le seuil d'alarme, entrez une nouvelle valeur dans le champ et confirmez en appuyant sur « Appliquer »
- Point de transfert basse tension (V): Affiche le seuil d'alarme de tension d'entrée le plus bas auquel
 l'onduleur passera en mode batterie ou reviendra du mode batterie. Pour modifier le seuil de l'alarme,
 entrez une nouvelle valeur dans le champ et confirmez en appuyant sur « Appliquer ».
- Point de transfert haute tension (V): Affiche le seuil d'alarme de tension d'entrée le plus élevé auquel l'onduleur passera en mode batterie ou reviendra du mode batterie. Pour modifier le seuil de l'alarme, entrez une nouvelle valeur dans le champ et confirmez en appuyant sur « Appliquer ».
- <u>Type d'arrêt</u> :Ce menu déroulant répertorie les paramètres par défaut de l'onduleur lors de l'exécution d'une action d'arrêt. Les options sont : Arrêter la sortie seulement ou arrêter l'onduleur.

	Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm		
L Information	UPS Properties Test Log Warning Thre	shold Value	0
🛠 Configuration		I	
UPS Configuration	UPS Communication Type	Minuteman	-
UPS On/Off Schedule	Date of Last Battery Replacement (MM/dd/yyyy)	01/17/2024]
Wireless LAN	Nominal Input Voltage	120.0]v
SNMP	Nominal Input Frequency	60.0	Hz
+ Notification	Nominal Output Voltage	120.0	V
Web/Telnet/FTP	Nominal Output Frequency	60.0	Hz
BACnet	Nominal Volt-Amp Rating	1000	VA
EV-PROBE-TH	Nominal Output Power	900]w
Modbus	Nominal Low Battery Time	3	mins
System	Nominal Battery Life	0	days
Log Information	Low Voltage Transfer Point	55]v []
(i) Management	High Voltage Transfer Point	150]v
品 SNMPView Lite	Shutdown Type	UPS Output Only 🗸	
			Apply Reset



• Journal de test

- <u>Testez UPS tous les</u>: Définit les options pour la fréquence des tests de l'onduleur. (Semaine, 2 semaines, Mois, Trimestre) sont les sélections disponibles.
- Faites l'essai de l'onduleur sur :Les options de ce paramètre sont basées sur la sélection « Tester l'onduleur tous ».
- Semaine ou 2 semaines : sélectionnez le jour du test hebdomadaire
- Mois : Sélectionnez le jour du mois (1-31)
- Trimestre : Sélectionnez le mois de départ. puis la date du mois.
- <u>Heure de début du test UPS (hh:mm)</u> :Entrez l'heure de la journée pour commencer le test (en utilisant une horloge de 24 heures)
- <u>Type de test UPS</u> :Sélectionnez le type de test à effectuer. (Batterie rapide, Batterie profonde, Général, Avertissement de batterie faible)
- Journal de données UPS : Entrez la durée, en minutes, de l'intervalle d'enregistrement des données de l'onduleur.

	Envision		Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm			
Information UPS Properties Test Log Warning Threshold Value						
🛠 Con iguration	Test UPS					
UPS Configuration	Test UPS every	None 🗸				
UPS On/Off Schedule	Start Time of UPS Test (HH:mm) (24-hour time					
Wireless LAN	format)	\odot				
SNMP	UPS Test Type	Quick Battery Test	~			
+ Notification						
Web/Telnet/FTP	UPS Recorder					
BACnet	UPS Data Log	0	Minute(s) (-1 = Stop Recording)			
Modbus						
System						
Log Information			Apply Reset			
(i) Management						
品 SNMPView Lite						

• Valeur du seuil d'avertissement-Cette page permet de définir la période de temps après laquelle l'EV-NETCARD enverra un message d'avertissement de déconnexion. Ce message d'avertissement sera envoyé après que EV-NETCARD aura perdu le contact avec l'onduleur pendant la durée spécifiée.

	Envision	Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
Information	UPS Properties Test Log Warning Threshold V	?
Con iguration	Time out after loss of connection 30 seconds 💙	
Network		
SNMP		Apply Reset
+ Notification		
Web/Telnet/FTP BACnet		
EV-PROBE-TH		
Modbus		
Log Information		
(i) Management		
器 SNMPView Lite		

- Programme de marche/arrêt UPS

• Action UPS -Cette page est destinée à définir les paramètres des actions de l'onduleur lorsqu'un événement d'alimentation ou d'onduleur se produit. Pour terminer l'action, définissez les paramètres d'heure de début/fin, puis choisissez l'événement, l'action UPS et tout délai, si vous le souhaitez. Appuyez sur l'icône « Ajouter » pour lancer l'opération. Plusieurs actions et événements peuvent être configurés et mis en œuvre. Pour supprimer une action, cochez la case de droite à côté des éléments d'action, puis sélectionnez « [Supprimer] ».

	Envision	Latast Events [03:33:13] Internal diagnostic self-test passed. [02:30:18] Warning! Smoke detected. [02:48:30] Option5 Alarm		Envision	Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
Information	UPS Action Remote Shutdown Weekly Schedule Date Schedule Wa	e On Lan 🕜	Information	UPS Action Remote Shutdown Weekly Schedule Date Schedule Wa	ke On Lan 📀
Con iguration UPS Configuration UPS On/Off Schedule Network	During [00:00 ③]-[23:59 ④]; If [UP5 Load Overrun v] occ	ar, then turn off UPS valter 1 minutes.	Con iguration UPS Configuration UPS On/Off Schedule Network	During (00:00 ()-[23:59 (), if [UPS Load Overrun) oc	cur, then turn off UPS vafter 1 minutes.
Wireless LAN SNMP + Notification Web/Telnet/FTP	No. During Time Interval(HH:mm) Event 1 00:00 - 23:59 UPS Load Overrun	Device Delay Time [Delete] UPS 1	Wireless LAN SNMP + Notification Web/Telnet/FTP	No. During Time Interval(HH:mm) Event 1 00:00 - 23:59 UPS Load Overrun	shutdown Host1 Device shutdown Host2 UPS shutdown Host3
BACnet EV-PROBE-TH Modbus System			BACnet EV-PROBE-TH Modbus System		shutdown Hosts shutdown Host6 shutdown Host7 shutdown Host8
Log Information Management SNMPView Lite			Log Information Management SNMPView Lite		



			GIES Systems, Inc.	En Envi	sion		<mark>vents</mark> 2] Tes 6] No 6] Sys	t in progress Awaiting Power tem On	
	Information		UPS Action	Remote Shutdown	Weekly Schedule	Date Schedule	Wake On Lan		?
*	Configuration								
UP	S Configuration		During 00:00	() - 23:59 () , if	UPS Load Overrun	~	occur, then turn of	f UPS →after	1 minutes.
Ne Wi	twork reless LAN								
SN	MP		No. D	uring Time Interval(HH:m	n) Event		Device	Delay Time	[Delete]
+ No	tification		1 08	8:00 - 17:00	AC Power Failed		host1()	1	
We	eb/Telnet/FTP		2 09	8.00 - 17.00	AC Power Failed		host2()	1	
BA	Cnet		2 00	3.00 - 17.00	AC FOWER Failed		host2()	1	
EV	-PKUBE-TH		3 08	8:00 - 14:00	UPS Battery Low		nost3()	1	
Sys	stem		4 08	8:00 - 17:00	UPS Battery Low		UPS	3	
	Log Information	L							
\bigcirc	Management								
묢	SNMPView Lite								

• Arrêt à distance-La page d'arrêt à distance est destinée à programmer la carte EV-NETCARD pour émettre une commande d'arrêt d'un serveur réseau (ou d'un autre ordinateur réseau) sans utiliser de logiciel d'arrêt installé. Les événements doivent d'abord être ajoutés sous l'onglet « Action UPS ». Une fois configuré, entrez l'adresse IP du serveur correspondant identifié dans l'onglet « Arrêt à distance » pour être arrêté soit par SSH soit par Telnet avec une commande d'arrêt compatible pour le système serveur. (Le serveur Telnet doit être activé sur le PC.)

Par exemple : pour arrêter l'hôte 1 (serveur Windows) et l'hôte 2 (serveur Linux) après 1 minute en cas de panne de courant secteur, commencez par l'onglet « Action UPS ». Sélectionnez l'événement « Panne d'alimentation secteur », puis sélectionnez « Arrêter l'hôte 1 » et appuyez sur « Ajouter ». L'action sera ajoutée à la liste des événements. Répétez ce processus pour l'hôte 2.

Envision Latest Events [0333:13] Internal diagnostic self-test passed. [0333:13] Varingt Smoke detected. [0248:03] Option5 Alarm								
L Information	UPS Action	Remote Shutdo	wn W	eekly Sched	lule Date Sch	nedule Wake	On Lan	?
🛠 Con iguration								
UPS Configuration UPS On/Off Schedule Network	D	omain Name / IP	Login Mode	Port	User Name	Password	Shutdown Commands	
Wireless LAN	Host1		SSH 🗸	· 22			halt	st
SNMP	Host2		SSH 🗸	22			halt	st
+ Notification	Host3		SSH 🗸	22			halt	st
Web/Telnet/FTP	Host4		SSH V	22			halt	st
BACnet	Host5		SSH V	22			halt Tes	st
EV-PROBE-TH	Hostf			122			balt To	
Modbus	Host7		SSIT 1	22			halk Ta	
Log Information	Host8		SSH V	22			halt Tes	st
(i) Management								
品 SNMPView Lite								
							Apply Reset	1



Une fois ces deux actions définies, accédez à l'onglet « Arrêt à distance » et entrez les adresses IP de domaine pour l'hôte 1 et l'hôte 2. Sélectionnez Telnet ou SSH pour l'accès, entrez le nom d'utilisateur/mot de passe du serveur, puis entrez la commande d'arrêt pour ce système d'exploitation. Pour Windows, « shutdown /s » est la commande d'arrêt. Pour Linux, « halt » est la commande. Pour MAC OS, la commande d'arrêt est « sudo shutdown ».

Voici une liste des commandes d'arrêt pour les systèmes d'exploitation les plus courants :

- Windows : arrêt/?
- Linux : arrêt aide
- MAC : arrêt sudo

• Horaire hebdomadaire-Cet onglet permet de définir un horaire hebdomadaire pour allumer/éteindre l'onduleur. Dans l'exemple ci-dessous, l'onduleur est arrêté à 17 h le vendredi soir et redémarré à 8 h le lundi matin.

nation UPS Action	Remote Shutdown	Weekly Schedule	Date Schedule	Wake On Lan		
guration		UPS Off	UPS On	UPS On Perio	bd	Apply Reset
ation	Sunday	Monday Tuesda	w Wednesday	Thursday	Friday	Saturday
hedule	00:00		,,			
	01:00					
	02:00					
	03:00					
	04:00					
тр	05:00					
	06:00					
	07:00					
1	08:00					
	09:00					
	10:00					
ormation	11:00					
	12:00					
ement	13:00					
iow Lite	14:00					
	15:00					
	16:00					
	17:00					
	18:00					
	19:00					
	20:00					
	21:00					
	22:00					
	23:00					

• Calendrier des dates-L'option de menu Date Schedule définit une date et une heure individuelles pour mettre sous/hors tension un onduleur. Si cette option est activée, les paramètres de cette page remplaceront les paramètres du calendrier hebdomadaire. Sélectionnez n'importe quelle date dans le calendrier et appuyez sur l'icône « ajouter ». Une fenêtre apparaîtra avec une référence horaire. Choisissez une heure et sélectionnez « UPS On » ou « UPS Off » et appuyez sur « OK ». Pour ajouter des dates et des heures, répétez le processus.



Pour lancer un message d'avertissement avant l'arrêt programmé de l'onduleur, sélectionnez une option dans le menu déroulant au bas de la page. Une fois défini, la carte EV-NETCARD enverra le message à une heure prédéterminée avant l'action d'arrêt. Une fois la programmation terminée, appuyez sur l'icône « Appliquer ».

	OGIES ara Systems, Ind	En	vis	sio	n					Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
Information	UPS Act	ion Rem	ote Shu	tdown	Weekly	y Sched	ule Da	te Schedule	Wake On	Lan Ø
Con iguration								On		Period
JPS Configuration				_	015 011			011		citod
IPS On/Off Schedule	<		200	0 Janu	ary		>		Da	te Schedule List
etwork								No.	Events	Schedule Action
'ireless LAN	Su	n Mon	Tue	Wed	Thu	Fri	Sat			
NMP										
otification	2/	. 97	28	29	30	31				
/eb/Telnet/FTP	20) _/	20	27	50	01	9			
ACnet										
V-PROBE-TH	2	3	4	5	6	7	8			
odbus										
ystem		10	11	12	13	14	15			
Log Information										
) Management 🛛	14	17	18	19	20	21	22			
5 SNMPView Lite										
	23	3 24	25	26	27	28	29			
	30) 31	1	2	3	4	5			
										Add Apply Reset
		TH	ie interval l	between the	e UPS Off a	ind the ne	xt UPS On r	ust be less than i	7 days, or the n	ext UPS On might lose its effect.
				Warni	ing will be	e initiateo	d 10 minu	es 🗸 before Sc	heduled Shu	tdown Event

• Réveil sur le réseau local-Cette option de menu programme le signal de la carte EV-NETCARD pour réveiller un ordinateur en réseau lorsque l'alimentation secteur est rétablie ou lorsque la capacité de la batterie de l'onduleur atteint son pourcentage préconfiguré. (Assurez-vous que l'ordinateur prend en charge la fonction Wake On Lan et qu'elle est activée dans le BIOS.) Entrez l'adresse IP de l'ordinateur cible et les paramètres pour programmer la fonction Wake. Pour plusieurs ordinateurs, répétez le processus pour chaque ordinateur. Une fois terminé, appuyez sur l'icône « Appliquer ».

					POWER TECHNOLOGIES
	Envisio	n			Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
n	Remote Shutdown	Weekly Schedule	Date Schedule	Wake On La	an 🥄 🥵
ett	ings				Î
	Host1 I	P:		MAC:	Test
	Host2	P:		MAC:	Test
	Host3	P:		MAC:	Test
	Host4	P:		MAC:	Test
	Host5 I	P:		MAC:	Test
	Host6	P:		MAC:	Test
	Host7	P:		MAC:	Test
	Host8	P:		MAC:	Test
201	ıs				

Apply Reset

Information UPS Action Remote Shutdown Weekly Schedule Date Schedule Wake On Lan PS Configuration PS Configuration Host1 IP: MAC: Test PS On/Off Schedule Host3 IP: MAC: Test Host3 IP: MAC: Test Host3 IP: MAC: Test Host5 IP: MAC: Test Host8 IP: MAC: Test Wake up remote host after power restore Wait until battery capacity reaches to 10 %. Wait until battery capacity reaches to 10 %. Wait until battery capacity reaches to 10 %.		MAN [®] E	nvisio	n		Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm			
Conjugration PS Configuration PS On/Off Schedule tetwork Marcian MP outfloation veb/Telnet/FTP Acnet VPROBE-TH vodus vsten Log Information Management SNMPView Lite Wake up remote host after UPS output restore Wake up remote host after UPS output restore	Information	UPS Action R	emote Shutdown	Weekly Schedule	Date Schedule Wak	ke On Lan			
PS Configuration IPS On/Off Schedule letwork Host1 Host2 Host3 IP: MAC: Test Host4 IP: MAC: Test Host5 IP: Management SNMPView Lite Wake up remote host after power restore Wait until battery capacity reaches to 10 Wait until battery capacity reaches to 10 Wait until battery capacity reaches to 10	Con iguration	General Setting	۰ ۶						
IPS On/Off Schedule letwork Hosta Hosta <th>JPS Configuration</th> <th>General Setting</th> <th>s</th> <th></th> <th>MAC</th> <th>Tort</th>	JPS Configuration	General Setting	s		MAC	Tort			
etwork Inst2 IP. Intx2 IES Miredess LAN Host3 IP. MAC. Test NMP Host4 IP. MAC. Test etb/felnet/FTP MAC. Test MAC. Test ACnet Host5 IP. MAC. Test Host5 IP. MAC. Test Host5 IP. MAC. Test Host6 IP. MAC. Test Host7 IP. MAC. Test Host8 IP. MAC. Test Wake up remote host after power restore Wake up remote host after power restore Wait until battery capacity reaches to 10 %. SNMPView Lite Wake up remote host after UPS output restore Wait until battery capacity reaches to 10 %.	IPS On/Off Schedule		ost2 ID:		MAC:	Test			
irreless LAN IP: MAC. IES NMP Host5 IP: MAC. IES otification Host5 IP: MAC. IES Host5 IP: MAC. IES ACnet Host5 IP: MAC. IES ACnet Host5 IP: MAC. IES ACnet Host5 IP: MAC. IES Host5 IP: MAC. IES IES Miscellaneous Management Waike up remote host after power restore Waik until battery capacity reaches to 10 %. SNMPView Lite Waik up remote host after UPS output restore Wait until battery capacity reaches to 10 %.	etwork		vst2 IP.		MAC.	Test			
NNP Host4 IP MAC: Test otification Host5 IP: MAC: Test Host6 IP: MAC: Test Host6 IP: MAC: Test Host7 IP: MAC: Test Host8 IP: MAC: Test Mace Wake up remote host after power restore Wake up remote host after power restore Wait until battery capacity reaches to 10 %. SNMPView Lite Wait until battery capacity reaches to 10 %. Mace Mace <th>/ireless LAN</th> <th></th> <th>IP:</th> <th></th> <th> MAC.</th> <th>Test</th>	/ireless LAN		IP:		MAC.	Test			
othication Hosts IP: MAC: Test Nachet Host6 IP: MAC: Test Host7 IP: MAC: Test Host8 IP: MAC: Test Macet Host8 IP: MAC: Test Miscellaneous Maxeup remote host after power restore Wait until battery capacity reaches to 10 %. SNMPView Lite Wake up remote host after UPS output restore Wait until battery capacity reaches to 10 %.	NMP	HO	ost4 IP:		MAC:	lest			
eb/lend/lp Host6 IP: MAC: Test ACnet Host7 IP: MAC: Test Host8 IP: MAC: Test MostBare Mascellaneous Mac: Test Management Wait until battery capacity reaches to 10 %. Wait until battery capacity reaches to 10 %. SNMPView Lite Wait until battery capacity reaches to 10 %. Apply Reset	otification	H	ost5 IP:		MAC:	Test			
Aritet Host7 IP: MAC: Test Host8 IP: MAC: Test Host8 IP: MAC: Test MAC: MAC: Test MAC: MAC: Test MAC: Test MAC: MAC: Test MAC: MAC: MAC: MAC: Test MAC: MAC: MAC: MAC: MAC: MAC: MAC: MAC:	eb/Teinet/FTP	H	ost6 IP:		MAC:	Test			
Host8 IP: MAC: Test odbus Miscellaneous Image: Comparison of the state power restore Image:		H	ost7 IP:		MAC:	Test			
Stem Miscellaneous Log Information Wake up remote host after power restore Wait until battery capacity reaches to 10 %. SNMPView Lite Wake up remote host after UPS output restore Wait until battery capacity reaches to 10 %. Apply Reset	Indhus	Ho	ost8 IP:		MAC:	Test			
Log Information Management SNMPView Lite Wake up remote host after UPS output restore Wait until battery capacity reaches to 10 %. Wait until battery capacity reaches to 10 %.	/stem	Miscellaneous							
Management Wait until battery capacity reaches to 10 %. SNMPView Lite Wake up remote host after UPS output restore Wait until battery capacity reaches to 10 %.	Log Information	Wake up remo	te host after power res	tore					
SNMPView Lite Wake up remote host after UPS output restore Wait until battery capacity reaches to 10 %.	Management	Wait until battery capactiy reaches to 10 %.							
Wait until battery capacity reaches to 10 %.	SNMPView Lite	Wake up remo	te host after UPS outpi	ut restore					
Apply Reset		Wait until battery capacity reaches to 10 %.							
Apply Reset									
Apply Reset									
Apply Reset									
Apply Reset						Apply Reset			
						Appry Reset			

%.

96.

Réseau -

MINUTEOMAN

UPS Action Remote Shut

UWake up remote host after power restore

Wait until battery capactiy reaches to 10

Wake up remote host after UPS output restore Wait until battery capacity reaches to 10

General Settings

Miscellaneous

Information

Con iguration

UPS Configuration

Wireless LAN

+ Notification Web/Telnet/FTP

EV-PROBE-TH

Log Information

(i) Management

品 SNMPView Lite

Modbus

SNMP

UPS On/Off Schedule

*

Cette page est responsable de la programmation des paramètres réseau de la carte EV-NETCARD.

• IPv4-L'adresse IP et l'IP du serveur DNS peuvent être programmées manuellement ou via DHCP ou BOOTp à l'aide des menus déroulants. Si l'adresse IP et le DNS ont déjà été configurés, les renseignements s'afficheront automatiquement ici.



POWER TECHNOLOGIES Envision							
Information	IPv4 IPv6 Ethernet Dynamic DNS PI	PPoE	0				
🛠 Configuration	IP Address						
UPS Configuration	IP Address	192.168.168.8					
UPS On/Off Schedule	Subnet Mask	255.255.255.0					
Wireless LAN	Gateway	192.168.168.1					
SNMP	Obtain an IP address *	Using DHCP 🗸					
+ Notification	DNIS Somer ID						
Web/Telnet/FTP	DNS Server IP						
BACnet	Primary DNS Server IP	8.8.8.8					
EV-PROBE-TH	Secondary DNS Server IP	8.8.4.4					
Modbus	Obtain DNS Server IP	Automatically 🗸					
System	* : System will	reboot when these items have be	een Annlied				
Log Information		reboot when these items have be					
(i) Management			Apply Reset				
品 SNMPView Lite							

•IPv6

- <u>Adresse IP</u> :Toutes les cartes EV-NETCARD prennent en charge l'adressage IPv6. Sous l'onglet « IPv6 »,
 l'adresse peut être obtenue à partir de la liste déroulante d'options : Automatique, Sans état, DHCPV6,
 DHCPV6 ou Manuel. Si Manuel est sélectionné, toutes les informations IP et de passerelle doivent être saisies dans les champs respectifs. Pour toutes les formes de sélection d'adresse, les champs restants doivent être remplis : Renvoi automatique de la découverte du routeur, Nombre maximal de préfixes IPv6 et Adresse de multidiffusion.
- <u>Adresse IP du serveur DNS</u> :Entrez les adresses des serveurs DNS primaires et/ou secondaires.
 REMARQUE:Une fois l'adressage terminé, appuyez sur l'icône « Appliquer » et la carte EV-NETCARD redémarrera avec la nouvelle configuration.

	POWER TECHNO	Envision		Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
	Information	IPv4 IPv6 Ethernet Dynamic DNS	PPPoE	9
*	Con iguration	IP Address		
UP:	5 Configuration	IP Address		
UP	5 On/Off Schedule	IPv6 Prefix	64	
Wir	eless LAN	Gateway		
SN	MP	Obtain an address *	Automatic 🗸	
+ Notification		Router Discovery Autoresend	Yes 🗸	
Web/Telnet/FTP		Maximum Number of IPv6 Prefix	8 🗸	
BA	Inet	Multicast Address	[FF1E::1]	: 5000
EV-	PROBE-TH			
Мо	dbus	DNS Server IP		
Sys	tem	Primary DNS Server		
	Log Information	Secondary DNS Server		
(\mathbf{i})	Management	* : Syster	n will reboot when these items have be	een Applied.
格	SNMPView Lite			
				Appiy Reset


• Ethernet

- <u>Type de connexion</u> Cette option de menu définit la vitesse de communication entre EV-NETCARD et le réseau connecté.
- REMARQUE: Une fois la vitesse du réseau sélectionnée, appuyez sur l'icône « Appliquer » et sur la carte EV-NETCARD la carte redémarrera avec la nouvelle configuration.
- <u>Arrêter la communication de l'onduleur quand Ethernet est débranché</u> :Utilisez cette option de menu pour continuer ou arrêter les communications UPS lorsque la carte EV-NETCARD se déconnecte d'Ethernet.

		Envision	<u>atest Events</u> 03:33:13] Internal diagnostic self-test passed. 02:50:18] Warning! Smoke detected. 02:48:30] Option5 Alarm
UP	Information Con iguration S Configuration	IPv4 IPv6 Ethernet Dynamic DNS PPPoE Connection Type Auto Sense	?
Ne Wi SN	twork reless LAN MP	Stop UPS communication when Ethernet disconnected	Annly Reset
+ No We BA EV	tification :b/Telnet/FTP Cnet .PROBE-TH		луру неже
Mc Sys	idbus item Log Information		
① 品	Management SNMPView Lite		

- **DNS dynamique**-Dynamic DNS est un service open source qui permet à un utilisateur de joindre une adresse IP dynamique à un nom d'hôte statique. Pour utiliser cette fonction, assurez-vous qu'un compte et un mot de passe ont été enregistrés auprès du fournisseur de services DNS.
- <u>Fournisseur de services</u> :Les fournisseurs DNS dynamiques peuvent être sélectionnés dans cette liste déroulante.
- <u>Nom de domaine</u> : Entrez le nom de domaine créé à partir du fournisseur DDNS sélectionné ci-dessus.
- <u>Nom d'utilisateur</u> : Entrez le nom de connexion/de compte créé avec le fournisseur DDNS sélectionné.
- <u>Connexion Mot de passe</u> :Entrez le mot de passe attribué au compte DDNS enregistré.
- <u>Utilisez un serveur STUN externe pour obtenir l'IP publique à enregistrer</u>: Choisir**Oui**pour s'assurer que la carte EV-NETCARD utilise le WAN/IP public pour mettre à jour le serveur DDNS sélectionné.





Si vous utilisez iCV99.net comme fournisseur de services, suivez les instructions ci-dessous :

 Assurez-vous que la carte EV-NETCARD peut se connecter à Internet. Sélectionnez un fournisseur de services dans la liste déroulante. Si le nom de domaine, le nom de connexion et le numéro de série de la carte ne sont pas renseignés automatiquement, entrez les informations manuellement. Entrez le mot de passe EV-NETCARD, imprimé sur l'étiquette de la carte, puis appuyez sur l'icône « Appliquer ».





2. Si vous utilisez un routeur, connectez-vous au routeur et insérez l'adresse IP et le numéro de port sous le serveur virtuel pour la redirection de port. Pour plus de détails sur la programmation, consultez le manuel d'utilisation du routeur

Configuration du	routeur	-					
VIRTUAL SERVER	VIR	TUAL SERVER					
PORT FORWARDING APPLICATION RULES QOS ENGINE	The Virtual Server option allows you to define a single public port on your router for redirection to an internal LAN IP Address and Private LAN port if required. This feature is useful for hosting online services such as FTP or Web Servers.						
ACCESS CONTROL WEBSITE FILTER	24	VIRTUAL SE	RVERS LIST				
INBOUND FILTER				Port	Traffic Type	6	
FIREWALL SETTINGS		Carte réseau EV-NETCARD-1G	< Application Name	Public Port	Protocol TCP V	Schedule Always 🔻	
ROUTING ADVANCED WIRELESS		IP Address 192.168.66.101	<	Private Port 80	6	Inbound Filter Allow All	

3. Attendez au moins 20 minutes et la carte EV-NETCARD devrait être connectée sous le nom de domaine DDNS.

4. Pour modifier le nom de domaine ou le mot de passe, rendez-vous sur le site Web du fournisseur de services.







Dynamic Domain Name Server	r (DDNS)	Logout
Step1 : Registration	Step2 : Set Domain Name and Click Done	
Product Serial number Register IP Default Domain Name	HH54241013250.iCV99.net 127.0.0.1 HH54241013250	
Set New Domain Name	bty505 .iCV99.net	Nouveau nom de domaine
Domain Password		
Re-enter Password	* Blank = Use existing password Required, if a new domain name is assigned. Must be 4 to 10 characters (0-9, a-z, A-Z only).	Entrez un nouveau mot de passe
E-mail address	ttc@gmail.com × Required field. Used to retrieve Lost/Forget password.	Entrez votre courriel
	Appuyez sur Terminé	Done

• **PPPoE**-Utilisez cette fonction lorsque vous connectez l'EV-NETCARD à Internet directement à l'aide d'un modem xDSL par PPPoE. Entrez le nom de connexion et le mot de passe pour activer la connexion. Une fois configuré, l'EV-NETCARD se connectera directement à Internet. Tout problème de connexion anormal peut entraîner une panne nécessitant que la carte recompose le numéro pour se reconnecter.





		est Events :08:21] Output Off :07:18] Output Off :07:18] UPS has switched to battery power.
Information Configuration UPS Configuration UPS Configuration	IPv4 IPv6 Ethernet Dynamic DNS PPPoE When Connection should be made Connect always	Sélectionner : Toujours connecter
Network Wireless LAN SNMP	Login Name	Entrez le nom de connexion
+ Notification Web/Telnet/FTP BACnet EV-PROBE-TH	Entrez le mot de passe	Apply Reset
Modbus System Cog Information		
① Management 금급 SNMPView Lite		

- Réseau local sans fil

L'EV-NETCARD est compatible avec la plupart des clés USB Wi-Fi les plus courantes. Avant d'installer ou de configurer une clé Wi-Fi, l'EV-NETCARD doit être connectée et accessible sur le réseau à l'aide d'une connexion Ethernet filaire. Ouvrez l'utilitaire logiciel Envision pour découvrir et vous connecter à la carte EV-NETCARD sur le réseau ou utilisez un navigateur Web pour saisir et accéder directement à l'adresse IP câblée spécifique de la carte à utiliser avec la clé Wi-Fi.

(1)Branchez l'onduleur au réseau en suivant les instructions du Configuration > Réseau menu

- (2)À l'aide d'un navigateur Web ou de l'utilitaire logiciel Envision, accédez à l'adresse IP associée à la carte EV-NETCARD
- (3)Installez la clé Wi-Fi dans un port USB libre de la carte.
- (4)SélectionnerConfiguration > Réseau local sans filà partir du menu de l'interface du navigateur Web
- (5)Sous le**Paramètre AP**onglet, sélectionnez le SSID du réseau Wi-Fi préféré à rejoindre. Si nécessaire, entrez le mot de passe de ce réseau sans fil.
- (6)Une fois la carte EV-NETCARD connectée au réseau sans fil souhaité, retournez à l' Configuration > Réseaupage et utilisez DHCP (par défaut) ou configurez manuellement l'adresse IP à utiliser pour la carte sur le réseau sans fil.
- (7)La connexion Ethernet câblée peut maintenant être supprimée si vous le souhaitez.
- (8)L'utilitaire logiciel Envision est maintenant capable de trouver la carte ou l'adresse peut être saisie à l'aide d'un navigateur Web.
- **REMARQUE:**L'ordinateur exécutant l'utilitaire logiciel Envision doit être connecté au même LAN sans fil comme clé USB.
- **REMARQUE:**En cas d'installation à un emplacement distant, la programmation de l'adresse IP nécessitera les éléments suivants : un ordinateur portable ou de bureau distinct ; un câble Ethernet croisé ; ou deux câbles Ethernet standards avec un commutateur.



Si vous utilisez le commutateur avec les câbles Ethernet, un câble doit connecter l'ordinateur/ ordinateur portable au commutateur avec le deuxième câble reliant le commutateur et la carte E-NETARD. La configuration sans fil doit être programmée sur le site distant pour se connecter correctement au réseau sans fil du site et enregistrer les informations de connexion et le mot de passe associé au SSID dans le micrologiciel de la carte.



← C ▲ Not secure 19	2.168.168.8				A* ☆ ☆ @ % …
		Envisio	n		Latest Events [15:08:24] Internal diagnostic self-test passed.
UPS Status	AP Setti	ing HotSpot IPv4 IPv6 P2P			0
System Status Remote Control SMS Modem Status	SSID		MAC Address	Network Security Auth/En	
EV-PROBE-TH	+ Upp	amed Network	16:18:d6:4f:6d:06	Secure Network WPA2-P	skiaes)
Log Information	~ H				
Management SNMPView Lite		SSID	MAC Address	Network Secrity	Auth(Enc)
	• m	+ ASUS_RTAC53_2.4G	2c:fd:a1:0b:92:28	Secure Network	WPA2-PSK(AES)
	+u +H	→ Mi_Daniel	28:6c:07:5f:32:63	Secure Network	WPA-PSK/WPA2-PSK(AES)
	÷н	▶ Cable₩iFi2.4G	08:02:8e:fe:4c:bc	Secure Network	WPA2-PSK(AES)
j li	+m	▶ Xiaomi_0679	28:6c:07:64:06:7a	Secure Network	WPA-PSK/WPA2-PSK(AES)
	+0	Megatec_Mi	f0:b4:29:5b:18:12	Secure Network	WPA-PSK/WPA2-PSK(AES)
	+ TI	EclipseTaipei-AP02	10:6f:3f:f8:d3:6e	Secure Network	WPA-PSK(AES)
	+ Ri + U	Megatec_SMC	00:13:17:a4:44:5a	Secure Network	WPA-PSK/WPA2-PSK(AES)
	+ D	> DASAN_GONT	00:d0:cb:ef:06:22	Secure Network	WPA2-PSK(AES)
	► R	▶ king_ap	00:1c:f0:ad:37:b1	Secure Network	WPA2-PSK(AES)
	+ RCgu				্
	• RCgu	Lorsque l'E	V-NETCARD se 🤅	connecte à un réseau sa	ns fil, il 👘 🧠
	→ Unni	afficher	une icône à cô	té du SSID de la connexi	on active.



SNMP

L'utilisation de cette option de menu permet de configurer les paramètres SNMP de l'EV-NETCARD pour une utilisation avec un NMS (Network Management System).

(EnvisionSNMP, il est disponible sur le site Web de Minuteman à l'adresse :<u>Bibliothèque de ressources</u> <u>SNMP - Minuteman UPS</u>)



• Général

Système MIB

- Nom du système : Cette section est dédiée à la définition d'un nom personnalisé pour l'EV-NETCARD.
 Entrez le nom désiré, puis appuyez sur l'icône « Appliquer ».
- Contact système : cette section peut être utilisée pour répertorier une personne responsable ou un administrateur.
 Entrez le nom, puis appuyez sur l'icône « Appliquer ».
- Emplacement du système : cette section peut être utilisée pour décrire l'emplacement de l'EV-NETCARD.
 Entrez la description souhaitée, puis appuyez sur l'icône « Appliquer ».

Port SNMP UDP

- Port SNMP Envision : définit le port sur lequel la carte EV-NETCARD reçoit et envoie les commandes SNMP. (Le paramètre par défaut est 161)
- Port de réception des interruptions : définit le port pour recevoir les interruptions SNMP. (Le paramètre par défaut est 162)



ID du moteur SNMPv3

 Type de format d'ID de moteur SNMPv3 : lors de l'utilisation de SNMPv3, la carte EV-NETCARD doit avoir un ID de moteur pour l'identification afin de générer des clés d'authentification et de chiffrement.

Le type de format peut être sélectionné dans la liste déroulante avec l'option : Adresse MAC, IPv4, IPv6 ou Manuel. Lorsqu'un format est sélectionné, appuyez sur l'icône « Appliquer » et la voiture redémarrera automatiquement.

Texte de l'ID du moteur SNMPv3 : fournit automatiquement le contenu de l'ID du moteur SNMPv3, sauf si le « Type de format de l'ID du moteur SNMPv3 » est défini sur « Manuellement ». Si défini manuellement, entrez le contenu de l'ID, puis appuyez sur l'icône « Appliquer ».

	Envision		Latest Events [08:09:21] Output Off [08:07:18] Output Off [08:07:18] UPS has switched to battery power.
L Information	General Access Control Trap Notification	Device Connected	2
🛠 Configuration	MIB System		
UPS Configuration UPS On/Off Schedule	System Name	EV-NETCARD-1G	
Network	System Location	Administrator	
Wireless LAN SNMP	SNMP LIDD Port	wy once	
+ Notification	NetAgent SNMP Port	161	
BACnet	Trap Receive Port	162]
EV-PROBE-TH	SNMPv3 Engine ID		
System	SNMPv3 Engine ID Format Type *	MAC Address 🗸	
Log Information	SNMPv3 Engine ID Text	MAC Address 3ea147f6	d
(i) Management	* : System will re	IPv6	ave been Applied.
器 SNMPView Lite		Manually	Apply Reset

Contrôle d'accès

- <u>Adresse IP du gestionnaire</u>: Définissez une adresse IP (jusqu'à 8) que l'administrateur peut utiliser pour gérer les cartes EV-NETCARD sur le réseau. Pour permettre la gestion de la carte EV-NETCARD à partir de n'importe quelle adresse IP, entrez *.*.* dans les champs Adresse IP du gestionnaire.
- <u>Version</u> Ce champ permet de choisir entre : Tous, V1 et V 2C ou V 3. Lorsque vous sélectionnez Tout ou V3, un nom d'utilisateur, un mot de passe, une authentification et un paramètre de confidentialité sont requis.
- <u>Communauté</u> :Cette section est utilisée pour définir un nom de communauté NMS pour la carte. Le nom de la communauté doit être le même que le paramètre dans NMS. (Le paramètre par défaut est public)
- <u>Autorisation</u>: Définit les droits et les autorités des administrateurs. Les options sont : Lecture, Lecture/ écriture et Aucun accès.
- <u>Description</u> : Il s'agit d'un champ ouvert qui fournit un champ pour prendre des notes pour la référence de l'administrateur.



		Latest Events [08:08:21] Output Off [08:07:18] Output Off [08:07:18] UPS has switched to battery power.
lnformation	General Access Control Trap Notification Device Connected	0
Configuration UPS Configuration UPS On/Off Schedule Network	Manager IP Address Version Community	Permission Description
Wireless LAN SNMP + Notification Web//Telnet/ETP	*.*.* All >> public *.*.* All >> public	Read/Write No Access
BACnet EV-PROBE-TH Modbus System	Nom d'utilisateur Auth. Protocole	cole de confidentialité
Log Information Management SNMDV/conv Lite	*.*.* All v public *.*.* All v public Minimum 8 ca	aractères
Simple Lite	**.*.* All • >> public *.*.* All • >> public	No Access V
	..* Comprend toutes les adresses IP	Apply Reset

• Notification de piège

Notification de piège

- <u>IP de destination</u>: Adresses IP spécifiques du programme pour recevoir les pièges envoyés par la carte EV-NETCARD.
 Jusqu'à 8 adresses peuvent être programmées.
- <u>Accepter</u> :Lors de l'envoi d'interruptions aux adresses IP de destination, sélectionnez le type et le niveau d'interruption SNMP dans la liste déroulante. Les options disponibles sont : V1, V2 Informor Trap, V3 Informor Trap. Lorsque SNMPv3 Trap ou SNMPv3 Inform est sélectionné, une authentification par nom d'utilisateur et mot de passe est requise.

	Envision	Latest Events [08:08:21] Output Off [08:07:18] Output Off [08:07:18] UPS has switched to battery power.
lnformation	General Access Control Trap Notification Device Connected	9
🛠 Configuration	Tran Notification	
UPS Configuration	Destination IP Accept Community	Trap Type Severity Description Events
UPS On/Off Schedule		
Network	192.168.168.42 SNMPV1 Irap V public	PPC V Information V Select Test
Wireless LAN	192.168.168.172 SNMPv3 Trap V >>> public	PPC V Information V Select Test
Notification	192.168.168.147 SNMPv2 Trap V pu E	PPC V Information V Select Test
Web/Telnet/FTP		
BACnet		PPC Information Select Test
EV-PROBE-TH	No V pu	PPC
Modbus		DDC Y Information Y Select Test
System		
Log Information	No v pu	PPC Information Select Test
Management		PPC V Information V Select Test
品 SNMPView Lite		
	Send Power Restore and Adapter Restor	second(s) interval.
	SNMP Inform Request	
	Number of Retries 3	
	Timeout (sec) 5	
	User Name abc	
	Auth Protocol MD5	Auth Password
	Privacy Protocol DES V	Privacy Password
	Manager Engine ID	
	manager Engline is	

- <u>Communauté</u> Le récepteur de trappe et la carte EV-NETCARD doivent être de la même communauté. (La valeur par défaut est : Public)
- <u>Type de piège</u> :Sélectionnez entre PPC MIB ou RFC1628 MIB (la valeur par défaut est : PPC)
 - -Le fichier MIB peut être téléchargé à l'adresse suivante :<u>Bibliothèque de ressources SNMP Minuteman UPS</u>
 - Gravité :Cette section définit le niveau de piège pour chaque récepteur. Il existe trois niveaux disponibles :
 - Information : Reçoit tous les pièges.
 - Avertissement : reçoit seulement les pièges « avertissement » et « grave ».
 - Grave : Ne reçoit que les pièges « graves ». (Veuillez consulter votre manuel NMS pour les niveaux de piège.)
- <u>Description</u> : Il s'agit d'un champ ouvert qui fournit un champ pour prendre des notes pour la référence de l'administrateur.
- <u>Événements</u>: Programme des événements spécifiques pour que la carte EV-NETCARD envoie des pièges aux destinataires identifiés.
 Appuyez sur l'icône « Sélectionner » pour voir la liste complète des événements parmi lesquels choisir.
 - Événements UPS : sous l'onglet Événements UPS, cochez la case à côté des événements spécifiques, puis appuyez sur « Appliquer ».
 - EV-PROBE-TH : Une liste d'alarmes de piège environnemental facultatives qui peuvent être sélectionnées si l'EV-PROBE-TH est utilisé avec la carte EV-NETCARD.

REMARQUE:Des capteurs optionnels doivent être utilisés pour définir des alarmes de piège pour l'alarme de sécurité et l'alarme de fumée.

Lorsque toutes les sélections d'alarme de piège sont terminées, utilisez l'icône « Test » pour envoyer un piège de test afin de confirmer que les paramètres sont corrects.



	Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm					
LINFormation	General Access Control Trap N	otification Device Connected				0
🛠 Con iguration	Tran Notification		_	_	_	
UPS Configuration	Destination IP Accept	Select Event			Description	Events
UPS On/Off Schedule	192.168.168.169 SNMPv1 Trap	LIPS Events EV-PROBE-TH				Select Test
Wireless LAN		CAPACIDE CAPACIDE IN				
SNMP		UPS Events				Select Test
+ Notification	No		YES	NO <		Select Test
Web/Telnet/FTP		Schedule Shutdown Event	۲	0	•	Select Test
BACnet		UPS Failure	۲	0		Select Test
EV-PROBE-TH	No	UPS entering Test mode	۲	0		Select Test
Modbus	No	UPS entering Sleeping mode	۲	0		Select Test
System		UPS entering Boost mode	۲	0		Jeneer Test
Log Information	No	UPS Load Overrun	۲	0		Select Test
(i) Management	No	UPS Communication Lost	۲	0		Select Test
品 SNMPView Lite		Turn Off UPS	۲	0		
	Send Power Restore and Adapter Resto	AC Power Failed	۲	0		
		UPS Battery Low	۲	0		
		UPS Temperature Overrun	۲	0		
	SNMP Inform Request	UPS entering Bypass mode	۲	0		
	Number of Retries				-	
	Timeout (sec)		Select Al	Clear All A	ply	
						Apply Reset

- <u>Envoyer des interruptions de restauration de l'alimentation et de restauration de l'adaptateur</u> :Cette fonction définit le nombre de répétitions des interruptions « Power Restore » et les intervalles entre les transmissions, envoyées aux destinataires lorsque l'alimentation est rétablie sur la carte EV-NETCARD. Cette fonction peut être utilisée pour tester les communications entre le récepteur de trap et la carte EV-NETCARD après le retour de l'alimentation.
- <u>Demande de renseignements SNMP</u> Utilisez cette fonction pour définir le nombre de fois que la carte EV-NETCARD peut demander une réponse à l'hôte Inform expéditeur avec une valeur prédéfinie. (La valeur par défaut est 3 fois avec un intervalle de 5 secondes)
- **Appareil connecté**-Cette section permet de définir la puissance d'utilisation et l'état de connexion des autres appareils qui se connectent au même onduleur que celui utilisé par EV-NETCARD*. (*Doit être une fonctionnalité prise en charge par l'onduleur)

Page 42

		Latest Events [03:33:13] Int [02:50:18] W [02:48:30] Op	s ternal diagnostic self-test passed. arning! Smoke detected. ption5 Alarm
L Information	General Access Control Trap Not	ification Device Connecte	ed ?
🛠 Con iguration			
UPS Configuration	Device	Rating (%)	Connected
UPS On/Off Schedule	1	0	NO Y
Network	2		
SNMP	3	0	
+ Notification		0	NO ¥
Web/Telnet/FTP	4	0	
BACnet			
EV-PROBE-TH			Apply Reset
Modbus			
System			
Log Information			
() Management			
器 SNMPView Lite			

- Courriel

L'option de menu définit les paramètres d'envoi de notifications par courriel lorsque des événements se produisent ou pour envoyer des informations de journal de données. La EV-NETCARD prend en charge SSL, TLS et STARTTLS

• Paramètre de courriel

- <u>Serveur de messagerie</u> :Entrez l'adresse du serveur de courriel à utiliser.
- <u>Port de courriel</u> : Identifiez le port utilisé pour l'envoi d'e-mails.
- Activer SSL sur la transmission des courriels : Sélectionnez le type SSL à utiliser pour la transmission des courriels : SLS/TLS,
 STARTTLS ou NONE
- Adresse courriel de l'expéditeur :Entrez l'adresse courriel de l'expéditeur
- <u>Le serveur de courriel nécessite une authentification</u>: Sélectionnez « Oui » si le serveur de messagerie a besoin d'une authentification ou « Non » dans le cas contraire.
- <u>Nom du compte</u> : Si une authentification est requise, entrez le nom du compte dans ce champ.
- <u>Mot de passe</u> : Si une authentification est requise, entrez le mot de passe dans ce champ.
- <u>Envoi d'une lettre d'essai</u> :Lorsque toutes les sélections sont terminées, entrez une adresse courriel pour vérifier que tous les éléments de configuration sont corrects. Appuyez sur l'icône « Test Mail ». Si un courriel est reçu, terminez le processus en appuyant sur l'icône « Appliquer ».



		on	Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
Information	Email Setting Email for Event L	og Email for Daily Rep	port ?
Configuration			
PS Configuration	Email Server	smtp.gmail.com	
PS On/Off Schedule	Email Port	587	
reless LAN	Enable SSL on Email Transmission	STARTTLS V	
IMP	Sender's Email Address	mmpara1@gmail.com	
otification	Email Server Requires Authentication	YES 🗸	
mail 🔀	Account Name	mmpara1@gmail.com]
MS 🥦	Password	•••••]
	Sending test mail		Test Mail
kype S			
eb/Telnet/FTP			
\Cnet			Apply Reset
-PROBE-TH			
odbus			
Log miormation			
0 0 î	■ - 更多 -		
UPS Agent(192.16	8.66.106):This is a test em	ail 🧧 🗤 🗮 💉	0
ttc@gmail.com <tto< td=""><td>@gmail.com></td><td>le de courriel de</td><td>test reçu</td></tto<>	@gmail.com>	le de courriel de	test reçu

 Courriel pour le journal des événements (pour recevoir une notification par courriel)-Utilisez cette option pour définir jusqu'à 8 adresses courriel pour recevoir les avertissements envoyés par la carte EV-NETCARD lorsque des événements sélectionnés se produisent. Entrez chaque adresse courriel, puis appuyez sur l'icône « Sélectionner ». Dans la fenêtre contextuelle, cochez les événements spécifiques pour envoyer des alarmes à cette adresse courriel spécifique.

- Événements UPS : sous l'onglet Événements UPS, cochez la case à côté des événements spécifiques, puis appuyez sur
 « Appliquer ».
- EV-PROBE-TH : Une liste d'alarmes de piège environnemental facultatives qui peuvent être sélectionnées si l'EV-PROBE-TH est utilisé avec la carte EV-NETCARD.

REMARQUE:Des capteurs optionnels doivent être utilisés pour définir des alarmes de piège pour l'alarme de sécurité et l'alarme de fumée. Lorsque toutes les adresses de courriel sont configurées, appuyez sur l'icône « Appliquer ».

MR	U		<u>PMAN</u>
POWE	RTE	CHN	OLOGIES by Para Systems, Inc.

POWER TECHNOLO	GIES ENVIS	sion		[03:33:1] [02:50:1] [02:48:3]	3] Internal dia 3] Warning! Sn 0] Option5 Ala	gnostic self-test passed. noke detected. rm
Information	Email Setting Email for E	vent Log	nail for Daily Report			0
🛠 Configuration		_				
UPS Configuration	Sand Empil When Event Occurs	VEC				
UPS On/Off Schedule	Send Email when Event Occurs	TES ¥				
Network	Account1		tvancil@minutemanu	ps.com Select		
Wireless LAN	Account2			Select		
SNMP	Account3			Select		
- Notification	Account4			Select		
• Email 🔀	Account5			Select		
• SMS 5MS	Account(Colort		
• WeChat 🔗	ACCOUNTS			Select		
• LINE	Account7			Select		
· Skype	Account8			Select		
Web/Telnet/FTP						
BACnet						
EV-PROBE-TH						Apply Reset
Modbus						
System	Select Event		Select Event			
Log Information	UPS Events EV-PROBE-TH		UPS Events	EV-PROBE-TH		î
Management	UPS Events		EV-PROBE-T	4		
		YES NO		YES	NO	
品 SNMPView Lite	Schedule Shutdown Event	• •	Smoke Alar	m 🖲	0	
	UPS Failure	• •	Water Alar	n 🖲	0	
	UPS entering Test mode	• •	Gas Alarm			
	LIPS entering Boost mode	• •	Security Ala	arm 🔍		
	UPS Load Overrun	• •	Environme	ntal Temperature Underrun		
	UPS Communication Lost	• •	Environme	ntal Humidity Overrun	0	
	Turn Off UPS	• •	Environme	ntal Humidity Underrun	0	
	AC Power Failed	• •	_			*
	Se	lect All Clear All	Apply	Select All	lear All Apply	

Courriel pour le rapport quotidien (pour recevoir le rapport quotidien)-L'EV-NETCARD peut fournir un rapport quotidien des événements et des enregistrements de données. Ces rapports peuvent être envoyés à des destinataires de courriels individuels (jusqu'à 4). Entrez l'adresse dans le champ disponible, puis sélectionnez « Oui » pour envoyer le rapport quotidien ou « Non » pour suspendre l'action. Si vous envoyez des rapports quotidiens, définissez une heure de la journée pour laquelle le rapport doit être envoyé dans le menu déroulant.



Information Configuration UPS Configuration UPS On/Off Schedule Network Wireless LAN SNMP - Notification • Email • SMS • WeChat • Skype • Skype • Wechat • Skype • Skype • Method Feldet/FTP Régler l'heure : hh:mm (format 24 heures)
Configuration UPS Configuration UPS On/Off Schedule Network Wireless LAN SNMP Notification • Email • SMS • WeChat • Skype • Skype
UPS Configuration UPS On/Off Schedule Network Wireless LAN SNMP Notification • Email • SMS • Wechat • Skype • Skype • Skype • Method • Régler l'heure : hh:mm (format 24 heures)
Wireless LAN SNMP - Notification - Notification - Email SMS WeChat - Skype Skype Swith Régler l'heure : hh:mm (format 24 heures)
 Email SMS Wechat Skype Skype Web/Telnet/FTP Régler l'heure : hh:mm (format 24 heures)
Web/Telet/FTP Régler l'heure : hh:mm (format 24 heures)
Web/Telnet/FTP Régler l'heure : hh:mm (format 24 heures)
Modbus System
Log Information Management
용 SNMPView Lite

- Configuration > SMS

L'EV-NETCARD prend en charge la notification d'alarme via des signaux de messages courts (« SMS ») envoyés et reçus à l'aide d'un modem GSM/GPRS/CDMA. Un schéma du fonctionnement est fourni ci-dessous.





Configuration du modem SMS

<u>Paramètres du modem SMS</u> :Configurez les paramètres de la carte et du modem pour l'envoi d'alarmes par communications SMS.

- Port de communication du modem : sélectionnez le port à utiliser avec le modem souhaité.
- Communication SMS : sélectionnez le type de signal à utiliser avec le modem souhaité.
- Code NIP de la carte SIM : entrez le numéro de la carte SIM du modem.
- Confirmer le NIP de la carte SIM : confirmez la saisie ci-dessus. Une fois toutes les informations saisies, touchez l'icône « Appliquer ».

Envoyer un message :

- Numéro de téléphone cellulaire : entrez le numéro de téléphone cellulaire du destinataire
- Contenu SMS : Créez le texte du message SMS à envoyer au téléphone cellulaire et définissez le format (Unicode ou Caractères).

	Envisior)	Latest Events [03:33:13] Internal diagnost [02:50:18] Warning! Smoke [02:48:30] Option5 Alarm	ic self-test passed. detected.
L Information	SMS Modem Settings SMS Setting	Mobile for Event Log		?
🛠 Configuration	SMS Modem Settings			
UPS Configuration	Modem Communication Port	Nonex		
UPS On/Off Schedule	Modern communication Port			
Network	SMS Communication	GPR5 V		
Wireless LAN	SIM Card PIN			
SNMP	Confirm SIM Card PIN			
- Notification				
• Email 🔀				Apply Reset
SMS SMS				
• WeChat 🔗	Send Message			
LINE 🖤 🗸	Cellular Phone number			
Skype S	SMS content (Max. 70 characters)		Unicode	Character
Web/Telnet/FTP				
BACnet				Send Reset
EV-PROBE-TH				
Modbus				
System				
Log Information				
(i) Management				
品 SNMPView Lite				

Paramètre SMS

- <u>Envoyer un texto quand l'événement se produit</u>: Sélectionnez les options dans le menu déroulant : Désactiver, Utiliser le modem local ou Utiliser le service distant
 - Désactiver : Aucun service SMS
 - Utiliser le modem local : sélectionnez lorsqu'un modem GSM est directement connecté à la carte EV-NETCARD (voir la section Modem SMS pour son installation)
 - Utiliser le service à distance : sélectionnez cette option lorsqu'un modem GSM est connecté à un PC en réseau avec le logiciel SMS Server installé (voir Installation du logiciel SMS Server)
- <u>Serveur SMS</u> :Si vous utilisez le service distant pour envoyer des messages SMS, entrez ici l'adresse IP de l'ordinateur sur lequel le serveur SMS est installé.



- Port SMS :Si vous utilisez le service distant pour envoyer des messages SMS, entrez le numéro de port du serveur SMS utilisé pour l'envoi des messages. (Le port par défaut est le port 80)
- <u>Nom du compte</u> :Si vous utilisez le service distant pour envoyer des messages SMS, entrez le nom du compte du serveur SMS, si nécessaire.
- <u>Mot de passe</u> :Si vous utilisez le service distant pour envoyer des messages SMS, entrez le mot de passe du serveur SMS, si nécessaire.
- <u>Envoi de SMS de test</u>: Une fois la configuration terminée, entrez un numéro de cellulaire pour recevoir un test.
 SMS. Si un message de test réussi est envoyé, appuyez sur l'icône « Appliquer » pour sauvegarder les paramètres.

	Envisio	n	Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
L Information	SMS Modem Settings SMS Setting	g Mobile for Event Log	3
🛠 Configuration			
UPS Configuration	Send SMS When Event Occurs	Use Remote Service 🗸	
UPS On/Off Schedule	SMS Server		
Wireless LAN	SMS Port	80	
SNMP	Account Name		
- Notification	Password		
• Email	Sending test SMS		Test SMS
• SMS 🚆			
Skype S			Apply Reset
Web/Telnet/FTP			
BACnet			
EV-PROBE-TH			
Modbus			
器 SNMPView Lite			

- Mobile pour le journal des événements-Utilisez cette option pour définir jusqu'à 8 numéros de téléphone cellulaire pour recevoir les avertissements envoyés par la carte EV-NETCARD lorsque des événements sélectionnés se produisent. Entrez chaque numéro de téléphone, puis appuyez sur l'icône « Sélectionner ». Dans la fenêtre contextuelle, cochez les événements spécifiques pour envoyer des alarmes à ce numéro de téléphone spécifique.
 - Événements UPS : sous l'onglet Événements UPS, cochez la case à côté des événements spécifiques, puis appuyez sur
 « Appliquer ».
- EV-PROBE-TH : Une liste d'alarmes de piège environnemental facultatives qui peuvent être sélectionnées si l'EV-PROBE-TH est utilisé avec la carte EV-NETCARD.
 REMARQUE:Des capteurs optionnels doivent être utilisés pour définir des alarmes de piège pour l'alarme de sécurité et l'alarme de fumée. Lorsque tous les paramètres des numéros de téléphone sont terminés, appuyez sur l'icône « Appliquer ».

		nvisio	on	.atest Events 03:33:13] Internal dia 02:50:18] Warning! Sn 02:48:30] Option5 Ala	gnostic self-test passed. noke detected. rm
L Information	SMS Modem Se	ettings SMS Set	ting Mobile for Eve	nt Log	?
Configuration UPS Configuration UPS On/Off Schedule Network Wireless LAN SNMP Notification Email SMS WeChat LINE UNE Web/Telnet/FTP BACnet EV-PROBE-TH	Cellular Phone nur Cellular Phone nur Stevens Eur#Rost-7H UPS Eature UPS Falure UPS Falure UPS falure UPS entering Stephing mode UPS entering Stephing mode UPS entering Boot mode UPS entering Boot mode UPS toad Overran UPS Communication Lost Turn Off UPS Temperature Overran UPS Temperature Overran UPS Temperature Overran	vrs NO wber1 mber2 mber3 mber3 mber4 mber5 mber7 0 Vrs 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	UPS Events EV PROBE-TH EV-PROBE-TH Smoke Alarm Security Alarm Security Alarm Environmental Temperatur Environmental Temperatur Environmental Temperatur	Select Select Select Select Select Select Select Select	Apply Reset

- Web/Telnet/FTP

Cette option de menu définit les autorisations pour chaque compte utilisateur pour l'accès Web, Telnet et FTP (jusqu'à 8 utilisateurs). Les restrictions permettant d'activer/désactiver des ports spécifiques pour HTTP/HTTPS, Telnet/SSH et FTP peuvent être programmées à partir de cet écran.

• HTTP/HTTPS

Protocole de gestion :

- Activer la fonction HTTP : cochez pour activer, puis entrez le numéro de port spécifique pour y accéder.
- Activer la fonction proxy HTTP : cochez pour activer, puis entrez le numéro de port spécifique pour y accéder.
- Activer la fonction HTTPS : cochez pour activer puis entrez le numéro de port spécifique pour y accéder.
- Activer la fonction proxy HTTPS : cochez pour activer, puis entrez le numéro de port spécifique pour y accéder.
- Jeton d'API RESTful : (nécessite une définition supplémentaire)
 - Un jeton doit être créé pour permettre les connexions à distance à l'API REST via HTTPS

Compte HTTP/HTTPS :

- Nom d'utilisateur : Configurez un nom d'utilisateur à utiliser lors de l'accès au navigateur Web EV-NETCARD (jusqu'à 8 sont autorisés) dans les champs fournis.
- Mot de passe : Créez et utilisez un mot de passe pour chaque nom d'utilisateur afin de vous protéger contre tout accès non autorisé à la carte Web EV-NETCARD.



- Autorisation : définit le niveau des droits de l'utilisateur lors de l'accès à l'EV-NETCARD via le navigateur Web.
 Les options sont : Aucun accès / Lecture / Lecture et écriture
 - Règle d'autorisation: Au moins un compte utilisateur doit avoir une autorisation de lecture/écriture
 - Règle d'autorisation : les permissions de lecture et d'écriture doivent avoir un nom d'utilisateur et ne peuvent pas être vides
- Filtre IP : restreindre l'accès à la carte à des adresses IP spécifiques seulement : (l'utilisation de « *.*.* » permet l'accès à partir de n'importe quelle adresse IP)

Déconnexion automatique après une inactivité de X minute(s) : définissez la durée avant que la page Web EV-NETCARD ne déconnecte automatiquement l'utilisateur lorsqu'il n'y a aucune activité sur l'écran. (0 est désactivé)

	Envision		Latest Events [0333:13] Internal diagnostic self-test passed. [025:518] Warning Smoke detected. [02:48:30] OptionS Alarm
Information	HTTP/HTTPS TELNET/SSH FTP/FTP-SSL SSL Information RADIL	JS Server LDAP Server	•
UIS Configuration UIS Configuration Vetwork Witerless LNN SSMMP + Notification Web/TGIeU/FTP BACret EV.PR00E-TH Modbus System	Management Protocol Enable ITT Pronction * HITTP port * Enable ITTP proxy Function * HITTP proxy port * Enable ITTPS from y function * HITTPS proxy pont * RESTful API Token	20 30 31 443 444 54ttags	
Log Information Management 몲 SNMPView Lite	HTTP/HTTPS Account User Name admin	sword Permission Read/Write • No Access •	19 Filter ****
		No Access v No Access v No Access v No Access v No Access v No Access v	
	Auto LogOff after idle for a minute(s) (0: Disable)	* : System will reboot when these items have been Applied.	
			Apply Reset

• **Telnet/SSH**-Activez et entrez des informations de port spécifiques pour accéder ou désactiver les communications Telnet/SSH.

Protocole de gestion

- Activer la fonction TELNET : pour activer TELNET, cochez la case puis entrez le numéro de port TELNET préféré.
- Activer la fonction SSH : pour activer SSH, cochez la case puis entrez le numéro de port SSH préféré.

<u>Compte TELNET/SSH</u> :

- Identique aux paramètres de compte/mot de passe HTTP : cocher cette case dupliquera automatiquement les paramètres utilisés pour configurer les communications HTTP/HTTPS.
- Nom d'utilisateur : si vous ne dupliquez pas les paramètres HTTP, créez ou saisissez un nom d'utilisateur (jusqu'à 8 sont autorisés) dans les champs fournis.
- Mot de passe : Créez et utilisez un mot de passe pour chaque nom d'utilisateur afin de vous protéger contre tout accès non autorisé à la carte Web EV-NETCARD.
- Autorisation : définit le niveau des droits de l'utilisateur lors de l'accès à l'EV-NETCARD via le navigateur Web.
 Les options sont : Aucun accès / Lecture / Lecture et écriture
 - Règle d'autorisation: Au moins un compte utilisateur doit avoir une autorisation de lecture/écriture
 - Règle d'autorisation : les permissions de lecture et d'écriture doivent avoir un nom d'utilisateur et ne peuvent pas être vides



	Envis	ion		Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
Information	HTTP/HTTPS TELNET/SSH	FTP/FTP-SSL SSL Information	RADIUS Server	LDAP Server
🛠 Configuration				
UPS Configuration	Management Protocol			
UPS On/Off Schedule	Enable TELNET Function *			
Network	TELNET port *	23		
Wireless LAN	Enable SSH Function *			
SNMP	SSH port *	22		
Notification	TELNET/SSH Account			
Web/Telnet/FTP	Same as HTTP account/r	assword settings		
BACnet				
EV-PROBE-TH	User Name	Password	Permission	IP Filter
System			No Access 💙	*.*.*
			No Access 🖌	*.*.*.*
Log Information			No Access 😽	*.*.*.*
Management			No Access 🖌	*.*.*.*
SNMPView Lite			No Access 🖌	*.*.*.*
			No Access 🖌	*.*.*.*
			No Access 🐱	*,*,*,*
			No Access 🖌	*.*.*
		* : System will reboot when	n these items have be	en Applied. Apply Reset

• **FTP/FTP-SSL**-Le menu fournira des options pour configurer et paramétrer l'accès FTP/FTP-SSL. <u>Protocole de gestion</u>

- Activer la fonction FTP : cochez la case pour activer la fonction FTP.
- Activer la fonction FTP-SSL : cochez la case pour activer la protection FTP-SSL
- FTP-SSL implicite : Cochez la case pour définir un port spécifique pour le client (990) à utiliser pour les connexions sécurisées
- Port du serveur FTP(S) : sélectionnez le port pour les communications FTP(S) du serveur
 - L'option FTP-SSL implicite force le client FTP à se connecter en toute sécurité dès le départ
- Activer la fonction SFTP : cochez la case pour activer la fonction SFTP
- Port du serveur SFTP : sélectionnez le port pour les communications du serveur SFTP.

Compte FTP/FTP-SSL

- Identique aux paramètres de compte/mot de passe HTTP : cocher cette case dupliquera automatiquement les paramètres utilisés pour configurer les communications HTTP/HTTPS.
- <u>Nom d'utilisateur</u> :Si vous ne dupliquez pas les paramètres HTTP, créez ou entrez un nom d'utilisateur (jusqu'à 8 sont autorisés) dans le champ prévu pour l'accès FTP à la carte EV-NETCARD.
- Mot de passe :Créez et utilisez un mot de passe pour chaque nom d'utilisateur afin de vous protéger contre tout accès FTP non autorisé.
- <u>Autorisation</u>: Définit le niveau des droits de l'utilisateur lors de l'accès à l'EV-NETCARD via le navigateur Web.
 Les options sont : Aucun accès / Lecture / Lecture et écriture
 - Règle d'autorisation: Au moins un compte utilisateur doit avoir une autorisation de lecture/écriture
 - Règle d'autorisation : les permissions de lecture et d'écriture doivent avoir un nom d'utilisateur et ne peuvent pas être vides

Lorsque tous les paramètres de configuration sont terminés, appuyez sur l'icône « Appliquer » et la carte redémarrera pour que toutes les configurations prennent effet.



		Envisi	on			Late: [03:3 [02:5 [02:4	st Events 3:13] Internal diagnostic self-test passe 0:18] Warning! Smoke detected. 8:30] Option5 Alarm	d.
	Information	HTTP/HTTPS TELNET/SSH	FTP/FTP-SSL	SSL Information	RADIUS Server	LDAP Server		?
*	Configuration	Management Protocol						
UP	5 Configuration	Enable ETP Eurotion		2				
UP	5 On/Off Schedule	Enable FTP Function		52				
Ne	twork	Enable FTP-SSE FUnction						
Wir	eless LAN							
SN	MP	FIP(S) Server Port		21				
+ No	tification			-				
We	b/Telnet/FTP	Enable SFTP Function		~				
EV.		SFTP Server Port		22				
Mo	dbus	FTP/FTP-SSL Account						
Sys	tem	Same as HTTP account/pas	ssword settings					
1	Log Information	User Name		Pa	ssword		Permission	
$(\mathbf{\hat{i}})$	Management						No Access 🖌	
묢	SNMPView Lite						No Access 🐱	
							No Access 🖌	
							No Access 🐱	
							No Access 😽	
							No Access 🖌	
							No Access 🖌	
							No Access 🖌	
							Apply R	eset

• Informations SSL-La carte EV-NETCARD prend en charge le protocole HTTPS et varie la version de cryptage SSL pour la connexion réseau. L'utilisateur peut télécharger sa clé publique et sa certification pour l'authentification.

<u>Protocoles HTTPS</u> - Sélectionnez la version de cryptage à utiliser dans la liste fournie :

- SSL v2
- SSL v3
- TLS v1.0
- TLS v1.1
- TLS v1.2
- TLS v1.3

Une fois la sélection effectuée, appuyez sur l'icône « Appliquer ». La carte redémarrera ensuite avec la version SSL mise à jour.

<u>Informations SSL</u> - Suivez les étapes de cette section pour télécharger le certificat SSL. Lorsque la clé publique et le certificat sont téléchargés sur le serveur Web EV-NETCARD, le cryptage de la communication SSL sera activé.

- Sélectionner la clé publique : trouvez et trouvez le fichier de clé publique à télécharger sur le serveur Web. Une fois trouvé, touchez l'icône « Télécharger et remplacer ».
- Longueur de la clé publique : énumère la longueur de la clé publique chargée sur le serveur Web.
- Certificat SSL : recherchez et trouvez le fichier de certificat SSL à télécharger sur le serveur Web. Une fois trouvé, touchez l'icône « Télécharger et remplacer ».
- Émis à / par : liste l'émetteur et le destinataire de la clé SSL
- Valide à partir de / jusqu'à : indique la durée de validité du certificat.



(Pour communiquer via HTTPS, assurez-vous d'activer le port HTTPS 443.) Pour que l'EV-NETCARD crée sa propre clé publique et son propre certificat, veuillez vous référer au logiciel OpenSSL sur le site Web OpenSSL à l'adresse suivante : *https://openssl-library.org/source/*

	Envis	ion	Latest Events [033313] Internal diagnostic self-test passed. [02:55118] Warning! Smoke detected. [02:48:30] Option5 Alarm
L Information	HTTP/HTTPS TELNET/SSH	FTP/FTP-SSL SSL Information RADI	JS Server LDAP Server 3
🛠 Configuration			
UPS Configuration			
UPS On/Off Schedule			
Network			
Wireless LAN			
SNMP			
+ Notification	✓ TLS V1.2		
Web/Teinet/FTP	TLS v1.3		
EV-PROBE-TH			Apply* Reset
Modbus		* : System will reboot when 'Apply'	has been pressed.
System			
I og Information	SSL Information		
	SSL Public Key	Choose File No file chosen	Upload and Replace
(i) Management	Public Key Length	2048 bits	
品 SNMPView Lite	SSL Certificate	Choose File No file chosen	Upload and Replace
	Issued To	NetAgent	
	Issued By	NetAgent	
	Valid From	2022-01-01	
	Valid Until	2025-01-01	

REMARQUE:Lors de la connexion de l'EV-NETCARD via HTTPS, avec sa propre clé publique et son propre certificat générés, le navigateur Web peut afficher une erreur, veuillez l'ignorer et continuer.

• Serveur RADIUS-L'authentification du serveur RADIUS est prise en charge sur la carte EV-NETCARD. Il peut être configuré et activé via les options du menu.





- Activer RADIUS dans la connexion Web/Telnet : sélectionnez « Oui » ou « Non » dans le menu déroulant
- Adresse du serveur RADIUS : si vous utilisez RADIUS, entrez l'adresse IP du serveur RADIUS
- Port d'authentification : entrez le numéro de port RADIUS (la valeur par défaut est 812)
- Clé partagée : entrez la clé partagée entre le serveur RADIUS et le client
- Délai d'expiration de la connexion : définit le nombre de secondes pendant lesquelles le temps de connexion doit être suspendu après le rejet du serveur RADIUS
- Nouvelle tentative de connexion : définit le nombre de connexions au serveur RADIUS après des échecs de connexion.

Lorsque tous les paramètres de configuration sont terminés, appuyez sur l'icône « Appliquer ».

	Envision	Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm			
Information	HTTP/HTTPS TELNET/SSH FTP/FTP	SSL SSL Information	RADIUS Server	LDAP Server	?
🛠 Configuration					
UPS Configuration	Enable RADIUS in Web/Telnet login	NO 🗸			
UPS On/Off Schedule	RADIUS Server Address				
Wireless LAN	Authentication Port	1812			
SNMP	Shared Key				
+ Notification	Connection TimeOut	5	second(s)		
Web/Telnet/FTP	Connection Retry	3			
EV-PROBE-TH					
Modbus				_	
System					Apply Reset
Log Information					
(i) Management					
品 SNMPView Lite					

• Serveur LDAP-LDAP est un protocole logiciel indépendant du fournisseur utilisé pour rechercher des informations ou des périphériques au sein d'un réseau. Pour plus d'informations sur la configuration, veuillez consulter les paramètres de votre serveur.

			$\left \right $	J				0	<u>gnan</u>
P	O V	VE	R	T	E	С	H	Ν	by Para Systems, Inc.

Envisior	Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
HTTP/HTTPS TELNET/SSH FTP/FT	P-SSL SSL Information RADIUS Server LDAP Server ?
Enable LDAP in Web/Telnet login	NO V
LDAP Server Address	
Security Connection	
Server Port	389
Distinguished Name	
User Attribute	uid
Permission Attribute	
Permission Read/Write	
Permission Read Only	
	Apply Reset
	Envision HTTP/HTTPS TELNET/SSH FTP/FTI Enable LDAP in Web/Telnet login LDAP Server Address Security Connection Server Port Distinguished Name User Attribute Permission Attribute Permission Read/Write Permission Read Only Permission Read Only

- BACnet

La carte EV-NETCARD prend en charge<u>BACnet</u> /IP (Automatisation et contrôle des bâtiments/Protocole Internet)

- <u>Appareil BACNet</u>: Utilisez cette option de menu pour configurer l'ID de l'appareil et le numéro de port d'accès pour la carte EV-NETCARD lors de l'utilisation de BACnet pour les communications.
 - ID d'appareil BACNet : entrez le numéro d'identification attribué à utiliser pour la carte. (-1 est hors service)
 - Port BACNet (0-65535) : entrez un numéro de port BACNet pour la carte.
- Notification : Configurez les destinataires des notifications de la carte.
 - IP de destination : entrez l'adresse IP (jusqu'à 4) pour recevoir les notifications de la carte EV-NETCARD.
 - Accepter : configurer pour recevoir ou non des notifications
 - Port (0-65535) : entrez le numéro de port BACNet du destinataire.
 - Gravité : indiquez le type de notifications à envoyer au destinataire : (Alarme ou Événement)
 - Description : Il s'agit d'un champ ouvert qui fournit un champ pour prendre des notes pour la référence de l'administrateur.

Lorsque tous les paramètres de configuration sont terminés, appuyez sur l'icône « Appliquer » et la carte redémarrera pour que toutes les configurations prennent effet.



	MAN [®] Env	ision		Latest Events [03:33:13] Internal d [02:50:18] Warning! [02:48:30] Option5 A	iagnostic self-test passed. Smoke detected. Jarm
Information	BACnet				3
🛠 Configuration	BACNet Device				
UPS Configuration	BACNet Device ID *		1016	(-1 = Out of service)	
Network	BACNet Port (0-65535)		47808		
Wireless LAN	Notification				
SNMP + Notification Web/Telnet/FTP BACnet EV-PROBE-TH Modbus System Log Information	Destination IP	Accept No V No V No V No V	Port (0-65535)	Severity Alarm v Alarm v Alarm v have been Applied.	Description
Management 몸 SNMPView Lite					Apply Reset

- SONDE EV-TH

L'EV-PROBE-TH est un capteur environnemental externe et un dispositif de concentrateur en option. Son objectif principal est de détecter la température, l'humidité et les conditions de l'eau et de déclencher des alarmes lorsque les conditions le justifient. L'EV-PROBE-TH contient également un récepteur RF intégré à utiliser avec d'autres capteurs externes tels que des capteurs de fumée et de contact.

• SONDE EV-TH

- <u>SONDE EV-TH</u> :L'EV-PROBE-TH, une fois configuré, émettra une alarme sonore et déclenchera un piège ou un message d'avertissement lorsqu'il détectera des valeurs de température et d'humidité ou de l'eau stagnante en dessous et au-dessus des paramètres programmés.
 - EV-PROBE-TH : Activer ou désactiver la fonction sonde
 - Humidité (%) : Programmez les seuils minimum et maximum pour les alarmes d'humidité.
 - Température (°C) : définissez les seuils minimum et maximum pour les alarmes de température.
- Étiquette de sécurité : Connectez jusqu'à 7 capteurs de contact supplémentaires qui communiquent avec l'EV PROBE-TH par RF. Utilisez cette section pour définir un emplacement ou un nom descriptif pour chaque capteur de contact installé.

	Envision		Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
Information	EV-PROBE-TH Calibrate		9
🛠 Configuration	EV-PROBE-TH		
UPS Configuration UPS On/Off Schedule	EV-PROBE-TH	Active 🗸	
Network Wireless LAN	Humidity (%)	Critical UnderRun	Critical OverRun
SNMP + Notification	Temperature (°C)	5.0	30.0
Web/Telnet/FTP	Security Label		
BACnet	Label 1	Security1 Status	
EV-PROBE-TH	Label 2	Security2 Status	
Modbus	Label 3	Security3 Status	
System	Label 4	Security4 Status	
Log Information	Label 5	contact	
(i) Management	Label 6	Security6 Status	
器 SNMPView Lite	Label 7	Security7 Status	
			Apply Reset

• Étalonner–Utilisez cet onglet pour vérifier et calibrer les paramètres de température et d'humidité de l'EV-PROBE-TH. Utilisez un capteur externe pour vérifier les conditions et entrez-les dans les champs respectifs.

Lorsque tous les paramètres de configuration sont terminés, appuyez sur l'icône « Appliquer ».

		on	Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
Information	EV-PROBE-TH Calibrate		3
🛠 Configuration			
UPS Configuration	Temperature (°C)	0.0	
UPS On/Off Schedule Network	Humidity (%)	0	
Wireless LAN			
SNMP			
+ Notification			Apply Reset
Web/Telnet/FTP			
EX DODE TH			
Modbus			
System			
Log Information			
(i) Management			
品 SNMPView Lite			

- Modbus

Utilisez cette option de menu pour définir les paramètres MODbus sur la carte EV-NETCARD.

MODbus sur TCP/IP : Pour désactiver l'utilisation de la fonction MODbus sur TCP/IP, utilisez le paramètre par défaut
 (-1). Si vous l'activez, sélectionnez un port entre 1 et 255.



 <u>MODbus sur RS485</u>: Programmez les paramètres pour l'utilisation de la fonction MODbus via une connexion RS485.

Lorsque tous les paramètres de configuration sont terminés, appuyez sur l'icône « Appliquer ».

	Envision		Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
L Information	Modbus		?
Configuration	Modbus on TCP		`
UPS Configuration UPS On/Off Schedule	Modbus on TCP Device ID *	1 (-1 = Out of servic	ie)
Network	Madhus an DC 495		
Wireless LAN	Modbus on RS485	Dischlad	
SNMP	Pavise ID	Disabled V	
+ Notification		1	
DAGest	Mode	Full Duplex 🗸	
AChet	Baud Rate	9600 🗸	
EV-PROBE-TH	Data bits	8 🗸	
Modbus	Parity	None 🗸	
System	Stop bits	1 🗸	
Log Information			
(i) Management	* : System will	reboot when these items have	e been Applied.
器 SNMPView Lite			Apply Reset

Système

Utilisez cette option de menu pour définir l'heure système, la langue et la configuration SYSLOG de la carte EV-NETCARD.

- **Date/Heure**-Synchronisez la carte EV-NETCARD avec une source externe ou un serveur de temps interne pour des paramètres de date et d'heure corrects.
 - Heure système :
 - Heure système (aaaa/mm/jj hh:mmm:ss) : définissez la date et l'heure initiales à afficher manuellement sur la carte EV-NETCARD.
 - Délai entre les mises à jour automatiques : définit un intervalle pour les synchronisations horaires.
 - Serveur de temps : L'utilisation d'un serveur de temps basé sur Internet peut être sélectionnée dans la liste déroulante ou ajouter un autre serveur de temps manuellement.
 - Fuseau horaire (par rapport à GMT) : Choisissez le fuseau horaire du site d'installation en sélectionnant une option dans le menu déroulant (par rapport au fuseau horaire GMT).
 - Utilisation de l'heure avancée : sélectionnez « Oui » ou « Non » pour utiliser la fonction de réglage automatique de l'heure d'été.

Redémarrage :

- Système de redémarrage automatique pour chaque (0 est désactivé) : réglez l'EV-NETCARD pour qu'il redémarre automatiquement à une heure ou une minute prédéfinie ou sélectionnez « 0 » pour désactiver. Appuyez sur « Appliquer » pour terminer la programmation.
- Redémarrage manuel du système Après 30 secondes : Appuyez sur l'icône « Appliquer » pour redémarrer la carte EV-NETCARD. (Le redémarrage a un délai de 30 secondes après avoir appuyé sur « Appliquer ».



Lorsque tous les paramètres de configuration sont terminés, appuyez sur l'icône « Appliquer ».

- · Langage-Programmez les paramètres d'interface linguistique préférés pour la carte EV-NETCARD.
- <u>Langue de l'interface</u> :Sélectionnez la langue préférée à utiliser pour l'interface du navigateur Web de la carte EV-NETCARD. Lors de la première connexion à la page Web EV-NETCARD, celle-ci détectera automatiquement la langue par défaut du système d'exploitation du PC et affichera la même langue jusqu'à ce qu'elle soit modifiée et activée à l'aide de cette option.

Langues prises en charge par la carte EV-NETCARD :



REMARQUE:Les témoins doivent être activés sur le navigateur Web avant d'utiliser cette fonction.

 Préférence de courriel :Sélectionnez la préférence de langue lors de l'envoi de messages d'alarme par courriel et SMS.



	MAN Envisio	n	Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
L Information	Date/Time Language SysLog S	etting Save/Restore	3
🛠 Configuration		-	
UPS Configuration			
UPS On/Off Schedule	English		
Network	O Deutsch		
Wireless LAN	○ Português	○ 한글	
SNMP	○ Español	○ 日本語	
+ Notification	○ Français	○ Русский	
Web/Telnet/FTP	O Italiano	⊖ ไทย	
BACnet	⊖ Türkçe	○ Polska	
EV-PROBE-TH	(Note: Setting preferences will not work	if you have disabled cookies in your bro	owser.)
Modbus	(,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		
System	Email Preferences		
Log Information	Use below interface language in Email S	MS and Wechat	
(i) Management	notification	English	
器 SNMPView Lite			
			Apply Reset

• Paramètre SYSLOG-Utilisez cette option de menu pour définir la configuration SYSLOG.

- Activer le serveur Syslog : sélectionnez Non ou Oui pour activer la fonction Syslog.
- Protocole Syslog : choisissez UDP ou TCP pour le protocole Syslog
- Comptage d'octets TCP : vérifiez si vous utilisez le comptage octal TCP
- Adresse du serveur Syslog : programmez l'adresse réseau du serveur Syslog.
- Port Syslog : Choisissez le port à utiliser pour la communication avec le serveur Syslog

Lorsque tous les paramètres de configuration sont terminés, appuyez sur l'icône « Appliquer ».

	Envision		Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
LINFormation	Date/Time Language SysLog Setting	Save/Restore	3
🛠 Configuration			
UPS Configuration	Enable SysLog Server	NO ¥	
Network	SysLog Protocol	UDP 🗸	
Wireless LAN	TCP Octet Counting		
SNMP	SysLog Server Address		
+ Notification	SysLog Port	514	
BACnet			
EV-PROBE-TH			Apply Poset
Modbus			Appy Reset
System System Log Information			
(i) Management			
器 SNMPView Lite			



• Sauvegarder/Restaurer

 Sauvegarder la configuration actuelle : Choisissez « Crypté » ou « Non crypté » dans le menu déroulant pour enregistrer la configuration actuelle de l'EV-NETCARD sur le PC. Si vous téléchargez sur un autre ordinateur, sélectionnez « Non crypté ». Le nom par défaut du fichier texte sera : AAAA_MMJJ_####.cfg.

REMARQUE:L'autorisation de l'administrateur est requise pour sauvegarder le fichier.

- Restaurer la configuration précédente : utilisez cette option de menu pour restaurer une configuration précédemment enregistrée. Sélectionnez « Parcourir » pour localiser le fichier et appuyez sur « Restaurer ». icône.
- Réinitialiser les paramètres d'usine par défaut : la sélection de cette option réinitialisera toutes les fonctionnalités de la carte à leurs valeurs par défaut.

	MAN Envisio	n	Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
Information Configuration	Date/Time Language SysLog	Setting Save/Restore	•
UPS On/Off Schedule Network Wireless LAN	Save current configuration Restore previous configuration Reset to factory default	Unencrypted(for upload on other dev Choose File No file chosen	rice) V Restore Reset
SNMP + Notification Web/Telnet/FTP BACnet			
EV-PROBE-TH Modbus System			
Log Information Management SNMPView Lite			

4.4.3 Informations du journal

Journal des événements

Un horaire des événements qui se déroulent à l'UPS.

- Liste des événements :Le journal des événements affiche un enregistrement de tous les événements qui se produisent sur l'onduleur, en indiquant la date et l'heure de l'événement. Il fournit aussi une description détaillée de l'événement. Sélectionnez n'importe quel mois ou année dans le calendrier et les événements de ce mois seront affichés. Les événements peuvent aussi être filtrés par type : grave, avertissement ou notification. Appuyez sur l'icône « Actualiser » et le calendrier mettra à jour les événements de l'actualisation précédente. Appuyez sur l'icône « Aujourd'hui » pour obtenir une liste des événements de la journée en cours.
- <u>Recensement des événements</u>: Présenter les événements enregistrés, dans le délai défini, de manière statistique.



				Latest Events [08:08:21] Output Off [08:07:18] Output Off [08:07:18] UPS has switched to b	attery power.						
	Information	Event Log									9
*	Configuration										
7	Log Information	◀ 2024 	► < 10 ·	✓ ► All Eve	ents 🗸	Refresh	Today	ave		October 2024	
Dat	a Log			Oc	tober 2	024 🤇	1				
Use	r Log	Sun	Mon	Tue	Wed	Thu	Fri	Sat		Events List Events census	
$\mathbf{\hat{U}}$	Management	20	20	1 🕜	2 6	2 🕥	4 💿	E O	[10-18 08:08:21]: [10-18 08:07:18]:	Output Off	A
品	SNMPView Lite	29	50			50	4 🔮	5 🗸	[10-18 08:07:18]: [10-17 11:15:26]: [10-09 16:29:40]:	Octob	er 2024
	9	6 🛛	7 🧿	8 0	9 2) 120 1 0	100	110	120	[10-09 16:29:00]: [10-09 16:27:26]: [10-09 16:13:35]: [10-09 16:13:13]:	Events List	Events census
	•	130	140	150	160	17 0	18 9	190	[10-09 16:12:39]: [10-09 16:10:38]: [10-09 16:10:38]: [10-09 16:10:33]:	19.23% ->	- 11.54%
		200	210	220	230	240	250	260	[10-09 16:06:13]: [10-09 16:06:13]: [10-09 16:06:13]: [10-09 16:05:02]:	3.85% 3.85% 19.23%	3.85% 7.69% 19.23%
		270	280	290	300	310	1	2	[10-09 16:05:02]: [10-09 16:05:02]: [10-09 16:04:26]: [10-09 16:04:26]:		
									[10-05 10:02:51]:	UPS has switched to battery power.	😑 Internal diagnostic self-test
										Utility power has been restored.	😑 Output Off
										 Shutdown Imminent 	NetFeeler Communication Lo
										No Awaiting Power	 System On
										 Awaiting Hower 	

Journal de données

• Tableau de données - Enregistre un ensemble de points de données en temps réel concernant l'onduleur : tension d'entrée (V) ; Tension de sortie (V) ; Fréquence (Hz) ; Température (°C), tension de la batterie (V) ; Capacité (%) et Charge (%). Les journaux peuvent être enregistrés au format CSV en cliquant sur « Enregistrer ». La barre supérieure peut être ajustée pour vérifier l'état du journal à un moment précis de la journée.





• Journal de données-Cette option de menu enregistre les statistiques UPS sous forme de liste et sont horodatées au fur et à mesure qu'elles se produisent. Cette liste comprend :

Tension d'entrée (V)	Tension de sortie (V)
Fréquence (Hz)	Charger(%)
Capacité(%)	Tension de la batterie (V)
Tension de la cellule (V)	Temp. (°C°F

REMARQUE:Une fois l'EV-PROBE-TH installé, les données des capteurs connectés seront également disponibles.

	POWER TECHNO		Env	ision					Latest Ev [08:08:21 [08:07:18 [08:07:18	ents] Output Off] Output Off] UPS has switche	d to battery power.
	Information	D	ata Chart Data Log	Data Statistics							?
*	Configuration	No	. Date/Time	Input Volt.(V)	Output Volt.(V)	Freq. (Hz)	Load(%)	Capacity(%)	Battery Volt.(V)	Cell Volt.(V)	Temp.(°C °F)
	Log Information	1	2024-10-22 08:18:58 2024-10-22 08:18:36	120.4	0.0	60.0	0	100	83.0 83.0	83.00 83.00	0.0/32.0
Eve	ent Log	3	2024-10-22 08:18:13 2024-10-22 08:17:50	120.4	0.0	60.0	0	100	83.0	83.00 83.00	0.0/32.0
Da	ta Log	5	2024-10-22 08:17:28 2024-10-22 08:17:05	120.6	0.0	60.0	0	100	83.0	83.00	0.0/32.0
(j)	Management	7 8	2024-10-22 08:17:03 2024-10-22 08:16:42 2024-10-22 08:16:20	120.7	0.0	60.0 60.0	0	100	83.0 83.0	83.00 83.00	0.0/32.0
墨	SNMPView Lite	9 10	2024-10-22 08:15:57 2024-10-22 08:15:34	120.6 120.4	0.0	60.0 60.0	0	100 100	83.0 83.0	83.00 83.00	0.0/32.0 0.0/32.0
		11 12 13	2024-10-22 08:15:12 2024-10-22 08:14:49 2024-10-22 08:14:26	120.4 120.5 120.4	0.0	60.0 60.0	0	100 100 100	83.0 83.0 83.0	83.00 83.00 83.00	0.0/32.0 0.0/32.0
		14 15	2024-10-22 08:14:04 2024-10-22 08:13:41	120.5	0.0	60.0 60.0	0	100	83.0 83.0	83.00 83.00	0.0/32.0 0.0/32.0
	U	16 17	2024-10-22 08:13:18 2024-10-22 08:12:56	120.5 120.5	0.0	60.0 60.0	0	100 100	83.0 83.0	83.00 83.00	0.0/32.0
		18 19	2024-10-22 08:12:33 2024-10-22 08:12:10	120.4 120.4	0.0	60.0 60.0	0	100	83.0 83.0	83.00 83.00	0.0/32.0 0.0/32.0
		20 21	2024-10-22 08:11:47 2024-10-22 08:11:25	120.4	0.0	60.0 60.0	0	100	83.0 83.0	83.00 83.00	0.0/32.0 0.0/32.0
		22	2024-10-22 08:11:02 2024-10-22 08:10:39	120.5 120.5	0.0	60.0 60.0	0	100	83.0 83.0	83.00 83.00	0.0/32.0
		24	2024-10-22 08:10:17 2024-10-22 08:09:54	120.6	0.0	60.0	0	100	83.0	83.00	0.0/32.0
		26	2024-10-22 08:09:34	120.5	0.0	60.0	0	100	83.0	83.00	0.0/32.0
		27	2024-10-22 08:09:09	120.0	0.0	60.0	0	100	83.0	83.00	0.0/32.0
			Date of Datalog: 2024/10	0/22	4	1 2 .	•• 27 🕨	Go 1			Refresh Save

• Données statistiques -Fournit des détails et des instructions pour les statistiques de données actuelles de l'onduleur connecté.

	POWER TECHNOLOGIES Envision										
	Information	Data	Chart Data Log	Data Statistics					?		
*	Configuration	No.	Name	Number Of Data	Maximum Value	Minimum Value	Average Value	Variance	Standard deviation		
1	Log Information	1	Input Volt.(V)	1324	122.3 00:45:36	119.3 07:24:56	121.0 2024-10-22	0.3 2024-10-22	0.5 2024-10-22		
Eve	ent Log	2	Output Volt.(V)	1324	0.0 08:20:06	0.0 08:20:06	0.0 2024-10-22	0.0 2024-10-22	0.0 2024-10-22		
Da	ta Log er Log	3	Freq.(Hz)	1324	60.0 08:20:06	60.0 08:20:06	60.0 2024-10-22	0.0 2024-10-22	0.0 2024-10-22		
(j)	Management	4	Temperature(°C °F)	1324	0.0/32.0 08:20:06	0.0/32.0 08:20:06	0.0/32.0 2024-10-22	0.0/0.0 2024-10-22	0.0/0.0 2024-10-22		
문	SNMPView Lite	5	Battery Volt.(V)	1324	83.0 08:20:06	\$3.0 08:20:06	83.0 2024-10-22	0.0 2024-10-22	0.0 2024-10-22		
		6	Cell Volt.(V)	1324	83.00 08:20:06	83.00 08:20:06	83.00 2024-10-22	0.00 2024-10-22	0.00 2024-10-22		
	l i i i i i i i i i i i i i i i i i i i	7	Load(%)	1324	0.0 08:20:06	0.0 08:20:06	0.0 2024-10-22	0.0 2024-10-22	0.0 2024-10-22		
		8	Capacity(%)	1324	100.0 08:20:06	100.0 08:20:06	100.0 2024-10-22	0.0 2024-10-22	0.0 2024-10-22		
		Dat	e of Datalog: 2024/10/22						Refresh		



• Journal de l'utilisateur - Fournit un journal d'exécution des actions effectuées par le biais de la carte EV-NETCARD.

		/ision	Latest Events [08:08:21] Output Off [08:07:18] Output Off [08:07:18] UPS has switched to battery power.
Information	User Log		?
🛠 Configuration			
Log Information	Date/Time	User Name	Log Content
Event Log	2024/10/18 13:55:59		UPS Action(No.1) be added by user
Data Log	2024/10/18 13:44:17		Cancel Test be sent by user
User Log	2024/10/09 14:02:45		Timer Server Settings be modified by user
() Management	2024/10/09 19:02:24		Timer Server Settings be modified by user
器 SNMPView Lite	2024/09/26 18:59:04		User logout NetAgent from Telnet/SSH(192.168.168.169)
	2024/09/26 18:57:17		User login NetAgent through Telnet(192.168.168.169)
	2024/09/26 18:57:02		User logout NetAgent from Telnet/SSH(192.168.168.169)
	2024/09/26 18:55:23		User login NetAgent through Telnet(192.168.168.169)
	2024/09/26 17:37:32		Test Mail(mis@minutemanups.com) be sent by user
	2024/09/26 17:36:43		Test Mail(mis@minutemanups.com) be sent by user
	2024/09/26 17:36:30		Test Mail() be sent by user
	2024/09/26 17:36:24		Email Settings be modified by user
	2024/09/26 17:35:51		Test Mail() be sent by user
	2024/09/26 17:35:48		Email Settings be modified by user
	2024/09/26 17:35:06		Test Mail() be sent by user
	Show Log Type All	~	Refresh Save All

4.4.4 Gestion

-Envisager le Web

- Carte réseau Web-Cette option de menu affichera toutes les cartes réseau Envision installées sur le réseau. Chaque liste de cartes comprendra : son numéro de série ; Adresse Mac ; Version du matériel/firmware et adresse IP. Mettez en surbrillance et sélectionnez une carte pour voir les options de configuration disponibles.
 - <u>Paramètres</u>: Des mises à jour et des modifications peuvent être apportées à l'accessibilité réseau de la carte réseau Envision. Si les champs de cette fenêtre sont laissés vides, l'EV-NETCARD ne sera pas accessible.
 -AVERTISSEMENT: Toute modification apportée peut avoir un effet direct sur l'accessibilité de la carte sur le réseau.
 - Adresse IPV4 : entrez une nouvelle adresse IP en utilisant DHCP, Bootp ou en saisissant manuellement une adresse IP statique. Si vous entrez une adresse IP statique, entrez l'adresse IP préférée, le masque de sous-réseau et l'adresse de passerelle dans les champs fournis, puis appuyez sur « OK ».
 - Adresse IPV6 : créez une adresse IPV6 pour la carte à l'aide des options : automatique, DHCPV6 sans état, DHCPV6 ou automatique. Si vous utilisez « Manuel », entrez l'adresse IP préférée, le préfixe IPV6 et l'adresse de la passerelle dans les champs fournis, puis appuyez sur « OK ».
 - Avancé : définissez les fonctions de protocole disponibles préférées utilisées par la carte. La carte peut accepter un ou plusieurs des éléments suivants : HTTP, HTTPS, TELNET et SSH. Lorsque vous sélectionnez une option, entrez le numéro de port à utiliser pour cette option. Une fois terminé, appuyez sur l'icône « OK ».



- Mot de passe : définissez ou modifiez un mot de passe pour accéder à la carte. Si un mot de passe est déjà utilisé, entrez l'ancien mot de passe dans le champ prévu à cet effet, puis entrez le nouveau mot de passe et confirmezle avant d'appuyer sur l'icône « OK ».
- Mise à niveau :Une fois sélectionné, suivez les instructions pour télécharger le nouveau fichier de configuration créé pour la carte.
- <u>Parcourir</u> : La sélection de « Parcourir » redirigera directement le navigateur Web vers la page Web de la carte.

Si la carte EV-NETCARD est accessible via IP WAN, l'utilitaire Web Envision pourra également répertorier toutes les autres cartes EV-NETCARD disponibles sous le même réseau local. (Le port HTTP 81 doit être activé sur la EV-NETCARD avec l'IP WAN et le domaine comme http://xxx.xxx.xx:81 où (xxx.xxx.xx) est l'IP WAN ou le nom de domaine.

		Latest Events [03:33:13] Internal diagn [02:50:18] Warning! Smo [02:48:30] Option5 Alarm	Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm			
	Information	NETCARD Web				?
*	Configuration	NetAgent				
	Log Information	Device	MAC Address	Hardware	Firmware	IP Address
1	Management	▼ 3927220890	00:03:EA:14:A2:9A	HCY504	3.8.CY504	192.168.168.18
Envision Web File Manager Serial Port Debug Help About		Hardware Vers Firmware Vers MAC Address:(IPV4 Addr:192, LocalLink Addr IPv6 Addr:	IIcare viseou EV-NETCARD-16 ion:3.8.CY504 0):03:EA:14:A2:9A 168.168.18 [[fe80::203:eaff:fe14:a29a]	© <u>Settings</u>		
品	SNMPView Lite					Refresh

- Gestionnaire de fichiers

Utilisez cette option de menu pour gérer les fichiers Datalog générés par la carte EV-NETCARD ainsi que les fichiers de configuration utilisés pour la programmation par lots de plusieurs cartes sur un réseau. Une fois les fichiers journaux examinés, ils peuvent être enregistrés ou supprimés. Si un « dat. Si le fichier « Fichier » est supprimé, l'enregistrement du journal sera également effacé sur l'affichage du journal de la carte, sous l'onglet du menu Informations sur le journal.

	POWER TECHNOLOGIES Envision						gnostic self-test passed. noke detected. rrm		
	Information	File Manager						?	
*	Configuration		A A A A						
1	Log Information	e- ⊇ u-disk	Current Location:log					0	
$\widehat{1}$	Management			Туре	Name	Size	Modified Time	Access Time	
En	vision Web				datalog		2000/01/01 00:00:19	2024/09/26 07:56:20	
File	e Manager				eventlog		2000/01/01 00:00:31	2024/09/26 07:56:20	
Se	rial Port Debug				batterylog		2024/09/26 07:56:20	2024/09/26 07:56:20	
He	lp	1	< □		smslog		2024/09/26 07:56:20	2024/09/26 07:56:20	
Ab	out	*			userlog		2024/09/26 17:35:07	2024/09/26 07:56:20	
몲	SNMPView Lite				snmpview		2000/01/01 20:32:42	2024/09/26 07:56:36	
							total 0 f	iles,6 directories.	



- Débogage du port série

Enregistre l'état de communication entre la carte EV-NETCARD et l'onduleur, répertorié via Envoyé et sections reçues.

- Informations de débogage-Les commandes peuvent être envoyées automatiquement par la carte EV-NETCARD à l'onduleur. Les commandes peuvent également être envoyées manuellement en saisissant la commande à l'onduleur dans le champ « Contenu envoyé ». Sélectionnez le format ASCII ou hexadécimal lors de l'envoi de commandes.
- <u>Informations envoyées</u> :Cette section affiche les commandes envoyées en temps réel et par ordre chronologique à l'onduleur.
- Informations reçues :Cette section affiche les réponses de l'onduleur à la carte EV-NETCARD.

		Envision	Latest Events [03:33:13] Internal diagnostic self-test passed. [02:50:18] Warning! Smoke detected. [02:48:30] Option5 Alarm
	Information	Debug Information Port Information	0
*	Configuration		
1	Log Information	● ASCII ○ Hexadecimal	
(i)	Management	Send Content	Send
En File	vision Web e Manager	Sent Information	Clear
See	ial Port Debug Ip out SNMPView Lite	2024/11/15 06:47:54 ^P003MOD 2024/11/15 06:47:52 ^P003ST4 2024/11/15 06:47:54 ^P003ST3 2024/11/15 06:47:48 ^P003ST3 2024/11/15 06:47:49 ^P003ST1 2024/11/15 06:47:49 ^P003ST3 2024/11/15 06:47:49 ^P003ST1 2024/11/15 06:47:49 ^P003ST3 2024/11/15 06:47:49 ^P003ST4 2024/11/15 06:47:49 ^P003ST4 2024/11/15 06:47:30 ^P003ST4 2024/11/15 06:47:36 >P003ST4 2024/11/15 06:47:36 >P003ST4 2024/11/15 06:47:36 >P003ST4 2024/11/15 06:47:54 >P003ST4 2024/11/15 06:47:54 >P003ST4 2024/11/15 06:47:54 >P0027(s99,1)189,000,0000 2024/11/15 06:47:52 >P0027(s99,1)189,000,0000 2024/11/15 06:47:52 >P0027(s99,1)189,000,0000 2024/11/15 06:47:44 >P029(s0,0,000,0,0,0,0,00 2024/11/15 06:47:44 >P029(s0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,	Clear Clear

• Informations sur le port-Configure les paramètres de communication entre la carte EV-NETCARD et l'onduleur. Les paramètres disponibles sont : mode de débogage, port, vitesse (baud), bits de données, parité et bits d'arrêt. Les deux formats d'encodage sont : ASCII ou Hexadécimal.


POWER TECHNOLOGIES Envision Latest Events D333:13] Internal diagnostic self-test passed. D259:13] Warningt Smoke detected. D259:13] Warningt Smoke detected. D234:30] Option5 Alarm											
L Information	Debug Information Port Information		?								
Configuration											
Log Information	Debug Mode	Auto 🗸									
(i) Management	Port	UPS 🗸									
Envision Web	Speed(baud)	9600 🗸									
File Manager	Data Bits	8 🗸									
Serial Port Debug	Parity	None 🗸									
Help About	Stop Bits	1 Bit 🗸									
器 SNMPView Lite											
			Apply								

- Aider

٠

La carte EV-NETCARD offre une bibliothèque de ressources d'aide en ligne qui fournit des réponses aux questions et une description sur la fonction des pages individuelles de l'interface du navigateur Web.

		Envision
UP Sys	Information S Status stem Status	System Information UPS Information Network Status Connections Status Wireless Status
Rei SM Net	note Control S Modem Status tSwitch Status	This tab is to show EV-NETCARD-1G system information. Values in Hardware Version/Firmware Version/Serial Number/System Time, are provided by EV-NETCARD-1G itself. Other values are user settings from the Configuration pages.
€V. ≪	PROBE-TH Configuration	
1	Management	

À propos de

•À propos de -Affiche les révisions du matériel et du micrologiciel ainsi que le numéro de série de la carte.



POWER TECHNOLOGIES Envision									
	Information	About Firmware Update							
*	Configuration								
1	Log Information	Firmware Version	3.12.BA506.Para.4						
(\mathbf{i})	Management	Hardware Version	EV-NETCARD-1G						
En	vision Web	Serial Number	HH56240900001						
File	e Manager								
Sei	rial Port Debug			Data Customa las					
He	lp4	1		Tel: +1-972-446-7363 TOLL-FREE 800-238-7272					
品	SNMPView Lite	9		e-mail: <u>service@minutemanups.com</u> Webpage: <u>http://www.minutemanups.com</u>					

• Mise à jour du micrologiciel-Cette option de menu est utilisée pour mettre à jour le micrologiciel de la carte EV-NETCARD.

- Mise à jour par FTP/SFTP :
 - Type de protocole : définissez le protocole entre FTP et SFTP à l'aide du menu déroulant
 - Serveur FTP/SFTP : entrez l'emplacement du serveur FTP sur le réseau pour la mise à jour du micrologiciel
 - Utilisateur : identifiants d'utilisateur du client
 - Mot de passe : entrez le mot de passe de l'utilisateur.

Une fois les informations saisies, sélectionnez « Appliquer » pour sauvegarder les paramètres. Le micrologiciel démarrera selon les paramètres programmés. Appuyez sur « Mettre à jour maintenant » pour effectuer manuellement la mise à jour du micrologiciel.

- Trouver un nouveau micrologiciel : sélectionnez une date d'intervalle dans le menu déroulant.
- Mise à jour automatique : sélectionnez un intervalle et une heure pour effectuer les mises à niveau du micrologiciel à l'aide du menu déroulant et du champ ouvert.

Une fois les informations saisies, sélectionnez « Appliquer ». Le micrologiciel sera mis à jour en fonction des paramètres programmés.

- Mise à jour sur le Web :
 - Version actuelle du micrologiciel : affiche le micrologiciel actuel utilisé par la carte EV-NETCARD
 - Mise à jour du micrologiciel : choisissez un dossier et un fichier spécifiques à utiliser pour mettre à jour le micrologiciel de la carte, puis appuyez sur l'icône « Mettre à jour maintenant » pour lancer le processus de mise à jour.



		Envisio	n	Latest Events [03:33:13] Internal diagnostic self-test passed [02:50:18] Warning! Smoke detected, [02:48:30] Option5 Alarm	d
	Information	About Firmware Update			
*	Configuration	Lindate by ETD/SETD			
1	Log Information	Protocol Type	FTP V		
(j)	Management	FTP/SFTP Server			
En	vision Web	User			
File	e Manager	Password			
Se	rial Port Debug			Update Now >> Ap	ply
He	elp	Check for New Firmware	Every 1 Day		_
모	SNMDView Lite	Auto Update	Every NO V At (Hou	ur : Minute)	
66				Ap	ply
	•	Update by Web			
		Current Firmware Version	3.12.BA506.Para.4		
		Firmware Update	Choose File No file chosen	Update Now	>>
				Para Systems, Inc. Tel: +1-972-446-7363 TOLL-FREE 800-238-7 e-mail: <u>service@minutemanups.com</u> Webpage: <u>http://www.minutemanups.com</u>	7272

4.5 SNMPView Lite

SNMPView Lite fournit une plateforme unique pour la surveillance et la programmation en temps réel d'un maximum de 9 cartes EV-NETCARD actives via une connexion réseau.

-Statut UPS

• Statut UPS–La page d'état de l'onduleur peut fournir un affichage en temps réel jusqu'à 9 cartes EV-NETCARD via une connexion réseau. L'écran de surveillance affichera l'état actuel de la connexion de l'onduleur en mode graphique avec la tension, la fréquence, l'adresse IP et d'autres informations. Chacune des 9 cartes actives affichées peut être supprimée ou remplacée par d'autres cartes du réseau à l'aide du menu Configuration.





- Configuration

- **Configuration de l'onduleur**–La page de configuration fournit une liste en temps réel de 9 cartes EV-NETCARD maximum sur une connexion réseau. Les cartes énumérées sur cette page seront les mêmes que les cartes énumérées sur la page Statut UPS. La sélection d'une carte dans la liste développera les renseignements détaillés sur cette carte.
- <u>Paramètres</u>: Vérifiez ou mettez à jour et modifiez les informations d'adresse IP de la carte. Le niveau de sécurité de la carte (SNMPv1, SNMPv2c, SNMPv3) peut aussi être mis à jour à l'aide de cet écran.
- <u>Navigateur</u> : La sélection du navigateur redirigera l'écran du navigateur directement vers la carte sélectionnée.
- <u>Supprimer</u>: La sélection de Supprimer supprimera la carte de la liste des cartes surveillées et de l'écran d'état de l'onduleur

	POWER TECHNOLOGIES Envision										
	Information	UPS Config	guration	System Configuration	on						
*	Configuration										
1	Log Information							<u>i</u>			
(\mathbf{i})	Management	NO.	Controlle	ed UPS UPS	Status	System Name	System Location	Uptime			
뫎	SNMPView Lite	v 1	192.168.	168.18:161 On	line	UPS Agent	My Office	119 days, 1:34:15.73			
UPS Status Configuration Event Log Data Log		Input Freq. Capa AC/B. One/	: Volt.(V) (Hz) city(%) at Status Three Phase	125.0 60.0 100 AC Normal/Battery Normal 1-Phase	Output Volt.(V) Load(%) Battery Volt.(V) Temp.(°C/°F) Online Status	121.0 0 41.4 26.9/80.4 Online		⊗ <u>Settings</u> & <u>Browser</u> ☐ <u>Delete</u>			
		▶2	192.168.	168.8:161 On	line			4 days, 5:20:29.17			

- **Configuration du système**–Fournit une option permettant de modifier les paramètres système des cartes incluses dans les pages d'état et de configuration de l'onduleur. Les modifications apportées à cette page n'affecteront que les cartes activement surveillées.
- <u>SNMP</u>: Affichez les paramètres de port et les paramètres de communauté actuels pour les cartes actives sur la page d'état de l'onduleur ou apportez les modifications souhaitées. L'intervalle d'interrogation SNMP pour les cartes peut aussi être modifié. Utilisez le champ « Période sans réponse » pour modifier le nombre de fois que les cartes sélectionnées sont pingées sans réponse avant qu'une alarme ne soit émise.
- <u>Journal</u>:Les champs Journal permettent d'activer ou de désactiver les fonctions de journalisation des événements et des données. L'intervalle de rapport des données et des événements peut également être ajusté ainsi que la création d'un journal de sauvegarde, si vous le souhaitez.

	N.			<u>OMAN</u>
POW	ER	ΤE	CHN	by Para Systems, Inc.

		Envision		Latest Events [09:22:28] ECO not Active [09:21:40] ECO Active [09:20:50] Output On		
	Information	UPS Configuration System Configuration	on			
*	Configuration	SNMP				
1	Log Information	SNMP Broadcast Port (1-65534):	161			
(\mathbf{i})	Management	SNMP Broadcast Community:	public	Ĵ		
모	SNMDView Lite	Local Receive Trap Port (1-65534):	162			
		SNMP Polling Every (1-60):	10	Secs		
	nfiguration	Period of No Respond (2-10):	3 🗸			
Eve	ent Log					
Da	ta Log	Log				
		Save Event Log:	Yes 🗸			
		Save Data Log:	Yes 🗸			
		Save Data Log Every (10-600):	10	Secs (Not Less Than SNMP Polling Time)		
		Backup Log:	Yes 🗸			
				Apply Reset		

- Journal des événements
 - Journal des événements–Fournit un résumé mensuel des événements survenus sur les cartes sélectionnées sur les pages d'état ou de configuration de l'onduleur. Le calendrier des événements par défaut est défini sur Mensuel, mais peut être modifié pour afficher les événements quotidiens en cours. Utilisez les menus déroulants, puis sélectionnez « Actualiser » pour voir les événements des mois précédents. Les menus déroulants peuvent également être utilisés pour sélectionner des cartes spécifiques et le type d'événements à répertorier : Tous, Grave, Avertissement et Information.
 - Liste des événements :Dispose d'une liste filtrée de tous les événements notés sur le calendrier par les paramètres utilisés.
 - Recensement des événements : Affiche la liste filtrée des événements dans un graphique à secteurs.

	MAN E	nvisi	ion					Latest Events 10982283 ECO not Active 109821440 ECO Active 109820501 Output On	
Information	Event Log								9
X Configuration									
Log Information	4 2024 ★	4 10 <>>	All Events	✓ All UPS	✓ Refr	esh Today	Save		
() Management			0-	t - h - u - 20				October 2024	
品 SNMPView Lite			ÜC	toper 20)24	<u> </u>		Events List Events census	
UPS Status	Sun.	Mon.	Tue.	Wed.	Thu.	Fri.	Sat.	[192.168.168.18 10-18 08:08:32]: UPS communication has been established.	
Configuration	29	30	1 💿	2 🕐	3 💿	4 💿	5 💿	[192.108.106.18 10-18 08:08:32]: UPS communication has been established. [192.168.168.8 10-18 08:08:32]: UPS communication has been established.	a.
Event Log								[192,108,108,8 10-18 U8:08:32]: Network communication has been established. [192,168,168,8 10-18 08:07:19]: UPS has switched to battery power.	
	6 💿	7 💿	8 💿	9 6 6	10😶	11 💿	120	[192.168.168.18 10-17 11:15:20]: UPS communication has been established. [192.168.168.18 10-17 11:15:20]: Network communication has been established. [192.168.168.8 10-17 11:15:20]: UPS communication has been established. [192.168.168.8 10-17 11:15:20]: UPS communication has been established.	d.
ĺ	130	14	150	160	174 •	185 18 18 18	19🖸	[192.168.168.8 10-09 15-22 [192.168.168.8 10-09 15-22 [192.168.168.8 10-09 15-22 [192.168.168.8 10-09 15-22 [192.168.168.18 10-09 15-22 [192.168.168.18 10-09 15-22	
	20💿	210	220	230	240	25	26	[192.168.168.18 10-09 15:2] [192.168.168.18 10-09 15:2]	
	270	280	290	300	310	1	2	42,86% - 22,86%	
								2,34%	
								Uril Ass suitable to battery grows. Uril communication has been established. Urild communication has been restablished. Urild power has been restarded. National communication has been established.	rd.

Journal de données

• Tableau de données–Le graphique de données fournit un flux continu de facteurs d'entrée, de sortie et de charge pour une carte EV-NETCARD spécifique en fonction des points de données des intervalles de temps définis dans la page de configuration système de SNMPView Lite. Sélectionnez la carte individuelle à surveiller dans le menu déroulant au bas de la page. Faites défiler la souris sur l'un des points de données pour voir les valeurs spécifiques pour cette date et cette heure particulières. Les intervalles de début et de fin peuvent être ajustés en déplaçant les dates de début et de fin verticales



• Journal de données–Fournit les mêmes informations que la page Graphique de données, mais dans une liste de points de données. Les informations par défaut à l'écran représentent les derniers points de données. Touchez l'icône de rafraîchissement pour mettre à jour les informations. Pour afficher les points de données antérieurs, sélectionnez une date dans le menu déroulant au bas de la page.

Pour sauvegarder les informations, appuyez sur l'icône Enregistrer et les informations seront compilées dans un fichier csv qui peut être sauvegardé ou visualisé à l'aide d'une visionneuse compatible comme Microsoft Excel.



	Envision												Latest Events [09:22:28] ECO not Active [09:21:40] ECO Active [09:20:50] Output On		
🛄 Ir	nformation	D	ata Chart Dat	ta Log Data Stati	stics										
* •	onfiguration														
1 L	og Information	No	Controlled UPS	Date/Time	Input Volt.(V)	Output Volt.(V) Freq. (Hz)	Load(%)	Capacity(%)	Battery Volt.(V) Temp.(°C °F)	System Name	System Location		
 M 	lanagement	2	192.168.168.18 192.168.168.18	2024-10-22 14:40:24 2024-10-22 14:40:14 2024-10-22 14:40:04	124.1	120.3	60.0	0.0	100	41.4	26.9/80.4	UPS Agent	My Office My Office		
윰 S	NMPView Lite	4	192.168.168.18 192.168.168.18	2024-10-22 14:39:54 2024-10-22 14:39:45	125.0	121.0	60.0 60.0	0.0	100	41.4	26.9/80.4 26.9/80.4	UPS Agent UPS Agent	My Office My Office		
UPS St Config	tatus turation	6	192.168.168.18 192.168.168.18	2024-10-22 14:39:35 2024-10-22 14:39:24	125.0 124.1	121.0 120.3	60.0 60.0	0.0	100 100	41.4 41.4	26.9/80.4 26.9/80.4	UPS Agent UPS Agent	My Office My Office		
Event I	Log	8	192.168.168.18 192.168.168.18	2024-10-22 14:39:14 2024-10-22 14:39:04	125.0 125.0	121.0 121.0	60.0 60.0	0.0	100	41.4	26.9/80.4 26.9/80.4	UPS Agent UPS Agent	My Office My Office		
Data L	.og	11	192.168.168.18 192.168.168.18	2024-10-22 14:38:45 2024-10-22 14:38:45 2024-10-22 14:38:35	124.1 124.1 125.0	120.3	60.0	0.0	100	41.4 41.4 41.4	26.9/80.4	UPS Agent	My Office My Office		
		< <u>13</u> 14	192.168.168.18 192.168.168.18	2024-10-22 14:38:24 2024-10-22 14:38:14	125.0	120.3	60.0 60.0	0.0	100	41.4	26.9/80.4 26.9/80.4 26.9/80.4	UPS Agent UPS Agent	My Office My Office		
		19	192.168.168.18 192.168.168.18	2024-10-22 14:38:04 2024-10-22 14:37:54	124.1 124.1	120.3 121.0	60.0 60.0	0.0	100	41.4 41.4	26.9/80.4 26.9/80.4	UPS Agent UPS Agent	My Office My Office		
		17	192.168.168.18 192.168.168.18	2024-10-22 14:37:45 2024-10-22 14:37:35	124.1 124.1	121.0 121.0	60.0 60.0	0.0	100 100	41.4 41.4	26.9/80.4 26.9/80.4	UPS Agent UPS Agent	My Office My Office		
		19	192.168.168.18 192.168.168.18	2024-10-22 14:37:24 2024-10-22 14:37:14	124.1 124.1	120.3 120.3	60.0 60.0	0.0	100 100	41.4 41.4	26.9/80.4 26.9/80.4	UPS Agent UPS Agent	My Office My Office		
		21	192.168.168.18 192.168.168.18	2024-10-22 14:37:04 2024-10-22 14:36:55	124.1 124.1	120.3 120.3	60.0 60.0	0.0	100	41.4	26.9/80.4 26.9/80.4	UPS Agent UPS Agent	My Office My Office		
		23	192.168.168.18 192.168.168.18	2024-10-22 14:36:45 2024-10-22 14:36:34	125.0 125.0	121.0 121.0	60.0 60.0	0.0	100	41.4	26.9/80.4 26.9/80.4	UPS Agent UPS Agent	My Office My Office		
		25	192.168.168.18 192.168.168.18	2024-10-22 14:36:24 2024-10-22 14:36:14	125.0	120.3 120.3	60.0 60.0	0.0	100	41.4 41.4	26.9/80.4	UPS Agent	My Office My Office		
		b	og Date: 2024/10/2	22	1 2	106 🕨	Go 1		UPS I	P: 192.168.16	3.18 🗸		Refresh Save		

• Données statistiques–La page Statistiques des données fournit un aperçu des valeurs minimales et maximales pour l'entrée et la sortie d'un onduleur spécifique avec une carte EV-NETCARD installée. Les renseignements sont limités à une date précise qui peut être sélectionnée dans le champ au bas de la page. Les informations fournies indiquent la tension d'entrée et de sortie, la fréquence, la température de l'onduleur, les informations de charge connectée et la tension de la batterie.

	Latest Events POWER TECHNOLOGIES Envision Latest Events [09:22:23] ECO not Active [09:20:50] Output On												
	Information	Dat	a Chart Data	Log Data Statisti	cs								
*	Configuration	No.	Name	Number Of Data	Maximum Value	Minimum Value	Average Value	Variance	Standard deviation				
1	Log Information	1	Input Volt.(V)	5292	127.7 00:11:11	123.3 08:27:01	125.4 2024-10-22	1.1 2024-10-22	1.1 2024-10-22				
\bigcirc	Management	2	Output Volt.(V)	5292	121.0 00:01:11	120.3 00:00:01	120.6 2024-10-22	0.1 2024-10-22	0.3 2024-10-22				
묢	SNMPView Lite	3	Load(%)	5292	0.0 00:00:01	0.0 00:00:01	0.0 2024-10-22	0.0 2024-10-22	0.0 2024-10-22				
UF	UPS Status		Freq.(Hz)	5292	60.0 00:00:01	60.0 00:00:01	60.0 2024-10-22	0.0 2024-10-22	0.0 2024-10-22				
Co	nfiguration	5	Temp.(*C/*F)	5292	28.0/82.4 00:58:32	25.7/78.3 00:09:41	27.0/80.6 2024-10-22	0.4/1.3 2024-10-22	0.6/1.1 2024-10-22				
EV Da	ta Log	6	Battery Volt.(V)	5292	41.4 00:00:01	41.4 00:00:01	41.4 2024-10-22	0.0 2024-10-22	0.0 2024-10-22				
		7	Capacity(%)	5292	100.0 00:00:01	100.0 00:00:01	100.0 2024-10-22	0.0 2024-10-22	0.0 2024-10-22				
			Log Date: 2024/1	0/22	UPS	IP: 192.168.168.18	~		Refresh				



Remarques :



Avis supplémentaires :

REMARQUER:Ce produit est conforme aux règles relatives aux appareils de classe B, conformément à la partie 15 des règles de la FCC relatives aux émissions de bruit radio provenant d'un appareil numérique.

Ces limites sont conçues pour assurer une protection raisonnable contre de telles interférences dans une installation résidentielle.

Cet équipement génère et utilise des fréquences radio et s'il n'est pas installé et utilisé correctement, en stricte conformité avec les instructions du fabricant, il peut provoquer des interférences avec la réception radio et télévision. Si cet appareil provoque des interférences avec la réception radio ou télévision, ce qui peut être déterminé en éteignant et en rallumant l'équipement, l'utilisateur est encouragé à essayer de corriger l'interférence par une ou plusieurs des mesures suivantes :

- Réorienter l'antenne de réception.
- Déplacez l'ordinateur par rapport au récepteur.
- Éloignez l'ordinateur du récepteur.
- Branchez l'ordinateur sur une prise différente pour que l'ordinateur et le récepteur soient sur des circuits de dérivation différents.
- Des câbles d'interface de communication blindés doivent être utilisés avec ce produit.

Politique de maintien des fonctions vitales

Para Systems ne prend pas en charge l'utilisation d'aucun de ses produits dans des applications de maintien des fonctions vitales où la défaillance ou le dysfonctionnement du produit peut raisonnablement être susceptible de provoquer une défaillance des dispositifs de maintien des fonctions vitales ou d'affecter de manière significative leur sécurité ou leur efficacité. De plus, Para Systems ne recommande pas l'utilisation d'aucun de ses produits dans les soins directs aux patients.



Para Systèmes, Inc. 2850, promenade Lake Vista, bureau 110 Lewisville, Texas 75067 800.238.7272 <u>www.minutemanups.com</u>

© 2025 SYSTÈMES PARA, INC.

Minuteman Power Technologies et Envision sont la propriété de Para Systems, Inc. Toutes les autres marques de commerce appartiennent à leurs propriétaires respectifs.