

Encompass Series (Ext. Runtime)

User's Manual

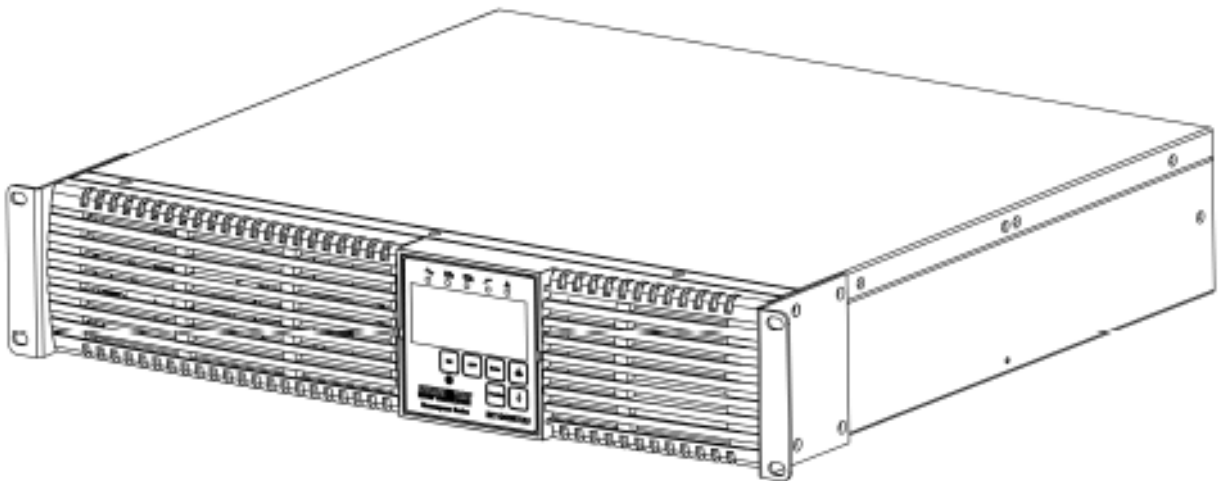


Table of Contents

| | |
|------------------------------|----|
| Introduction | 1 |
| 1. Important Safety Warning | 2 |
| 2. Installation and Setup | 5 |
| 3. Operations | 9 |
| 4. Troubleshooting | 17 |
| 5. Service and Maintenance | 18 |
| 6. Specifications | 22 |
| 7. Warranty | 24 |
| A1 Declaration of Conformity | 26 |

Introduction

Thank you for purchasing a MINUTEMAN power protection product. It has been designed and manufactured to provide many years of trouble-free service.

SAVE THESE INSTRUCTIONS - This manual contains important instructions that should be followed during the installation and the maintenance of the UPS system and the batteries.

IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS! CONSIGNES DE SÉCURITÉ IMPORTANTES SAUVEGARDEZ CES CONSIGNES!

Please read this manual and comply with all warnings and instructions before installing your Encompass Series UPS as it provides important information that should be followed during its installation and maintenance, allowing you to correctly set up your UPS for the maximum safety and performance. Included is information on customer support and factory service, if it is required. If you experience a problem with the UPS system please refer to the Troubleshooting guide in this manual to correct the problem or collect enough information so that the Technical Support Department can assist you.

Veuillez lire ce manuel et vous conformer à tous les avertissements et instructions avant d'installer votre UPS Encompass Series car il fournit des informations importantes qui doivent être suivies lors de son installation et de sa maintenance, vous permettant de configurer correctement votre UPS pour une sécurité et des performances maximales. Des informations sur le support client et le service d'usine sont incluses, si nécessaire. Si vous rencontrez un problème avec le système UPS, veuillez vous référer au guide de dépannage de ce manuel pour corriger le problème ou collecter suffisamment d'informations pour que le service d'assistance technique puisse vous aider.

WARNINGS AND CAUTION STATEMENTS:

Risk of Electrical Shock. There are hazardous live parts inside these power supplies that are energized from the battery even when the AC input is disconnected. Do not attempt to disassemble the UPS as it contains no user serviceable parts except for battery replacement. Repairs and Battery replacement must be performed by QUALIFIED SERVICE PERSONNEL ONLY.

This UPS series is only intended to be installed in an indoor temperature-controlled environment that is free of conductive contaminants, dust or direct sunlight. Never install the UPS near liquids, damp locations or where there is potential for contact with liquids.

The ambient operating temperature range for this UPS series is 32° ~ 104°F (0° ~ 40°C)

To ensure the proper ventilation and cooling of the UPS, do not block any of the ventilation cutouts on the UPS. Adequate space must be provided around all sides of the UPS to allow for proper air flow. Do not mount the UPS system with its front or rear panel facing down at any angle.

Only connect the UPS to a two pole, three wire grounded AC wall outlet that includes appropriate branch circuit protection (circuit breaker or fuse) in accordance with NEC ANSI/NFPA 70 and CEC, Part I, C22.2. Do not plug the UPS into itself or use extension cords, adapter plugs, or surge strips as it may damage the UPS or connected devices.

Batteries can present a risk of electrical shock. Observe proper cautions and do not bridge the battery terminals at any time. Follow all precautions and instructions for battery replacement and disposal in the BATTERY REPLACEMENT section of this manual.

1. Important Safety Warning

CAUTION! - To reduce the risk of fire, connect only to a utility powered circuit provided with 20/30 amperes maximum branch circuit over-current protection in accordance with the National Electric Code, ANSI/NFPA 70.

CAUTION! - To reduce the risk of electrical shock with the installation of this UPS equipment and the connected equipment, the user must ensure that the combined sum of the AC leakage current does not exceed 3.5mA.

CAUTION! - To reduce the risk of electrical shock in conditions where the load equipment grounding cannot be verified, disconnect the UPS from the AC wall outlet before installing a computer interface cable. Reconnect the power cord only after all signaling connections are made.

WARNING! - This Uninterruptible Power Supply contains potentially hazardous voltages. Do not attempt to disassemble the UPS beyond the battery replacement procedure. This UPS contains no user serviceable parts. Repairs and battery replacement must be performed by **QUALIFIED SERVICE PERSONNEL ONLY**.

WARNING! - **Qualified Service Personnel ONLY** must perform the installation and servicing of these UPS systems. MINUTEMAN accepts no liabilities and is not limited to: injury to the service personnel, or damages to; the UPS, or the connected equipment caused by the incorrect installation or servicing of the UPS system.

WARNING! - Risk of Electrical Shock. Hazardous live parts inside these power supplies are energized from the battery even when the AC input is disconnected.


CAUTION! - **DO NOT USE THE MOUNTING BRACKETS TO LIFT THE UPS.** The mounting brackets are **ONLY** for securing the UPS to the rack.

NOTE: These UPS are shipped with the batteries disconnected. The batteries must be connected before putting these UPS into service. Refer to **Section 3: Installation and Setup – Connecting the Batteries** for instructions.

CAUTION!

To de-energize the outputs of the UPS:

1. If the UPS is on press and then release the OFF button after the audible alarm beeps twice to turn the UPS off.
2. Disconnect the UPS from the AC wall outlet.
3. To de-energize the UPS completely, disconnect the battery.



ON BUTTON: When the UPS is connected to an AC source and there is an acceptable AC voltage present; Press and then release the ON button after the audible alarm beeps twice to turn the UPS on and power the load.

DC START: Press and then release the ON button after the audible alarm beeps twice. Then within 10-seconds press and then release the ON button after the audible alarm beeps twice to DC start the UPS and power the load.



OFF BUTTON: When the UPS is in the AC normal mode; Press and then release the OFF button after the audible alarm beeps twice to turn the UPS off. The UPS will continue to charge the batteries whenever it is plugged into a wall outlet and there is acceptable AC voltage present.

NOTICE: This equipment has been tested and found to comply with the limits for a Class A and/or B computing device in accordance with the specifications in Subpart J of Part 15 of FCC Rules and the Class A and/or B limits for radio noise emissions from digital apparatus set out in the Radio Interference of the Canadian Department of Communications. These limits are designed to provide reasonable protection against such interference in a residential installation. This equipment generates and uses radio frequency and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, this equipment may cause interference to radio and television reception. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna.
- Relocate the computer with respect to the receiver.
- Move the computer away from the receiver.
- Plug the computer into a different outlet so that the computer and receiver are on different branch circuits.
- Shielded communications interface cables must be used with this product.

WARNING! - Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Receiving Inspection

After removing your UPS from its carton, it should be inspected for damage that may have occurred in shipping. Immediately notify the carrier and place of purchase if any damage is found. Warranty claims for damage caused by the carrier will not be honored. The packing materials that your UPS was shipped in are carefully designed to minimize any shipping damage. In the unlikely case that the UPS needs to be returned to the manufacturer, please use the original packing material. Since the manufacturer is not responsible for shipping damage incurred when the system is returned, the original packing material is inexpensive insurance. **PLEASE SAVE THE PACKING MATERIALS!**



Life Support Policy

As a general policy, we do not recommend the use of any of our products in life support applications where failure or malfunction of the product can be reasonably expected to cause failure of the life support device or to significantly affect its safety or effectiveness. We do not recommend the use of any of our products in direct patient care. We will not knowingly sell our products for use in such applications unless it receives in writing assurances satisfactory to us that (a) the risks of injury or damage have been minimized, (b) the customer assumes all such risks, and (c) our liability is adequately protected under the circumstances.

© COPYRIGHT 2024 BY PARA SYSTEMS, INC.

All Rights Reserved. All rights of this User's Manual ("Manual"), including but not limited to the content, information, and figures are solely owned and re- served by Para Systems, Inc. ("Para Systems"). The Manual can only be applied to the operation or the use of this product. Any disposition, duplication, dissemination, reproduction, modification, translation, extraction, or usage of this Manual in whole or in part is prohibited without the prior written permission of Para Systems. Given that Para Systems will continuously improve and develop the product, changes may be made to the information in this Manual at any time without obligation to notify any person of such revision or changes. Para Systems will make all possible efforts to secure the accuracy and the integrity of this Manual. Para Systems disclaims any kinds or forms of warranty, guarantee, or undertaking, either expressly or implicitly, including but not limited to the completeness, faultlessness, accuracy, non-infringement, merchantability or fitness for a particular purpose of the Manual.

2. Installation and Setup

This UPS series is **ONLY** intended to be installed in an indoor temperature-controlled environment that is free of conductive contaminants. DO NOT operate the UPS in: extremely dusty and/or unclean areas, locations near heating devices, water or excessive humidity, or where the UPS is exposed to direct sunlight. Select a location, which will provide good air circulation for the UPS at all times. Route power cords so they cannot be walked on or damaged. Typical battery life is 3 to 5 years. Environmental factors do affect battery life. High temperatures, poor utility power, and frequent, short duration discharges have a negative impact on battery life.

- Operating Temperature (Maximum): 0 to 40°C (+32 to +104°F) Operating Elevation: 0 to 3,000m (0 to +10,000 ft)
- Operating and Storage Relative Humidity: 10% to 90%, non-condensing Storage Temperature: -15 to +45°C (+5 to +113°F)
- Storage Elevation: 0 to 15,000m (0 to +50,000 ft)

INSTALLATION

Be sure to read the installation placement and all the cautions before installing the UPS. Place the UPS in the final desired location and complete the rest of the installation procedure. These UPS are shipped with the internal batteries disconnected. The batteries must be connected before putting these UPS into service. See the "Connecting the Batteries" procedure to connect the batteries and then the "Rackmount Configuration" to install the UPS into the rack. **USE CAUTION:** The UPS is heavy. Use the appropriate number of personnel when installing the UPS.

CAUTION! - DO NOT USE THE MOUNTING BRACKETS TO LIFT THE UPS. The mounting brackets are **ONLY** for securing the UPS to the rack.

NOTE: If you are using an External Battery Pack with this UPS series, the UPS must be configured so that the UPS will report the correct estimated runtime on the LCD screen and in the Power Monitoring software and/or the SNMP card. See the Power Monitoring software or the SNMP card's User Manual to configure the UPS.

CONNECTING THE BATTERIES: (QUALIFIED SERVICE PERSONNEL ONLY)

Please read all of the **WARNINGS** and **CAUTIONS** before attempting to connect the batteries.

WARNING: Use two or more people when installing the UPS, the UPS is extremely heavy.

1. Remove the UPS from the shipping box and place on a flat surface.
2. Grasp the battery door on the left-hand side, pull it outward and then set it aside (FIG. 1).
3. Press the spring-loaded latch on the battery retaining bracket on the left-hand side, pull it outward and then set it aside (FIG. 2)
4. Press down to unlock the battery connector holders (FIG. 3).

5. Verify proper polarity. Connect the battery connectors (red and black) together. Place the battery connectors in the battery connector holder and then relock the battery connector holders (FIG. 3).

NOTE: Some sparking may occur this is normal.

6. Re-install the battery retaining bracket.
7. Re-install the battery door on the UPS.
8. Connecting the Batteries is complete. See the Rackmount Configuration.

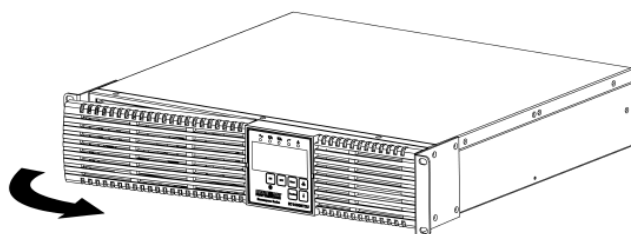


FIG. 1

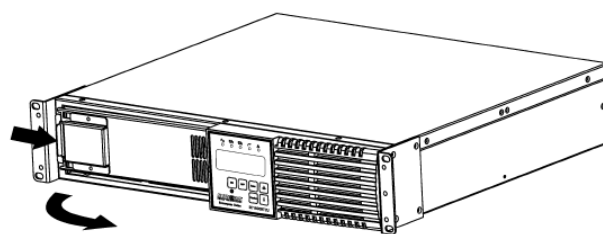


FIG. 2

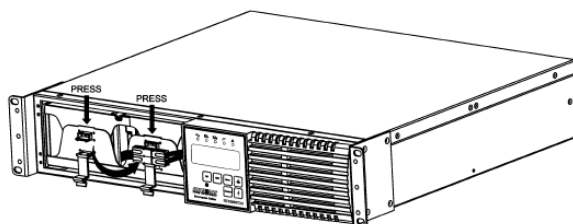



FIG. 3

RACKMOUNT CONFIGURATION

This UPS series comes with mounting brackets for the standard 19" (46.5cm) rack pre-installed on the UPS. There are optional Rail Kits for the 4-post racks and cabinets available. The screws for mounting the UPS to the rack are included. **NOTE:** The Rail Kit for a 4-post rack and/or cabinet is included with the EC3000RTXL2U.

CAUTION! - DO NOT USE THE MOUNTING BRACKETS TO LIFT THE UPS. The mounting brackets are **ONLY** for securing the UPS to the rack.

1. Mount the UPS into the rack and secure with the retaining screws (provided). **WARNING:** Use two or more people when installing the UPS, the UPS is extremely heavy. Do not move the rack after the units have been installed. The rack may become unstable due to the weight distribution.
2. The Rackmount Configuration is complete. See Connecting your Equipment.

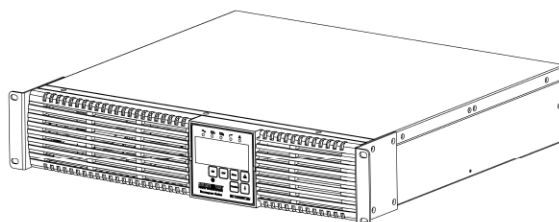

TOWER CONFIGURATION


The tower configuration allows the user to install the UPS in the up-right position. The tower brackets are provided with the UPS.

WARNING! - Use two or more people when installing the UPS, the UPS is extremely heavy.

1. Once the location of the UPS has been determined, place the UPS on a flat surface, remove the rackmount brackets from the UPS and then attach the four (4) tower brackets as shown below.
2. Stand the UPS in the upright position and place it in the desired location. Make sure that the UPS is stable.
3. The LCD panel can be rotated to read in the up-right position. There are two small slots, one on each side of the LCD panel. Insert a small flat screwdriver into the slot to pop out the LCD panel. Position the LCD panel so that it reads in the up-right position. Press the LCD panel back into the front panel.

WARNING! - The UPS must be installed in the proper upright position. If the UPS is not installed in the proper up-right position the Batteries will be damaged. Once the UPS is placed in the tower brackets, looking at the front panel the YELLOW Battery disconnected label on the top cover of the UPS MUST be on your left-hand side.

4. The Tower Configuration is complete. See Connecting your Equipment.

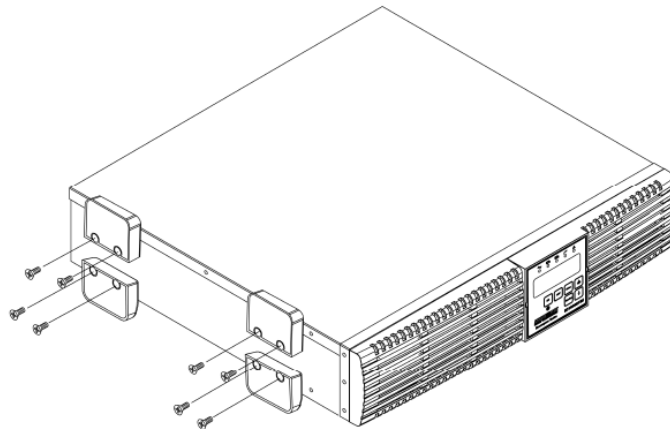

CONNECTING YOUR EQUIPMENT

Plug the equipment into the output receptacles on the rear panel of the UPS. Ensure that you do not exceed the maximum output rating of the UPS (refer to the information label or the Electrical Specifications in this manual). **DO NOT PLUG EXTENSION CORDS, ADAPTER PLUGS OR SURGE STRIPS INTO THE OUTPUT RECEPTACLES OF THE UPS.**

CAUTION! - DO NOT connect a laser printer to the output receptacles on the UPS, unless the UPS is rated 2000VA or greater. A laser printer draws significantly more power when printing than at idle and may overload the UPS.

CONNECTING THE UPS TO AN AC SOURCE

Plug the UPS into a two pole, three wire, grounded AC wall outlet. The AC wall outlet shall be near the UPS and shall be easily accessible. The plug on the input power cord on this UPS series is intended to serve as a disconnect device. DO NOT PLUG THE UPS INTO EXTENSION CORDS, ADAPTER PLUGS OR SURGE STRIPS. DO NOT CUT THE INPUT PLUG OFF AND ATTEMPT TO HARDWIRE THIS UPS, DOING SO WILL VOID THE WARRANTY.

CHECKING THE SITE WIRING FAULT

After plugging the UPS into the AC wall outlet, check the Site Wiring Fault icon on the front panel of the UPS. If the Site Wiring Fault icon is illuminated and error code **"Er16"** is displayed, the UPS is plugged into an improperly wired AC wall outlet. If the UPS indicates a Site Wiring Fault have a Qualified Electrician correct the problem.

CHARGING THE BATTERY

The UPS will charge the internal batteries whenever the UPS is connected to an AC source and there is an acceptable AC voltage present (55V (load dependent) - 150VAC). It is recommended that the UPS batteries be charged for a minimum of 4 hours before use. The UPS may be used immediately, however, the "On-Battery" runtime may be less than normally expected.

NOTE: If the UPS is going to be out of service or stored for a prolonged period of time, the batteries must be recharged for at least twenty-four hours every ninety days.

NETWORK/PHONE/FAX/MODEM PROTECTION CONNECTION (OPTIONAL)

Connect a 10/100/1000 Base-T network, single line phone, Fax or Modem line to the RJ11/45 modular connectors on the rear panel of the UPS. This connection will require another length of telephone or network cable. The cable coming from the telephone service or networked system is connected to the port marked "IN". The equipment to be protected is connected to the port marked "OUT".

NOTE: Connecting to the Network/Phone/Fax/Modem modular connectors is optional. The UPS works properly without this connection.

COMMUNICATIONS PORT CONNECTION (OPTIONAL)

The Power Monitoring Software and interface cables can be used with the UPS. Use only the interface cables that come with these UPSs. Connect the interface cable (Serial or USB) to the appropriate communications port on the rear panel of the UPS. Connect the other end of the cable to the device that will be monitoring/controlling the UPS.

NOTE: Connecting to the Communications Port is optional. The UPS works properly without this connection.

EMERGENCY POWER OFF (EPO) FUNCTION

Connect one end of a two (2) wire cable to the EPO port on the rear panel of the UPS and the other end of the two (2) wire cable to an EPO switch. To shutdown the UPS in the AC or the Battery mode short pin1 to pin2 for approximately 0.5 seconds. In the AC mode, the UPS must be turned off and then back on again to restart the UPS. In the Battery mode, once the utility power returns the UPS

must be turned on to restart the UPS. The LCD will display “**EPO**” for this function.

OPTION SLOT (OPTIONAL)

The option slot on the rear panel of the UPS is for SNMP or Programmable Relay cards. Remove the cover plates from the option slot. Install the SNMP card or the Relay card. Connect the appropriate interface cable to the SNMP card or the Relay card on the rear panel of the UPS. Connect the other end of the cable to the device that will be monitoring/controlling the UPS.

NOTE: Using the Option Slot optional. The UPS works properly without this connection.

3. Operations

SYSTEM OVERVIEW


This double-conversion online UPS protects computers, servers, telecommunications, security and other electronic equipment from blackouts, brownouts, overvoltages, and surges by converting the input AC power to DC and then back to a true sine wave AC output. The true sine wave output is regulated within 2% of the nominal output voltage. The Power Factor Correction (PFC) circuitry corrects the input power factor to within 99% of unity and blocks the load generated harmonic distortion from getting back on the input AC line. This online UPS provides a continuous true sine wave output with zero transfer time and great regulation to protect your mission critical equipment. The UPS will quietly and confidently protect your system from power anomalies.

The UPS will charge the batteries when the unit is in the on or off position as long as the UPS is plugged into the wall outlet and there is an acceptable AC voltage present (55V (load dependent) - 150VAC). When a blackout, brownout, or an overvoltage condition occurs while the UPS is in the online mode or the Economy mode; the UPS will transfer to the battery mode, the On-Battery indicator will illuminate and the audible alarm will sound once every ten-seconds indicating that the utility power is lost or unacceptable. When the utility power returns or is at an acceptable level, the UPS will automatically transfer back to the Online mode or the Economy mode and start recharging the batteries. During an extended outage when there is approximately two-minutes of backup time remaining the audible alarm will sound twice every five-seconds. This Low Battery Warning is letting the user know that they should save all open files and turn off their equipment. When the batteries reach the predetermined level, the UPS will automatically shut down protecting the batteries from over discharging. Once the utility power returns the UPS will automatically restart providing safe usable power to the connected equipment and start recharging the batteries.


During the Economy mode operation, the input utility power 'bypasses' the inverter circuit and is connected directly to the output of the UPS powering the connected equipment while simultaneously charging the batteries. When a blackout, brownout, or an overvoltage condition occurs the UPS will transfer to the battery mode, the inverter will turn on powering the connected equipment, the On-Battery indicator will illuminate and the audible alarm will sound once every ten-seconds indicating that the utility power is lost or unacceptable. When the utility power

returns or is at an acceptable level, the UPS will automatically transfer back to the Economy mode and start recharging the batteries.


Block Diagram of the Basic Wiring and Internal Circuit Configuration

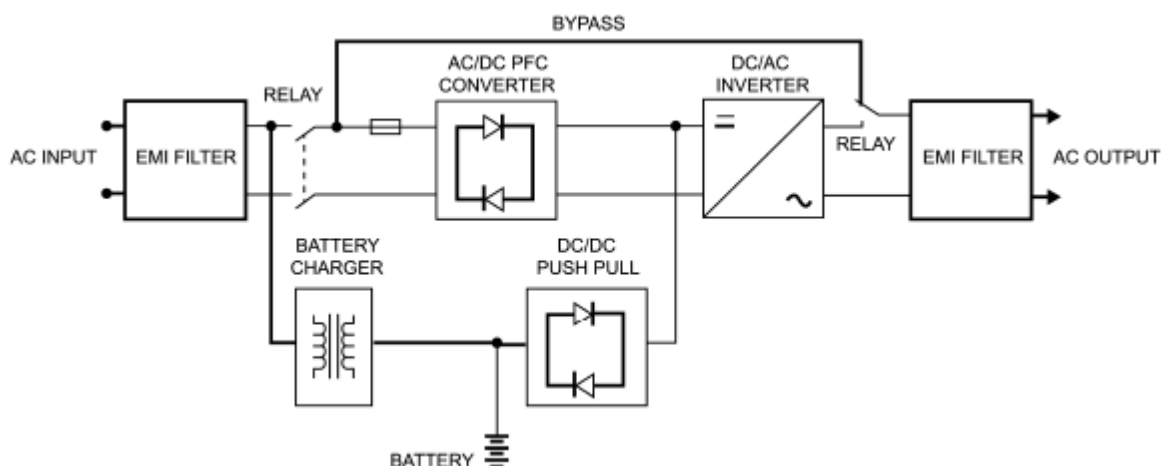

DISPLAY AND CONTROLS

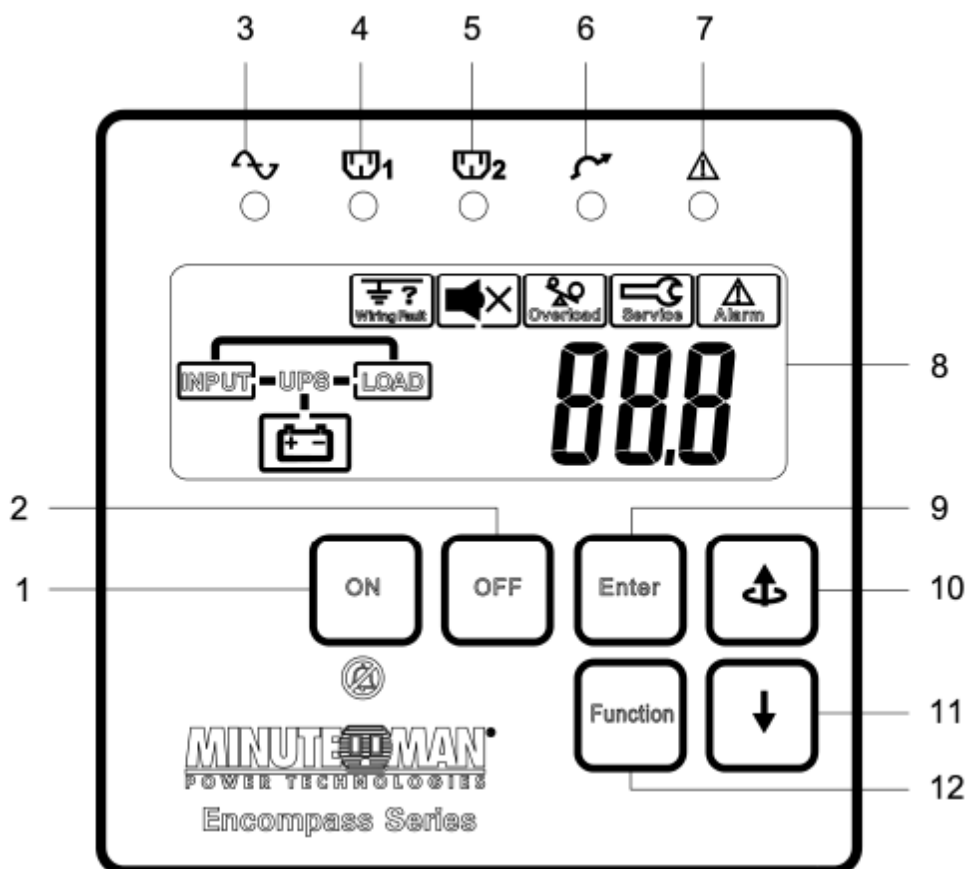

1. The ON button is to turn the UPS on. Pressing the ON button during the Battery mode will silence the alarm.
2. The OFF button is to turn the UPS off.
3. The Utility Power (Green) LED illuminates when Utility Power is present and extinguishes during the Battery mode.
4. The Load Bank 1 (Green) LED is illuminated when the Load Bank is on.
5. The Load Bank 2 (Green) LED is illuminated when the Load Bank is on.
6. The Bypass Active (Yellow) LED illuminates when the UPS is in the Bypass mode.
7. The Weak/Bad Battery (Red) LED illuminates when the UPS detects a weak battery, bad battery or if the battery is disconnected. The Weak/Bad Battery icon is extinguished when the battery condition is good.
8. The LCD displays the status of the UPS.
9. Pressing the Enter button saves the changes made to the UPS settings.
10. Pressing the Page Up button goes to the previous page or will change the UPS settings.
11. Pressing the Page Down button goes to the next page.
12. Pressing the Function button and then the Page Up button will initiate a 10-second battery test.

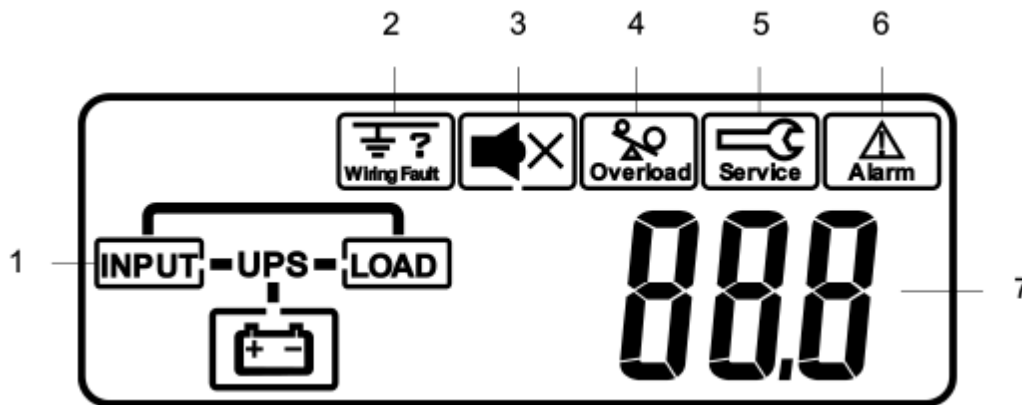


1. Displays the power flow of the UPS:


AC Mode Power Flow



Bypass Mode Power Flow

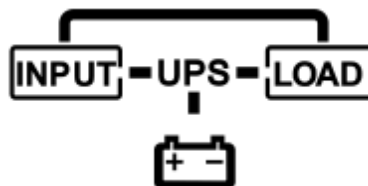

Battery Mode Power Flow

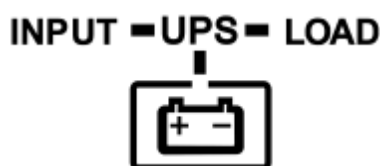


2. The Site Wiring Fault icon illuminates when the UPS detects a site wiring problem. The SWF icon is extinguished when the UPS is connected to properly wired wall outlet.
3. The Alarm Silencer icon illuminates when the audible alarm has been silenced.
4. The Overload icon will illuminate when the amount of load attached to the UPS is $\geq 106\%$ of its power rating.
5. The Service icon illuminates when the UPS requires service.
6. The Alarm (Fault) icon illuminates when the UPS detects an internal fault.
7. Numerical values of the UPS parameters and error codes.

The UPS reports the following parameters on the LCD screen:

| | |
|--------------|---|
| Input: | Voltage, Frequency |
| Output: | Voltage, Frequency, Current, Percentage of load |
| Battery: | Voltage |
| Runtime: | The time operating on the Battery mode in minutes |
| Temperature: | The internal temperature of the UPS in degrees C |

NOTE: The LCD backlight will illuminate for 20 seconds when the UPS is connected to utility power, when the UPS is turned ON/OFF, when any of the buttons on the LCD panel are touched and when the UPS switches to the Battery mode. When the UPS has an event and/or an error code the LCD backlight will turn on and remain on to alert the user that an event has occurred.

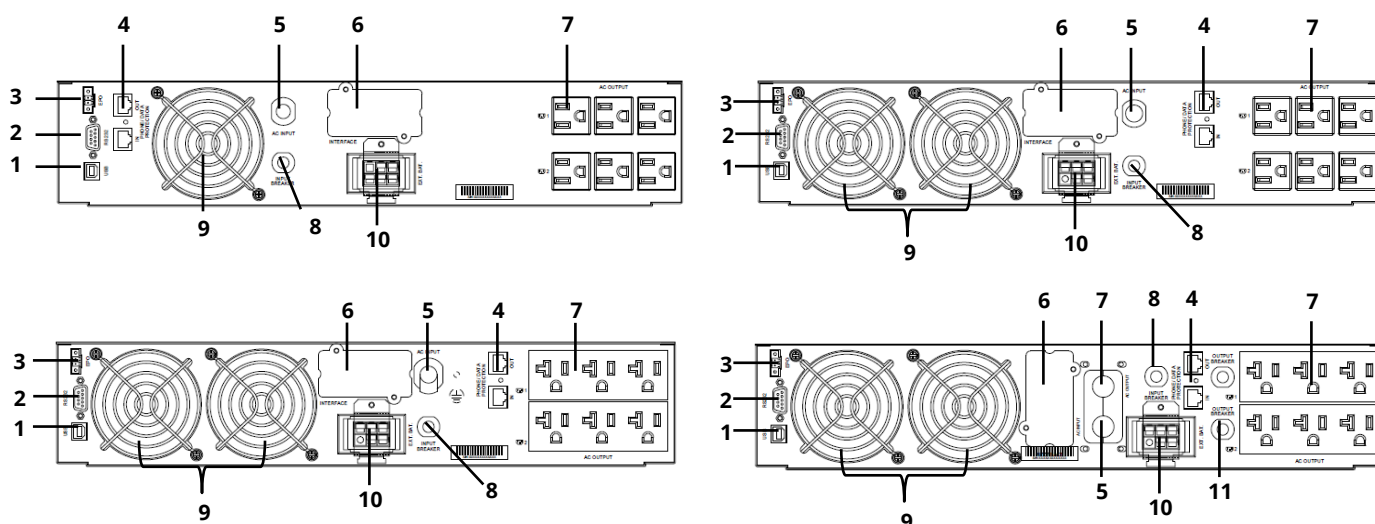

1. The USB Communications Port is for UPS monitoring and control.
2. The RS232 Communications Port is for UPS monitoring and control.
3. The EPO (Emergency Power Off) Port is for UPS control.
4. The R-J11/R-J45 modular connectors are used for 10/100/1000 Base-T Network/single line Phone/Fax/Modem protection.
5. The input power cord is for connecting to utility power.
6. The option slot is for option cords.

7. The Battery Backup output receptacles. The output receptacles are electrically wired into two segments to support the "Load Shedding Function" (Labeled 1 & 2). The 3KVA has a locking receptacle (Always On) that does not support the "Load Shedding Function".

NOTE: The locking receptacle is not on all models.

8. The input circuit breaker will trip in the event the load exceeds the UPS's power rating.
9. The fan is for ventilation.
10. External battery pack connection
11. The output circuit breaker will trip in the event the load exceeds the UPS's power rating.

NOTE: The output circuit breaker is not on all models.

| Model # | Input Power Plug (All power cords are 10ft) | Output Power Receptacles |
|--------------|--|--|
| EC1000RTXL2U | NEMA 5-15P | 6-NEMA 5-15R (Controllable) |
| EC1500RTXL2U | NEMA 5-15P | 6-NEMA 5-15R (Controllable) |
| EC2000RTXL2U | NEMA 5-20P | 6-NEMA 5-15/20R (Controllable) |
| EC3000RTXL2U | NEMA L5-30P | 6-NEMA 5-15R (Controllable) 1-NEMA L5-30R (Always On) |

TURNING THE UNIT ON/OFF

Turning the unit On: When the UPS is connected to an AC source and there is an acceptable AC voltage present, press and then release the ON button after the audible alarm beeps twice to turn the UPS on and power the load.

DC START: Press and then release the ON button after the audible alarm beeps twice. Then within 10 seconds press and then release the ON button after the audible alarm beeps twice to DC start the UPS and power the load.

Turning the unit Off: When the UPS is in the AC normal mode, press and then release the OFF button after the audible alarm beeps twice to turn the UPS off. The UPS will continue to charge the batteries whenever it is plugged into a wall outlet and there is acceptable AC voltage present.

ALARM SILENCER

When the UPS is operating in the Battery mode press the ON button to silence the audible alarm. Once the UPS reaches the Low Battery Warning (LBW) threshold the audible alarm will start beeping again. When the UPS returns to the normal AC mode the audible alarm will reset to default. The audible alarm cannot be silenced during the LBW or any Fault/Error event.

USER INVOKED BATTERY TEST

The user invoked battery test feature is useful to verify the correct operation of the UPS and the condition of the batteries. With the UPS in the AC normal mode, press the Function button and then the Page Up button. The UPS will perform a ten-second battery test to measure the battery's capability to support the connected load. During the battery test, the UPS will switch to the battery

mode, the Battery mode power flow will illuminate and the audible alarm will sound. If the UPS fails a battery test, one of the icons and/or error codes will remain illuminated indicating the type of problem.

LOAD SHEDDING FUNCTION

The output receptacles are electrically wired into two segments to support the "Load Shedding Function" (Labeled 1 & 2). The user can control the two segments individually or both at the same time. The Load Shedding Function is controllable by the Power Monitoring Software or the SNMP card.

NOTE: The locking receptacle (Always On) does not support the "Load Shedding Function".

ECONOMY MODE (ECO) FUNCTION

The UPS must be turned on and in the normal AC mode. The Economy mode option must be enabled through the SNMP card or the Power Monitoring software. Once the Economy mode has been enabled, the LCD will display ECO and the Bypass (Yellow) LED will be illuminate. Turn on the connected equipment one at a time.

EMERGENCY POWER OFF (EPO) FUNCTION

Connect one end of a two (2) wire cable to the EPO port on the rear panel of the UPS and the other end of the two (2) wire cable to an EPO switch. To shutdown the UPS in the AC or the Battery mode short pin1 to pin2 for approximately 0.5 seconds. In the AC mode, the UPS must be turned off and then back on again to restart the UPS. In the Battery mode, once the utility power returns the UPS must be turned on to restart the UPS. The LCD will display EPo for this function.

CHANGING THE OUTPUT VOLTAGE

The output voltage can be configured for 110V, 120V, or 127V. The default setting for the output voltage is 120V. To change the output voltage follow the steps below:

1. Connect the UPS to utility power. **DO NOT** turn on the UPS.
2. Press the ON button and the Page Down button simultaneously until the audible alarm beeps once and then release.
3. Use the Page Up button to select the desired output voltage setting and then press the Enter button.
4. Disconnect the UPS from utility power and allow the UPS to completely shutdown to save the changes.
5. Reconnect the UPS to utility power and then press the ON button to turn the UPS on and verify the output voltage. Changing the output voltage is complete. The UPS is ready for normal operation.

COMMUNICATIONS PORTS (RS232 and USB)

The RS232 communication port is a standard DB9 female. The pinout for the port is below:

- Pin 2: /TXD
- Pin 3: /RXD
- Pin 5: Ground

The USB protocol is HID. The HID USB driver is the standard for the Windows OS. Simply plug the USB cable into the UPS and the computer then follow the prompts on the screen.

NOTE: When using the UPS's USB port with Windows XP, 7,8 or 10 the Power Options in the Control Panel may need to be configured.

POWER MONITORING SOFTWARE

The UPS is compatible with the Minuteman SentryHD or Envision power monitoring software. It is available via download from the Minuteman website at: www.minutemanups.com/minuteman-software-download-center/. Documentation, manuals and install guides are also available on the website at: www.minutemanups.com/resource-library/

OPTION SLOT

The option slot on the rear panel of the UPS is for option cards. Contact your local dealer or visit our Web site at www.minutemanups.com for the available option cards for this series.

ALARMS

ON BATTERY

When the UPS is operating on the batteries, the On-Battery icon will illuminate, the Utility power LED (Green) will extinguish and the audible alarm will sound one beep every ten seconds. The audible alarm can be silenced during this condition. The alarm will stop once the UPS returns to the AC normal mode.

LOW BATTERY WARNING

When the UPS is operating on the batteries and the battery reserve is running low, the audible alarm will sound two beeps every five-seconds and error code "**Er17**" will be displayed. This condition will continue until AC returns or the UPS shuts down from battery exhaustion.

NOTE: The audible alarm cannot be silenced during this condition.

WEAK/BAD/DISCONNECTED BATTERY

The UPS automatically tests the battery's condition. If the battery is weak, bad or disconnected, the Weak/Bad/Disconnected Battery icon will illuminate, error code "**Er15**" will be displayed and the audible alarm will beep three times every five minutes until the battery is reconnected, replaced or passes a self-test. It is recommended that the UPS be allowed to charge overnight before performing a battery test to confirm a Weak/Bad Battery condition.

NOTE: The audible alarm cannot be silenced during this condition.

OVERLOAD

When the amount of load attached to the UPS is >106% of its power rating, the Overload icon will illuminate, the error code "**Er02**" will be displayed and the audible alarm will beep continuously. This alarm will remain on until the excess load is removed or the UPS's self-protection circuit shuts the UPS down. If the UPS shuts down because of an Overload condition, the UPS must perform an Inverter function or a Self-test to clear the Overload Alarm.

NOTE: The audible alarm cannot be silenced during this condition.

UPS FAULT

When the UPS detects a hardware and/or internal fault, the Fault icon will illuminate and the audible alarm will beep continuously. The fault condition, in some instances, may be reset by turning the UPS off and then on again.

NOTE: The audible alarm cannot be silenced during this condition.

SITE WIRING FAULT

If the Site Wiring Fault icon is illuminated and error code “Er16” is displayed, the UPS is plugged into an improperly wired AC wall outlet. If the UPS indicates a Site Wiring Fault have a qualified electrician correct the problem.

CONFIGURABLE PARAMETERS AND SETTINGS

(These items may require optional software or hardware)

| Function | Factory Default | User Choices | Description |
|------------------------------|-------------------------------|--|--|
| Battery Install Date | Date of manufacture | Date of battery replacement - month/day/year (XX/XX/XXXX) | Enter the current date when replacing batteries. |
| Battery Replace Date | 5 years from the install date | Date of the next battery replacement - month/day/year (XX/XX/XXXX) | Enter the date of the next battery replacement. |
| Enable/Disable Auto-restart | Enabled | Enable or Disable | When <u>enabled</u> , the UPS will automatically restart from a low battery shutdown when normal AC returns. |
| Set Audible Alarm State | Enabled | Enabled, at low battery, disabled | <u>Enabled</u> - the UPS will emit a short beep when in the battery mode. <u>At Low Battery</u> the UPS will emit two beeps from low battery warning until shutdown. <u>Disabled</u> - Use only when software is controlling the UPS or to silence the alarm. |
| Shutdown Type | Entire UPS | Entire UPS or UPS output | <u>Entire UPS</u> - Turns off the entire UPS. <u>UPS Output</u> - Turns off the UPS's output receptacles only. |
| Set Inverter Output Voltage | 120VAC | 110, 120, 127VAC | Changes the output voltage. |
| Enable/Disable ECO | Disabled | Enable or Disable | <u>Enabled</u> - the UPS will operate in the Economy mode. |
| Enable/Disable Load Shedding | Disabled | Enable, Disable or Configure | <u>Enabled</u> - the specified outlet bank will turn off. <u>Configure</u> - the specified outlet bank will turn on or off based on the selected event. |
| Set External Battery Pack | 0 | 0-10 | Configures the UPS so that it will report the correct estimated runtime on the LCD screen and in the Power Monitoring software and/or the SNMP card. |

4. Troubleshooting

| Symptom / Error Code | Cause / What To Do |
|---|---|
| Only the AC normal LED is illuminated. | The UPS has not been turned on. Press the On button and release after the audible alarm beeps twice. |
| UPS only operates in battery mode, even though there is AC present. | Reset the input circuit breaker by pressing the plunger back in. If the input circuit breaker trips after UPS restarts, reduce the load on the UPS. |
| UPS does not provide the expected runtime. | Charge the batteries for 8-hours and retest. If the runtime is still less than expected, the batteries may need to be replaced. |
| The AC normal icon is illuminated, but there is no output. | Disconnect the computer cable from the UPS, press the On button. If UPS works normally, the software has control of the UPS. |
| The fault icon is illuminated and a constant alarm | The UPS has an internal problem. Call for service. |
| Er01: UPS is shutdown. | The UPS has detected a short-circuit on its output. Check the attached load. |
| Er02: The Overload icon is illuminated and a constant alarm. | Check the specifications and remove part of the load. If the UPS shuts down because of an Overload, the UPS must perform an Inverter function or a self-test to clear the Overload Alarm. |
| Er03: UPS Over Temperature. | The internal temperature has exceeded the safe operating range for the UPS. Check the specifications. |
| Er08: DC BUS voltage abnormal (High). | Turn the UPS off, unplug the power cord, wait for 5-minutes and then restart the UPS. If the error did not clear call for service. |
| Er09: DC BUS voltage abnormal (Low). | Turn the UPS off, unplug the power cord, wait for 5-minutes and then restart the UPS. If the error did not clear call for service. |
| Er10: Inverter Over Current. | Check the specifications and remove part of the load. |
| Er11: Inverter/Output Failure Shutdown. | The UPS has an internal fault. Call for service. |
| Er12: DC BUS Pre-charge abnormal. | Turn the UPS off, unplug the power cord, wait for 5-minutes and then restart the UPS. If the error did not clear call for service. |
| Er13: Fan Failure. | The fan has either failed or has stopped due to excessive dirt. If the fan has failed, call for service. If the fan is dirty, use a can of "Canned Air" to clean the fan. |
| Er14: Charger Failure. | The charger has failed, call for service. |
| Er15: Weak/Bad Battery icon is illuminated. | Check the battery connections, charge the batteries for 8-hours and retest. The batteries may need to be replaced. |
| Er16: Site Wiring Fault. | Have a qualified electrician correct the service wiring. |
| Er17: Low Battery Warning. | The UPS's battery reserve is low. This condition will continue until AC returns or the UPS shuts down from battery exhaustion. |

| | |
|---|--|
| Er18: EEPROM data error. | Turn the UPS off, unplug the power cord, wait for 1-minute and then restart the UPS. If the error does not clear call for service. |
| Er26: Input Over Current. | Check the specifications and remove part of the load. If the error did not clear call for service. |
| Er28: Bypass mode Overload. | Check the specifications and remove part of the load. If the error did not clear call for service. |
| Er29: Charger overcharges the battery. | The UPS has an internal fault. Call for service. |
| Er38: Failed to synchronize with utility input. | Turn the UPS off, unplug the power cord, wait for 5-minutes and then restart the UPS. If the error did not clear call for service. |
| Er39: Low Battery Capacity. | The UPS's battery capacity is low. Charge the batteries for 24-hours. If the error does not clear call for service. |

5. Service and Maintenance

Maintenance should be performed by qualified service personnel only.

Please read all of the **WARNINGS** and **CAUTIONS** before attempting to service the batteries. Typical battery life is 3 to 5 years. Environmental factors do affect battery life. High temperatures, poor utility power, and frequent, short duration discharges have a negative impact on battery life.

WARNING! This UPS contains potentially hazardous voltages. Do not attempt to disassemble the UPS beyond the battery replacement procedure. This UPS contains no user serviceable parts. Repairs and battery replacement must be performed by **QUALIFIED SERVICE PERSONNEL ONLY**.

CAUTION: Do not open or mutilate batteries. Released electrolyte is harmful to the skin and eyes and may be toxic.

CAUTION: Do not dispose of batteries in a fire. The batteries may explode. The batteries in this UPS are recyclable. Dispose of the batteries properly. The batteries contain lead and pose a hazard to the environment and human health if not disposed of properly. Refer to local codes for proper disposal requirements or return the battery to the supplier.

CAUTION: The battery system can present a risk of electrical shock. These batteries produce sufficient current to burn wire or tools very rapidly, producing molten metal. Observe these precautions when replacing the batteries:

1. Remove watches, rings, or other metal objects.
2. Use hand tools with insulated handles.
3. Wear protective eye gear (goggles), rubber gloves and boots.
4. Do not lay tools or other metal parts on top of batteries.
5. Disconnect the charging source prior to connecting or disconnecting the battery terminals.
6. Determine if the battery is inadvertently grounded. If the battery is, remove the source of the

grounding. Contact with any part of a grounded battery can result in an electrical shock. The likelihood of such shock will be reduced, if such grounds are removed during installation and maintenance.

CAUTION: Replace batteries with the same number and type as originally installed in the UPS. These batteries have pressure operated vents. These UPS contain sealed non-spillable maintenance-free lead acid batteries.

| Model # | EC1000RTXL2U | EC1500RTXL2U | EC2000RTXL2U | EC3000RTXL2U |
|--------------------------------|--------------|--------------|--------------|--------------|
| Internal Battery Module Part # | BM0069 | BM0070 | BM0070 | BM0071 |

BATTERY REPLACEMENT PROCEDURE

PLEASE READ ALL OF THE CAUTIONS AND THE WARNINGS BEFORE ATTEMPTING TO REPLACE THE BATTERY MODULE

1. Turn off the equipment that is plugged into the output receptacles of the UPS.
2. Press and release the OFF button on the front panel to turn the UPS Off.
3. Unplug the UPS's AC power cord from the AC wall outlet.
4. Unplug the equipment from the output receptacles of the UPS.
5. Unplug the computer interface cable from the rear panel of the UPS.
6. Grasp the battery door on the left-hand side, pull it outward and then set it aside (FIG. 1).
7. Press the spring-loaded latch on the battery retaining bracket on the left-hand side, pull it outward and then set it aside (FIG. 2)

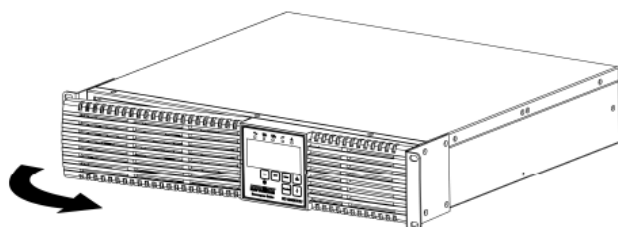


FIG. 1

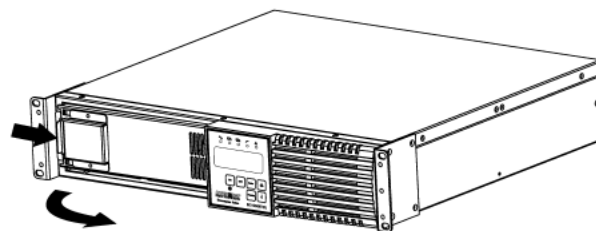


FIG. 2

8. Press down to unlock the battery connector holder (FIG. 3).
9. Disconnect the battery connectors (FIG. 3)
10. Grasp the battery pull tab and gently pull the battery module out of the UPS and set it aside. (FIG. 4)

NOTE: Use Caution, the battery module is heavy.

11. Slide the new battery module into the UPS.
12. Verify proper polarity. Reconnect the battery connectors (red and black).

NOTE: Some sparking may occur this is normal.

13. Place the battery connectors in the battery connector holder and then lock in place.
14. Re-install the battery retaining bracket.

15. Re-install the battery door on the UPS.
16. Connect the computer interface cable to the rear panel of the UPS.
17. Connect the equipment to the output receptacles of the UPS.
18. Connect the UPS's AC power cord to the AC wall outlet.
19. Press and release the ON button on the front panel to turn the UPS On.
20. Turn on the equipment that is plugged into the output receptacles of the UPS.
21. The UPS is now ready for the normal operation.
22. Properly dispose of the old battery module at an appropriate recycling facility or return them to the supplier in the packing material that the new battery module came in.

NOTE: If the UPS has a Weak/Bad Battery Alarm after replacing the battery module, the user must initiate a battery test to clear the Weak/Bad Battery Alarm. To initiate a self-test see **Section 3: Operations - User Invoked Battery Test.**

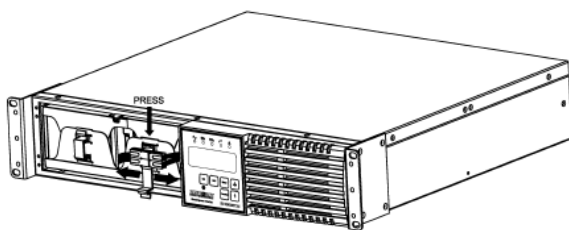


FIG. 3

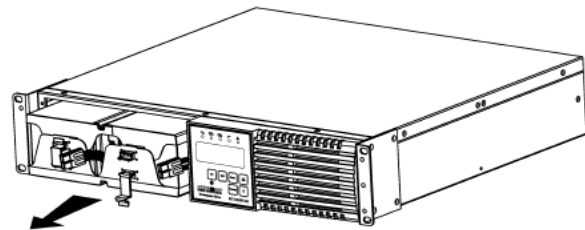


FIG. 4

IF THE UPS REQUIRES SERVICE

1. Use the Troubleshooting section to eliminate obvious causes.
2. Verify there are no tripped circuit breakers and that the batteries are good. A tripped circuit breaker and defective batteries are the most common issues.
3. Call your dealer for assistance. If you cannot reach your dealer, or if they cannot resolve the issue call or fax the Technical Support department at the following numbers; Voice phone (972) 446-7363, or visit our Web site at www.minutemanups.com/contact/. Before calling the Technical Support Department have the following information available:
 - a. Contact name and address.
 - b. Where and when the unit was purchased.
 - c. All of the model information about your unit.
 - d. The serial number of your unit.
 - e. Any information on the failure, including LEDs that may be illuminated or error codes displayed.
 - f. A description of the protected equipment including model numbers, if possible.
 - g. A technician will ask you for the above information and if possible, help solve the issue over the phone. In the event that the unit requires factory service, the Technical Support Representative will issue you a Return Material Authorization Number (RMA #).

NOTE: We must have the model number and the serial number of the product to issue an RMA #.

- h. If the unit is under warranty, the repairs will be done at no charge. If the unit is not under warranty there will be a charge for the repair.
- 4. Pack the unit in its original packaging. If the original packaging is no longer available, ask the Technical Support Representative about obtaining a new set. It is important to pack the unit properly in order to avoid damage in transit. Never use styrofoam beads for a packing material.
 - a. Include a letter with your name, address, daytime phone number, RMA number, a copy of your original sales receipt, and a brief description of the problem.
- 5. Mark the RMA # on the outside of all packages. The factory cannot accept any package without the RMA # marked on the outside of the package.
- 6. Return the unit by insured, prepaid carrier to:

Para Systems Inc.
MINUTEMAN Power Technologies
2425 Technical Road
Miamisburg, OH 45342
ATTN: RMA # _____

6. Specifications

| SYSTEM SPECIFICATION | | | | |
|----------------------------------|---|--------------|--------------|--------------|
| Model Number | EC1000RTXL2U | EC1500RTXL2U | EC2000RTXL2U | EC3000RTXL2U |
| Maximum Power Capacity | 1000VA/900W | 1500VA/1350W | 2000VA/1800W | 3000VA/2700W |
| Topology | Double Conversion On-Line, True Sine Wave | | | |
| INPUT | | | | |
| Number of Phases | Single (1Ø 2W +G) | | | |
| Nominal Voltage | 120VAC | | | |
| Acceptable Input Voltage | 0 – 160VAC | | | |
| Voltage Range | 55V (load dependent) - 150VAC | | | |
| Frequency Limits | 50 or 60 Hz, ±6Hz, autosensing | | | |
| Power Factor Correction | ≥99% at Full Load | | | |
| Low Voltage Transfer Point | 55V (load dependent) resets to Utility Power at 75V or higher | | | |
| High Voltage Transfer Point | 150V resets to Utility Power at 145V or lower | | | |
| Input Protection | Resettable Circuit Breaker | | | |
| OUTPUT NON-BATTERY OPERATION | | | | |
| Voltage Regulation | Nominal ±2% | | | |
| Frequency Range | 60Hz: 54 - 66Hz or 50Hz: 44 - 56Hz | | | |
| Efficiency (Line Mode) | >89% (Full Load) | | | |
| OUTPUT BATTERY OPERATION | | | | |
| Waveform Type | True Sine Wave | | | |
| Nominal Voltage (Adjustable) | 120VAC (110, 127VAC) | | | |
| Voltage Regulation | Nominal ±2% (until Low Battery Warning) | | | |
| Frequency | 50/60Hz, ±2Hz (unless synchronized to utility) | | | |
| Voltage T.H.D. | ≤3% (Full Linear Load) | | | |
| Dynamic Response | ±5% @ 100% Load change in 30ms | | | |
| Transfer Time | 0 ms Typical | | | |
| Slew Rate | ≤1Hz / second | | | |
| Crest Factor | 3 : 1 | | | |
| Overload Capacity | >106 to <110% for 2-mins; AC mode: Transfer to Bypass, DC Mode: Shutdown >111 to <125% for 1-min; AC mode: Transfer to Bypass, DC Mode: Shutdown >126 to <150% for 30-secs; AC mode: Transfer to Bypass, DC Mode: Shutdown >151% Immediately; AC mode: Transfer to Bypass, DC Mode: Shutdown | | | |
| Protection | Over-current, Short-circuit Protected and Latching Shutdown | | | |
| ECONOMY MODE OPERATION | | | | |
| Switches from Bypass to Inverter | ±15% of the rated input voltage | | | |
| Switches from Inverter to Bypass | Resets 10VAC from switch point | | | |
| Transfer Time | 8 ms Typical | | | |

| BATTERY SYSTEM | | | | |
|---|--|--|----|--|
| Battery Type | Sealed, Non-Spillable, Maintenance Free, Value Regulated Lead Acid | | | |
| Typical Recharge Time | 8-hours to 90% after full load discharge | | | |
| Typical Battery Life | 3-5 years, depending on discharge cycles and ambient temp | | | |
| Battery Module | BM0069 | BM0070 | | BM0071 |
| Runtime: Half Load (minutes) | 10 | 15 | 10 | 10 |
| Runtime: Full Load (minutes) | 2 | 5 | 3 | 3 |
| SURGE PROTECTION AND FILTERING | | | | |
| Surge Energy Rating | 140 Joules | 254 Joules | | |
| Surge Current Capability | 6500 Amps total | | | |
| Surge Response Time | 0 ns (instantaneous) normal mode; <5 ns common mode | | | |
| Surge voltage let-through (as a percentage of an applied +/-2 kV) | <5% | | | |
| 10/100/1000 Base-T surge protection let-through (as a percentage of an applied +/-2 kV 1.2/50 us, 500 a 8/20 uS test) | <5% | | | |
| Telephone line surge protection let-through (as a percentage of an applied +/-2 kV 1.2/50 us, 500a 8/ 20 uS test) | <1% | | | |
| Noise Filter | Normal and Common mode EMI/RFI suppression | | | |
| Audible Noise at 1m (3-ft.) | <55 dBA | | | |
| ENVIRONMENTAL | | | | |
| Operating Temperature (max.) | 0 to 40°C (+32 to +104°F) | | | |
| Storage Temperature | -10 to +50°C (+14 to +122°F) | | | |
| Operating/Storage Humidity | 10% to 90% Non-Condensing | | | |
| Operating Elevation | 0 to 3,000m (0 to +10,000 ft) | | | |
| Storage Elevation | 0 to 15,000m (0 to +50,000 ft) | | | |
| PHYSICAL | | | | |
| Size – Net (L x W x H) (rackmount brackets installed) | 16.0" x 18.9" x 3.5" 407 x 479 x 88 mm | 19.2" x 18.9" x 3.5" 487 x 479 x 88 mm | | 23.7" x 18.9" x 3.5" 602 x 479 x 88 mm |
| Weight – Net | 24.3 lbs. (11.0 Kgs) | 44.1 lbs. (20.0 Kgs) | | 61.1 lbs. (27.7 Kgs) |
| Size – Shipping (L x W x H) | 22.4" x 21.4" x 9.0" 570 x 544 x 228 mm | 25.6" x 21.4" x 9.0" 650 x 544 x 228 mm | | 30.9" x 23.2" x 9.0" 785 x 590 x 228 mm |
| Weight – Shipping | 29.5 lbs. (13.4 Kgs) | 49.6 lbs. (22.5 Kgs) | | 75.8 lbs. (34.4 Kgs) |
| REGULATORY COMPLIANCE | | | | |
| Safety and Approvals | cULus (UL1778 5th Edition & CSA 22.2 no. 107.3-14 / R: 2014), FCC Class A, CE certified, RoHS2 (EU Directive 2011/65/EU & 2015/863/EU) | | | |

7. Warranty

Para Systems, Inc. (Para Systems) warrants this equipment, when properly applied and operated within specified conditions, against faulty materials or workmanship for a period of three years from the date of purchase. For equipment sites within the United States and Canada, this warranty covers depot repair or replacement of defective equipment at the discretion of Para Systems. Depot repair will be from the nearest authorized service center. The customer pays for shipping the product to Para Systems. Para Systems pays ground freight to ship the product back to the customer. Replacement parts and warranty labor will be borne by Para Systems. For equipment located outside of the United States and Canada, Para Systems only covers faulty parts. Para Systems products that are depot repaired or replaced pursuant to this warranty shall only be warranted for the unexpired portion of the warranty applying to the original product. This warranty applies only to the original purchaser who must have properly registered the product within 10 days of purchase.

The warranty shall be void if (a) the equipment is damaged by the customer, is improperly used, is subjected to an adverse operating environment, or is operated outside the limits of its electrical specifications; (b) the equipment is repaired or modified by anyone other than Para Systems or Para Systems approved personnel; or (c) has been used in a manner contrary to the product's User's Manual or other written instructions.

Any technical advice furnished before or after delivery in regard to use or application of Para Systems' equipment is furnished without charge and on the basis that it represents Para Systems' best judgment under the circumstances, but it is used at the recipient's sole risk.

EXCEPT AS PROVIDED HEREIN, PARA SYSTEMS MAKES NO WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Some states do not permit limitation of implied warranties; therefore, the aforesaid limitation(s) may not apply to the purchaser.

EXCEPT AS PROVIDED ABOVE, IN NO EVENT WILL PARA SYSTEMS BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF THIS PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. Specifically, Para Systems is not liable for any costs, such as; labor for on-site installation, on-site maintenance or on-site service, lost profits or revenue, loss of equipment, loss of use of equipment, loss of software, loss of data, cost of substitutes, claims by third parties, or otherwise. The sole and exclusive remedy for breach of any warranty, expressed or implied, concerning Para Systems' products and the only obligation of Para Systems hereunder, shall be depot repair or replacement of defective equipment, components, or parts; or, at Para Systems' option, refund of the purchase price or substitution with an equivalent replacement product. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

No employee, salesman, or agent of Para Systems is authorized to add to or vary the terms of this warranty.

Please go to our website at www.minutemanups.com/warranty/ to fill out the Warranty Registration.

Additional Notices:

NOTICE: This product complies with the rules for Class B device, pursuant to Part 15 of the FCC rules for radio noise emissions from a digital apparatus.

These limits are designed to provide reasonable protection against such interference in a residential installation.

This equipment generates and uses radio frequency and if not installed and used properly, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. If this device does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna.
- Relocate the computer with respect to the receiver.
- Move the computer away from the receiver.
- Plug the computer into a different outlet so that the computer and receiver are on different branch circuits.
- Shielded communications interface cables must be used with this product.

Life Support Policy

Para Systems does not support the use of any of its products in life support applications where the failure or malfunction of the product can be reasonably expected to cause failure to life support devices or to significantly affect their safety or effectiveness. Furthermore, Para Systems does not recommend the use of any of its products in direct patient care.



RoHS2
FCC Class A
cULus (UL1778 5th Edition)
CE Compliant

Para Systems, Inc.
1455 LeMay Drive
Carrollton, TX 75007
800.238.7272

www.minutemanups.com

© 2024 PARA SYSTEMS, INC.

Minuteman Power Technologies, Encompass and SentryHD are owned by Para Systems, Inc. All other trademarks are property of their respective owners.

A1. Declaration of Conformity

Standard(s) to which Conformity is declared: EN62040-2, IEC61000-2-2 IEC61000-4-2, IEC61000-4-3, IEC61000-4-4, IEC61000-4-5, IEC61000-4-6, IEC61000-4-8, UL1778, CSA 22.2 no. 107.3-14, FCC Class A

Manufacturer's Name: Para Systems, Inc. (MINUTEMAN UPS)

Manufacturer's Address: 1455 LeMay Drive Carrollton, Texas 75007 USA

Type of Equipment: Uninterruptible Power Supplies (UPS)

Model No: EC1000RTXL2U (Y), EC1500RTXL2U (Y), EC2000RTXL2U (Y), EC3000RTXL2U (Y)

Year of Manufacture: Beginning November 2024

I hereby declare that the equipment specified above conforms to the above Directive(s).

Kevin Canole
(Name)

Director of Business Development
(Position)

Place: Carrollton, Texas, USA

Date: September 10, 2024

